



Installation and Operation Manual

Blackmagic URSA & URSA Mini

August 2016 4.0 Beta Edition



Welcome

Thank you for purchasing Blackmagic URSA!

Since we released our first digital film camera a few years ago we have been privileged to have received some of the best guidance and feedback we have ever had for a new product! We all grew up admiring the work of the world's leading cinematographers and DOPs and it's been an honor to spend hours in conversations with these legendary experts on the features we need to add to our cameras. Of course, everyone we speak to has good ideas also!

All those exciting conversations have been put into the new camera you have just purchased. We think it takes care of the needs of large film crews as well as having all the features you need if you're operating in single person shooting. Blackmagic URSA's unique design allows you to replace the sensor, adding new imaging capability to it over time. What this also means is we could put more value into the screens, processing and cooling systems your camera has, because it does not need to be thrown away every time we develop a new sensor for it!

With URSA, you get a large 10 inch on set monitor built in, dual CFast recorders that alternate recording so you can keep recording for as long as you want, as well as scopes, super strong metal design and much more.

Our new URSA Mini offers even more for single shooters and studio users, all in a super small, light and sturdy metal chassis.

URSA Mini's beautiful user interface is designed for single operators who need quick, easy access to all of their camera's functions, while comprehensive ATEM switcher integration makes the amazing image quality of this Super 35mm digital film camera available to live production studios.

Best of all, URSA Mini is available with the impressive 4K URSA sensor or 4.6K sensor with even greater dynamic range! We also listened to single operators when we developed our new URSA Viewfinder which is perfect when you need extra precision and for shooting on the shoulder.

We hope you use your URSA or URSA Mini to produce some of the world's most exciting films and television programming, music videos and commercials! We are extremely excited to see what creative work you produce and to get your feedback on new features you would like to see us add to URSA!

A stylized, handwritten signature in black ink that reads "Grant Petty". The signature is fluid and cursive, with a long, sweeping underline.

Grant Petty

CEO Blackmagic Design

Contents

Blackmagic URSA and URSA Mini

Understanding the differences between Blackmagic URSA and URSA Mini	5	Camera Assist and Audio Station Connectors	26
Blackmagic URSA	5	Front Panel and Turret	29
Blackmagic URSA Mini	6	Rear Panel	29
Getting Started	7	Top Panel and Underside	30
Attaching the Handle	7	Touchscreens	30
Attaching a Lens	8	Touchscreen Features	31
Turning Your Camera On	9	Blackmagic URSA Settings	33
CFast Cards	10	Dashboard	33
Inserting a CFast Card	10	Camera Settings	33
Choosing a CFast 2.0 Card	11	Audio Settings	35
Preparing a CFast Card for Recording	12	Recording Settings	36
Preparing CFast cards on Blackmagic URSA	12	File Naming Convention	40
Preparing CFast cards on Blackmagic URSA Mini	13	Display Settings	40
Preparing CFast Cards on a Mac OS X Computer	13	Blackmagic URSA Mini Overview and Connectors	44
Preparing CFast Cards on a Windows Computer	14	Front Panel	44
Recording	15	Left Side	45
Recording Clips	15	Right Side	45
Record Duration Table	18	Rear Panel	46
Playback	21	Top Panel	47
Playing Back Clips	21	Underside	48
Blackmagic URSA Overview and Connectors	22	Camera Buttons and Touchscreen	48
DOP Station	23	Control Buttons	49
10" LCD Viewfinder	23	Side Handle	51
10" LCD Viewfinder Buttons	23	Touchscreen	51
DOP Station Buttons and Touchscreen	24	Touchscreen Features	51
Memory Card Slots	25	URSA Mini Settings	69
Camera Assist and Audio Station	25	Record Settings	70
		File Naming Convention	74
		Monitor Settings	75
		Audio Settings	83
		Setup Settings	85
		Presets	91
		LUTS	93


Contents

Blackmagic URSA and URSA Mini


Entering Metadata	95	Using Plugins	125
The Slate	95	Mastering your Edit	126
Blackmagic URSA	95		
Camera Video Output	102	Controlling URSA Mini with ATEM Camera Control	127
HD Monitoring Output	102	Using Camera Control	128
12G-SDI Output	102	Zoom Control	130
Blackmagic URSA Viewfinder	103	DaVinci Resolve Primary Color Corrector	134
Mounting Batteries	109	Blackmagic Camera Setup Utility	137
Mounting V-mount or Gold Mount Batteries	110	Post Production Workflow	138
Using your own Battery Plate	110	Working with Files from CFast 2.0 Cards	138
Using DaVinci Resolve	112	Working with 3rd Party Software	138
Importing your Clips	113	Using Final Cut Pro X	139
Working with RAW files	114	Using Avid Media Composer	139
Editing your Clips	115	Using Adobe Premiere Pro CC	140
Trimming Clips	117	Using Autodesk Smoke 2013	141
Mapping Keyboard Shortcuts	117	URSA Mini Shoulder Mount Kit	142
Adding Transitions	118	Shimming the PL Mount	146
Adding Titles	119	URSA Mini B4 Mount	148
Adding Audio Tracks	120	URSA Mini B4 Lens	150
Color Correcting your Clips	120	Upgrading the Sensor Turret on the URSA Model	151
Using Scopes	121	Help	155
Secondary Color Correction	123	Warranty	156
Qualifying a Color	123		
Adding a Power Window	124		
Tracking a Window	125		

Understanding the differences between Blackmagic URSA and URSA Mini

You'll notice while reading this manual that the design and user interfaces of Blackmagic URSA and URSA Mini are quite different. These cameras share many of the same features and both produce incredible, wide dynamic range images, but are designed and operated differently for different purposes.

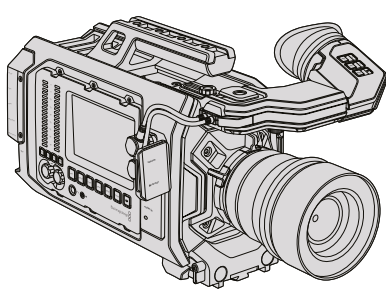

Blackmagic URSA PL model with Blackmagic URSA Viewfinder.

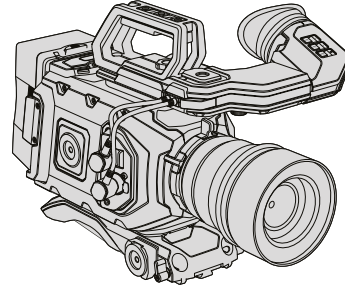

Blackmagic URSA Mini PL model with Blackmagic URSA Viewfinder.


Blackmagic URSA

Blackmagic URSA is designed for single or multi user operation. While it is very easy to use Blackmagic URSA as a single operator, your URSA features a dedicated DOP station on one side of the camera chassis and camera assist and audio stations on the other to cater for shoots with larger crews. All of URSA's setup menus are available simultaneously from the touchscreen on either side of the chassis, leaving the large 10 inch viewfinder free for composition and playback.

Blackmagic URSA's touchscreen menus are designed for ease of use and feature a simple scrolling interface with features categorised by the functions that different stations might use.



Blackmagic URSA's 10 inch viewfinder offers a large, clear image preview. Status text is minimal as additional information is easily available at the DOP and camera assist and audio stations.

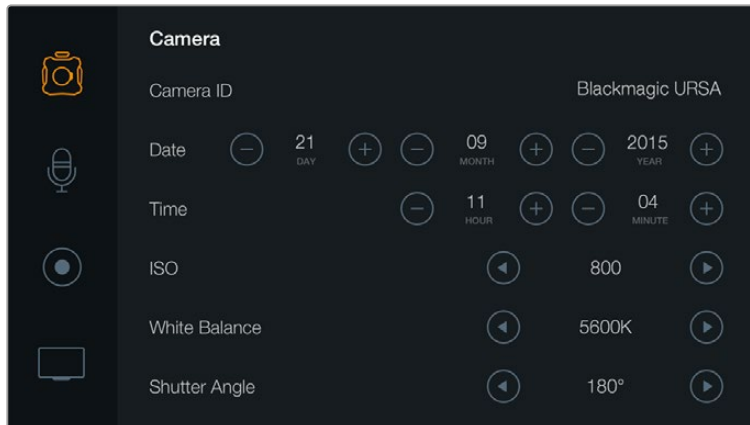


Blackmagic URSA's user interface is clean and simple, with features divided by functions that each station of the camera might use.

Blackmagic URSA Mini

URSA Mini is designed for single user operation. Your URSA Mini has a single 5 inch LCD touchscreen, and all of your camera's functions are accessible there. We've designed an amazing touch and gesture based interface specifically for fast and intuitive operation without the necessity for multiple user stations.



Blackmagic URSA Mini's LCD touchscreen features comprehensive status text and a touch and gesture based interface that makes adjusting your camera settings quick and easy.

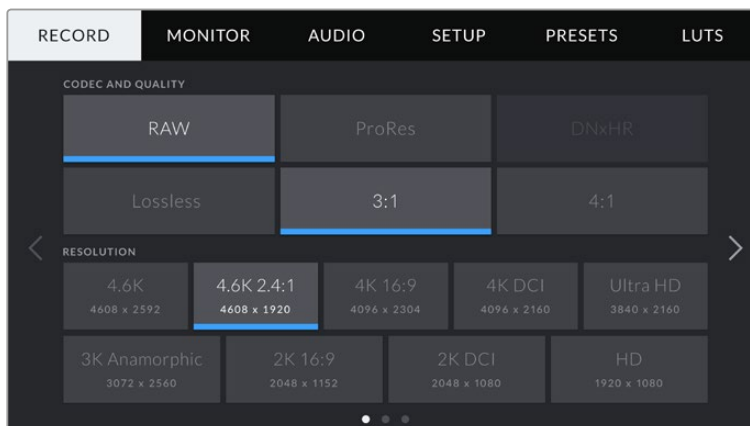


Blackmagic URSA Mini's menu are designed to give a single operator quick access to all of the camera's functions.

Getting Started

Getting started with your Blackmagic URSA or URSA Mini is as simple as attaching the handle, mounting a lens, and powering your camera.

Attaching the Handle


To attach Blackmagic URSA's handle to the camera body, simply slide the base of the handle along Blackmagic URSA's handle ridges and screw the handle to one of the 3/8" mounting points. Choose a mounting point that provides the best weight balance for your camera.

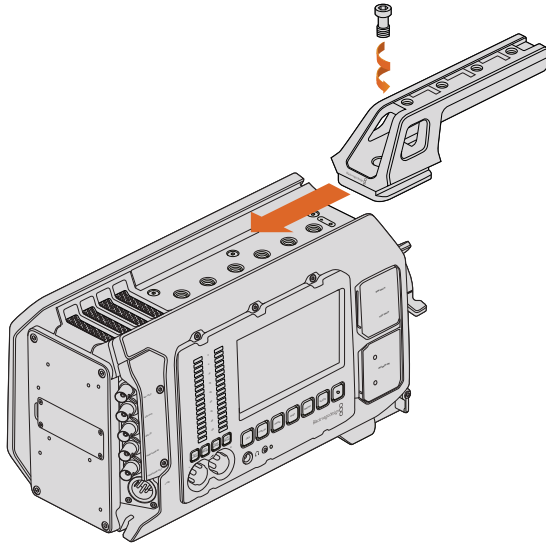

Attaching the top handle to Blackmagic URSA.

Attaching URSA Mini's side handle is easy.

- 1 Open the plastic cap on the right side of the handle to access the tightening screw.
- 2 Align the handle with URSA Mini's side rosette mount. Fasten the handle to suit your desired position and tighten the side handle screw with a large flat head screw driver, or by twisting the D ring. Close the plastic cap.
- 3 URSA Mini is shipped with a short LANC cable so you can control your camera using the side handle buttons. Connect the LANC cable from the side handle LANC output to the camera's LANC input.

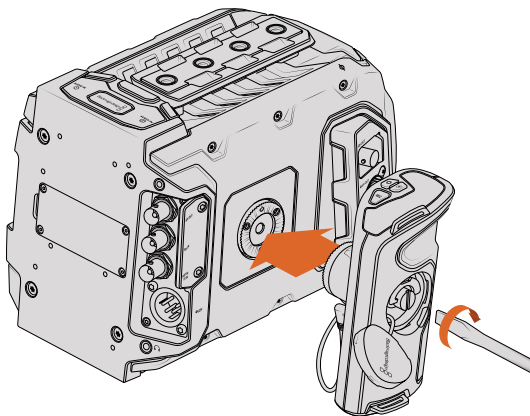


Attaching the side handle to Blackmagic URSA Mini.

Attaching a Lens

To remove the protective dust cap from the EF lens mount, hold down the locking button and rotate the cap counterclockwise until it is released. For the PL mount, rotate the PL locking ring counterclockwise.

To attach an EF mount lens:


- 1 Align the dot on your lens with the dot on the camera mount. Many lenses have a visual indicator, for example a blue, red or white dot.
- 2 Twist the lens clockwise until it locks into place.
- 3 To remove the lens, hold down the locking button, rotate the lens counterclockwise until its dot or indicator reaches the 12 o'clock position, and gently remove.

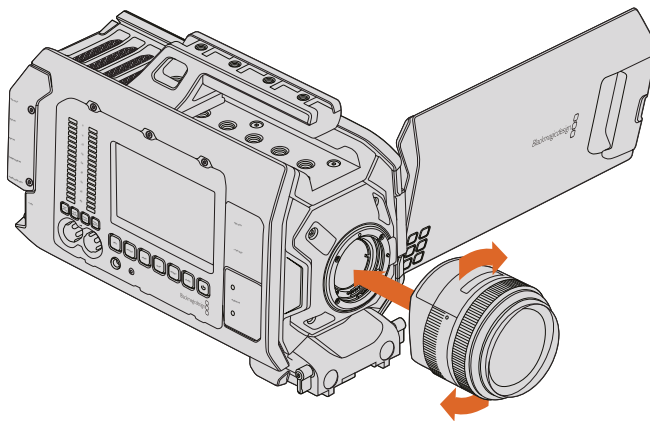

Attaching and removing an EF mount lens on Blackmagic URSA EF.

To attach a PL mount lens:

- 1 Open your camera's PL locking ring by rotating it counterclockwise until it stops.
- 2 Align one of the lens' four flange notches with the locating pin on the camera mount. Be sure to align the lens for easy viewing of the lens marks.
- 3 Tighten the PL locking ring by rotating it clockwise. If attaching a PL lens with a servo unit to URSA Mini, you can also connect the 12 pin broadcast connector for servo control.
- 4 To remove the lens, rotate the locking ring counterclockwise until it stops, then gently remove the lens.

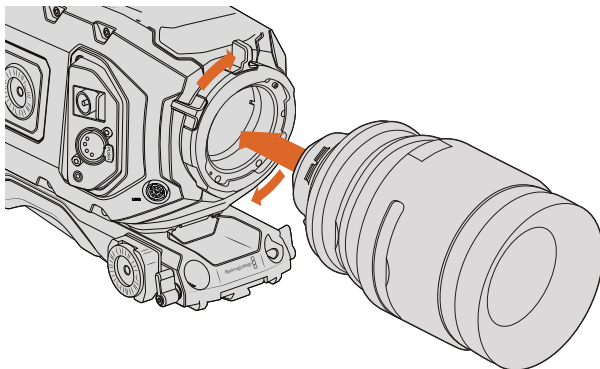

Attaching and removing a PL lens on Blackmagic URSA Mini PL.

TIP Ursa Mini PL supports PL 35mm lenses with servo handgrips, such as Fujinon Cabrio lenses, Canon CN7x17KAS S and Canon CN20x50 CINE-SERVO 50-1000mm T5.0-T8.9 lenses.


NOTE When no lens is attached to the camera, the glass filter covering the sensor is exposed to dust and other debris so you should keep the dust cap on whenever possible.

Turning Your Camera On

Now that you've attached a lens, you'll need to supply power. The quickest way to power your camera is to connect external power using the supplied 12V AC adapter.

To plug in external power:

- 1 Connect the 12V AC adapter plug to your mains power socket.
- 2 Connect the 12V AC adapter's 4 pin XLR connector to the 12-20V power connector on the camera.

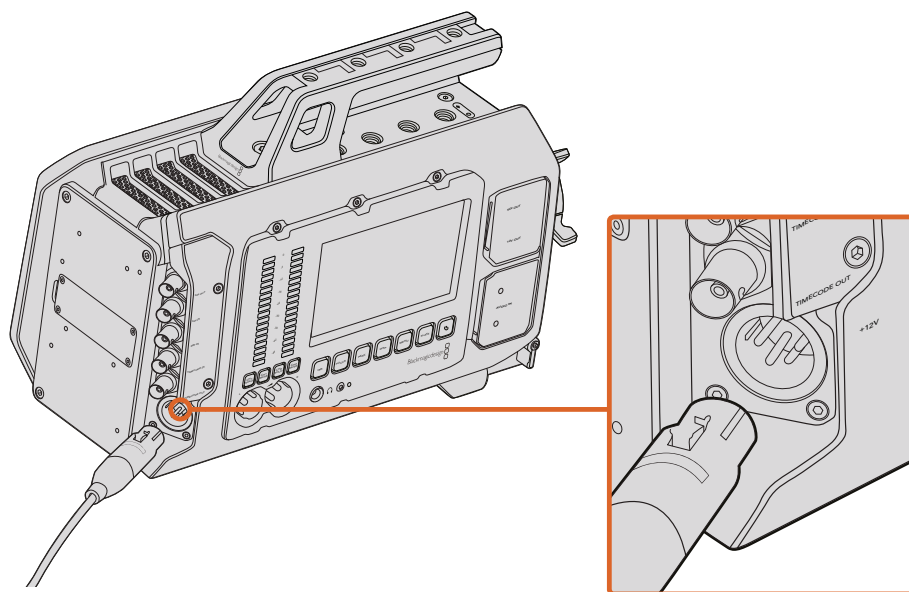


Use the supplied 12V AC adapter to power your Blackmagic URSA or URSA Mini.

If you have both external and battery power connected, only external power will be used. If you remove external power while a charged battery is connected, your camera will switch to battery power without interruption.

You can use industry standard third party external batteries such as V-mount or gold mount batteries with your URSA. Refer to the 'Mounting Batteries' section for more information about mounting the different types of battery plates to support different batteries.

To turn your camera on:

- 1 Press and release the 'power' button. On Blackmagic URSA the power button is located on the DOP or camera assist and audio stations. On Blackmagic URSA Mini, the power button is located on the control panel behind the fold out LCD. Simply open the LCD to access the control panel.
- 2 Press and hold the 'power' button to turn your camera off. You are now ready to insert CFast 2.0 cards and start recording!

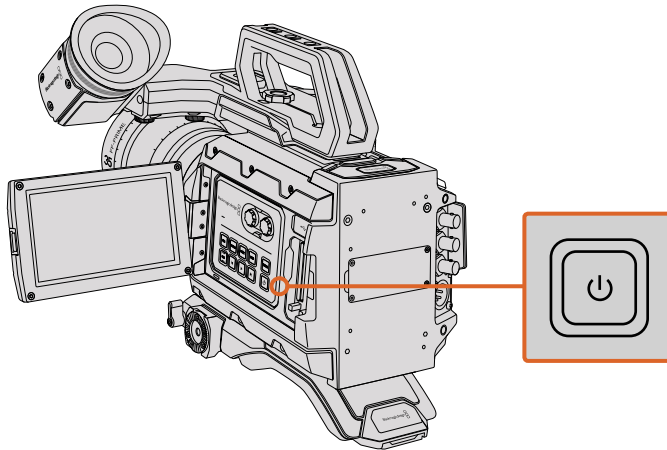

To turn on your URSA Mini, open the fold out LCD touchscreen, then press and release the power button on the control panel. Press and hold to turn off.

TIP When turning the camera on, make sure you promptly press and release the button. When turning off, press and hold.

CFast Cards

Blackmagic URSA and URSA Mini use CFast 2.0 cards to record 4.6K, 4K, Ultra HD or HD video. CFast 2.0 cards are capable of very high data rates, so are perfect for recording HD and 4K video at high frame rates. Refer to the record duration table in the 'recording' section for details on the maximum frame rates that can be recorded in each format.

TIP While CFast 2.0 cards are generally fast, some cards have slower write speeds compared to read speeds, and maximum data rates can differ between models. To ensure reliable recording in your chosen frame rates, use only the recommended cards listed in this section.


Inserting a CFast Card

To insert a CFast card.


- 1 Open the fold out monitor to access the CFast slots.
- 2 With the label on the CFast card facing the touchscreen, insert the card until you feel it lock into place. Push on the CFast card ejector button to eject the card.

- 3 On URSA, the status strip will display a moving dot while the camera checks the CFast card and then it will say 'ready.' The touchscreen media timeline will display a time remaining indicator.

On URSA Mini, the CFast indicator at the bottom of the LCD touchscreen will show the name and time remaining of detected cards.

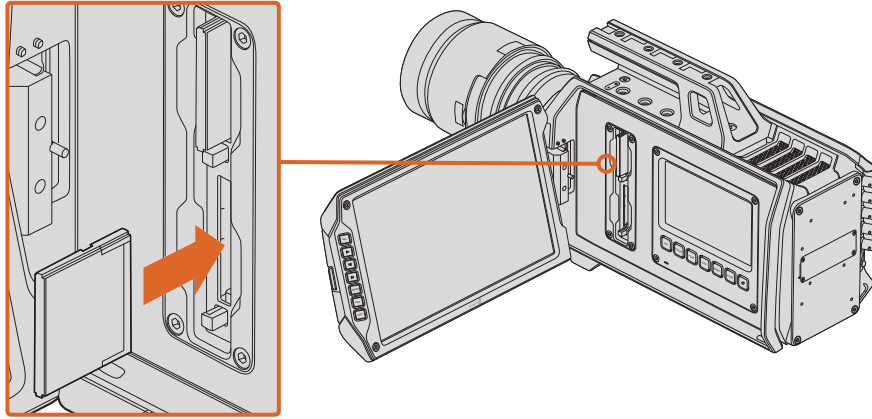

Inserting a CFast 2.0 card into one of Blackmagic URSA's two CFast slots.

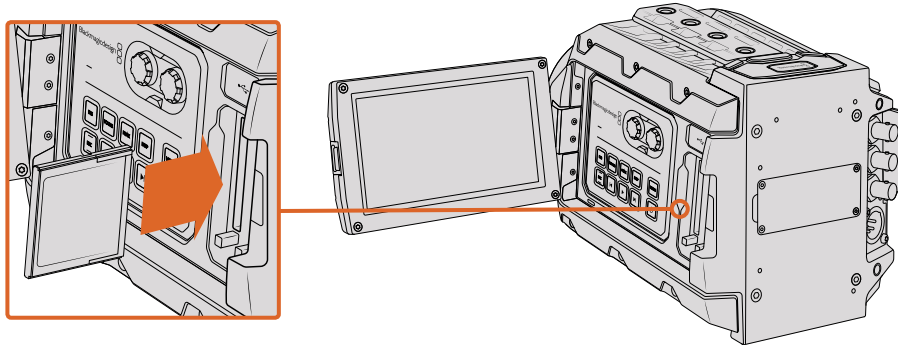

Blackmagic URSA Mini has two CFast slots for continuous recording.

Choosing a CFast 2.0 Card

When working with high data rate video it's important to carefully check the CFast card you would like to use. This is because CFast 2.0 cards have different read/write speeds. Some cards can record sustained RAW video, and some are suited to compressed recording using ProRes and compressed RAW formats.

Below is a list of recommended CFast 2.0 cards for recording compressed formats.

For supported frame rates, refer to the Blackmagic Design support center at www.blackmagicdesign.com/support.

- Lexar Professional 3400x 32GB, 64GB, 128GB, 256GB plus 3500x 128GB and 256GB
- Wise CFast 2.0 3400x 128GB, 256GB
- Transcend CFX650 128GB, 256GB

We recommend the following CFast 2.0 cards for recording RAW video up to 30 fps.

- Lexar Professional 3400x 64GB, 128GB, 256GB plus 3500x 128GB and 256GB
- Wise CFast 2.0 3400x 128GB, 256GB
- Transcend CFX650 128GB, 256GB

Preparing a CFast Card for Recording

You can format your CFast cards using the ‘format card’ feature on Blackmagic URSA’s touchscreen dashboard or URSA Mini’s storage and formatting screen, or via a Mac or Windows computer. We recommend formatting your CFast 2.0 cards using URSA or URSA Mini for best performance.


HFS+ is also known as Mac OS extended and is the recommended format as it supports “journaling”. Data on journaled media is more likely to be recovered in the rare event that your CFast card becomes corrupted. HFS+ is natively supported by Mac OS X.

ExFAT is supported natively by Mac OS X and Windows without needing to purchase any additional software. However, exFAT does not support journaling.

Preparing CFast cards on Blackmagic URSA

To format your CFast card using the dashboard ‘format card’ feature:

- 1 Tap the ‘display’ button marked DISP on URSA’s control panel to cycle between the touchscreen displays until the dashboard appears. On URSA Mini, tap the ‘menu’ button to display the dashboard.
- 2 Tap on the ‘format card’ icon with your finger.

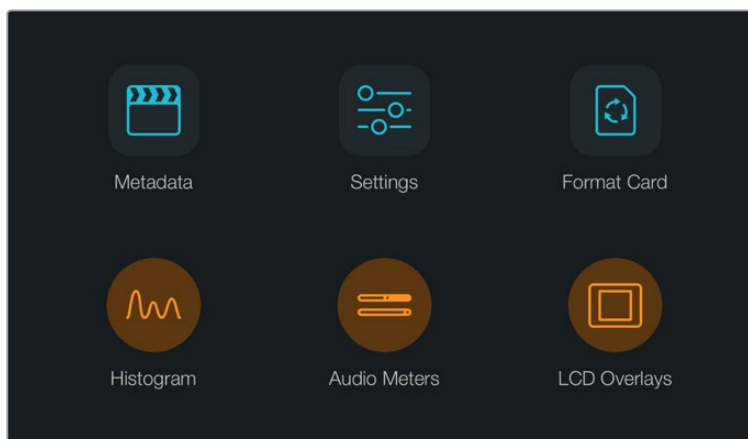

Select the ‘format card’ icon on the Blackmagic URSA dashboard to format your CFast card.

- 3 Tap on the CFast slot you want to use, then tap ‘continue’ to proceed, or ‘cancel’ to select a different slot.
- 4 Choose your format by tapping the HFS+ or exFAT icon.
- 5 A warning will appear asking you to confirm the format. Tap ‘yes, format my card’ to continue, or ‘cancel’ to cancel the format.
- 6 A progress bar shows you the status of the format. ‘Complete’ will appear when the format is done.
- 7 Tap the ‘done’ icon to return to the dashboard.
- 8 Press the ‘display’ button to exit the dashboard.

Preparing CFast cards on Blackmagic URSA Mini

- 1 Tap either CFast indicator at the bottom of the LCD touchscreen to enter the storage manager.
- 2 Tap 'Format Card 1' or 'Format Card 2' to format the CFast card in slot 1 or 2, respectively.
- 3 Choose OS X Extended or exFAT format and tap the 'format card' button.
- 4 You will be asked to confirm your selection. Tap 'format card' again to continue or 'cancel' to cancel the format.



Use your URSA Mini's storage manager to format your camera's CFast cards.


- 5 A progress bar will show you the status of the format. You will be notified when the format is complete.
- 6 Tap 'ok' to return to the storage manager.
- 7 Tap 'exit' to leave the storage manager.

NOTE When formatting CFast cards using the storage manager, your URSA Mini will use the Camera ID and reel number in the slate to name the card. See the 'entering metadata' section of this manual for more information.

Preparing CFast Cards on a Mac OS X Computer

Use the Disk Utility application included with Mac OS X to format your card in the HFS+ or exFAT formats. Remember to back up anything important from your CFast card as all data will be lost when it is formatted.

- 1 Connect the CFast card to your computer using a CFast 2.0 reader/writer or CFast drive, and dismiss any message offering to use your card for Time Machine backups.
- 2 Go to applications/utilities and launch Disk Utility.
- 3 Click on the disk icon of your CFast card and then click the 'erase' tab.
- 4 Set the 'format' to 'Mac OS extended (journaled)' or 'exFAT'.
- 5 Type a 'name' for the new volume and then click 'erase'. Your CFast card will quickly be formatted and made ready for use.

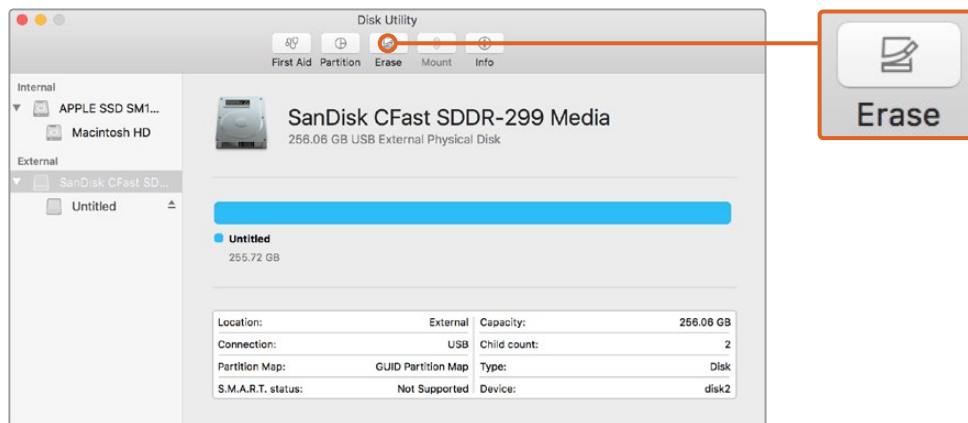


Use Disk Utility on Mac OS X to erase your CFast card in the Mac OS extended (journaled) or exFAT format.

Preparing CFast Cards on a Windows Computer

The 'format' dialog box can format a drive in the exFAT format on a Windows PC. Remember to back up anything important from your CFast card as all data will be lost when it is formatted.

- 1 Connect the CFast card to your computer using a CFast 2.0 reader/writer or CFast drive.
- 2 Open the 'start' menu or 'start' screen and choose 'computer'. Right-click on your CFast card.
- 3 From the contextual menu, choose 'format'.
- 4 Set the file system to "exFAT" and the allocation unit size to 128 kilobytes.
- 5 Type a volume label, select 'quick format' and click 'start'.
- 6 Your CFast card will quickly be formatted and made ready for use.

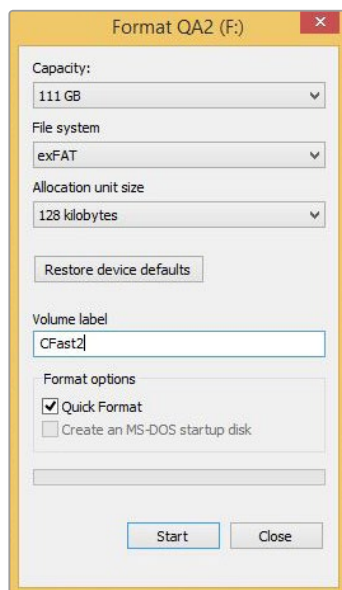


Use the 'format' dialog box feature in Windows to format your CFast card in the exFAT format.

NOTE If you are dropping frames, check that your CFast card is on our list of recommended media for the codec and frame size you are using. For lower data rates try lowering your frame rate, frame size, or try a compressed codec such as ProRes. Check the Blackmagic Design website for the latest information at www.blackmagicdesign.com

Recording


Recording Clips

Press the 'record' button marked REC on Blackmagic URSA's monitor controls. A 'record' button is also on the outside of the monitor when using Blackmagic URSA Viewfinder with URSA's fold out monitor closed.

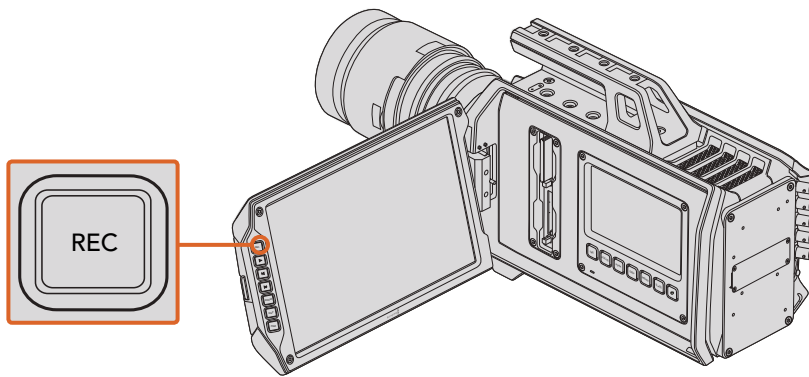

To record a clip, press the 'record' button marked REC on the fold out monitor.

On Blackmagic URSA Mini you can start recording by pressing the red 'record' button on the inside control panel, the touchscreen, or on the side handle. A 'record' button is also on the outside of the fold out monitor. Press the 'record' button again to stop recording.

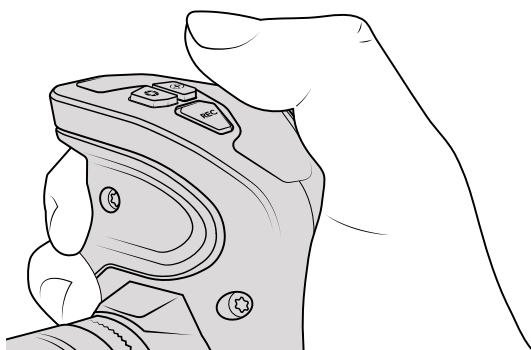

You can also record clips by pressing the 'record' button marked REC on URSA Mini's side handle.

TIP Blackmagic URSA and URSA Mini has a LANC input so you can easily attach an external LANC controller and trigger the record externally. For example, you may want to attach a LANC controller to your tripod so you can trigger the recording without taking your hands off the focus ring and tripod handle.

Choosing the Codec, Resolution and Sensor Area

Your Blackmagic URSA or URSA Mini records using CinemaDNG RAW codecs with a choice of lossless RAW or RAW compression, as well as Apple ProRes compressed codecs. Sensor frame rate options will vary depending on the codec and resolution you choose.

It's worth noting that clips recorded using RAW 4:1 and RAW 3:1 compression are compatible with DaVinci Resolve, but may be incompatible with other software applications. If you plan on using other editing software, you should check its compatibility with compressed RAW formats before filming.

Maximum Sensor Frame Rates

The table below contains available codecs, resolutions and their maximum sensor frame rates.

Codec	Resolution	Maximum Frame Rate URSA	Maximum Frame Rate URSA Mini 4K	Maximum Frame Rate URSA Mini 4.6K
4.6K RAW	4608 x 2592			60 (dual card mode)
4.6K RAW 3:1				60
4.6K RAW 4:1				60
4K RAW	4000 x 2160 (full sensor mode 4K models) 4096 x 2160 (windowed sensor mode 4.6K models)	60 (dual card mode)	60 (dual card mode)	60 (dual card mode)
4K RAW 3:1		120	60	60
4K RAW 4:1				60
3K Anamorphic RAW	3072 x 2560 Ana			60 (dual card mode)
3K Anamorphic RAW 3:1	3072 x 2560 Ana			60
3K Anamorphic RAW 4:1	3072 x 2560 Ana			60
2K RAW	2048 x 1080 (windowed sensor mode)			120
2K RAW 3:1				120
2K RAW 4:1				120
ProRes 444 XQ	3840 x 2160	60	40	40 (full frame and windowed mode)
ProRes 444		60	40	40 (full frame and windowed mode)
ProRes HQ		80	60	60
ProRes 422		120	60	60
ProRes LT		120	60	60
ProRes Proxy		120	60	60
ProRes 444 XQ	1920 x 1080 (full sensor area)	120	60	60
ProRes 444		120	60	60
ProRes HQ		120	60	60
ProRes 422		120	60	60
ProRes LT		120	60	60
ProRes Proxy		120	60	60

Codec	Resolution	Maximum Frame Rate URSA	Maximum Frame Rate URSA Mini 4K	Maximum Frame Rate URSA Mini 4.6K
ProRes 444 XQ	1920 x 1080 (windowed sensor area)	120	80	80
ProRes 444		120	80	80
ProRes HQ		150	120	120
ProRes 422		150	120	120
ProRes LT		150	120	120
ProRes Proxy		150	120	120

To select your desired codec and resolution on Blackmagic URSA.

- 1 Press the 'menu' button on the control panel.
- 2 Navigate to the 'recording' menu and select your desired 'codec' by tapping the codec selection arrows on the touchscreen.
- 3 Tap the relevant selection arrows for your desired resolution.
- 4 If you want to record in HD using a windowed sensor area, so you can take advantage of the higher frame rates, tap on the selection arrows to select 'window'. If you want to record using the full sensor area, select 'full'.
- 5 Press the 'menu' button to exit.

To select your desired codec and resolution on Blackmagic URSA Mini.

- 1 Press the 'menu' button on the control panel.
- 2 Navigate to the first page of the 'record' tab.
- 3 Tap your desired combination of codec, quality, and resolution.
- 4 If you want to record using a windowed sensor area, navigate to page 2 of the 'record' menu and enable 'window sensor.' To record with the full sensor, set this to 'off.'
- 5 Press 'menu' to exit.

Recording Formats and Project Frame Rates

After setting your codec and resolution, you should set your 'project' and 'sensor' frame rates. Refer to the 'recording settings' section in this manual for more information about frame rates. The project framerates available for all URSA and URSA Mini cameras are as follows:

23.98, 24, 25, 29.97, 30, 50, 59.94, and 60 frames per second.

The only exception is URSA Mini, which offers project frame rates of 23.98, 24, 25, and 30 when using ProRes 444 XQ or ProRes 444 at Ultra HD resolution. For uncompressed 4.6K and 4K RAW, framerates above 30 fps use dual card mode on all URSA and URSA Mini cameras.

TIP Sometimes in extremely cold weather conditions, for example 0-5° Celsius and 32-41° Fahrenheit, your URSA Mini 4K may take up to thirty seconds to reach optimal running temperature. During this time you can record if you need to, but we recommend waiting for your camera to warm and stabilize. When optimal running temperature is achieved, your camera will recalibrate to compensate for the sensor's temperature change and you may notice a single white flash frame. This will only occur while not recording and will improve your results when shooting in cold climates.

Record Duration Table

Tables are provided showing approximate record duration in minutes and seconds compared to format, project frame rate and media size. The maximum recording time for a CFast card will vary depending on the data size of the card and the recording format and frame rate you choose. For example, the storage rate for Apple ProRes 422 HQ at 3840 x 2160 is approximately 880 Mbps. At 24 frames per second, you can record approximately 47 minutes of video on a 256GB CFast 2.0 card. At the same settings you can record approximately 23 minutes of video on a 128GB CFast 2.0 card, which is approximately half the record duration of the 256GB CFast 2.0 card.

It should be noted that record duration on CFast 2.0 cards can also vary slightly between cards from different manufacturers. It can also vary depending on whether the CFast card is formatted as ExFat or OS X Extended.

Simple scenes containing less detail tend to require less data than more dense compositions. The values in these tables assume shots with a high complexity, which means you may get slightly longer recording times depending on the nature of your shoot.

HD										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
256GB	23.98	75 mins	142 mins	175 mins	84 mins	127 mins	189 mins	283 mins	403 mins	877 mins
	24	75 mins	142 mins	175 mins	84 mins	127 mins	189 mins	283 mins	403 mins	877 mins
	25	72 mins	137 mins	168 mins	81 mins	122 mins	182 mins	271 mins	387 mins	843 mins
	30	60 mins	114 mins	140 mins	67 mins	101 mins	152 mins	227 mins	324 mins	710 mins
	50	36 mins	68 mins	84 mins	40 mins	61 mins	91 mins	137 mins	196 mins	434 mins
	60	30 mins	57 mins	70 mins	33 mins	50 mins	76 mins	114 mins	163 mins	363 mins

2K DCI										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
256GB	23.98	70 mins	133 mins	163 mins	74 mins	111 mins	166 mins	248 mins	353 mins	778 mins
	24	70 mins	133 mins	163 mins	74 mins	111 mins	166 mins	248 mins	353 mins	778 mins
	25	67 mins	127 mins	157 mins	71 mins	106 mins	159 mins	238 mins	339 mins	748 mins
	30	56 mins	106 mins	131 mins	59 mins	89 mins	133 mins	199 mins	283 mins	629 mins
	50	33 mins	64 mins	79 mins	35 mins	53 mins	80 mins	120 mins	171 mins	384 mins
	60	28 mins	53 mins	65 mins	29 mins	44 mins	66 mins	100 mins	143 mins	321 mins

2K 16:9										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
256GB	23.98	66 mins	125 mins	155 mins	74 mins	111 mins	166 mins	248 mins	353 mins	778 mins
	24	66 mins	125 mins	155 mins	74 mins	111 mins	166 mins	248 mins	353 mins	778 mins
	25	64 mins	120 mins	148 mins	71 mins	106 mins	159 mins	238 mins	339 mins	748 mins
	30	53 mins	100 mins	124 mins	59 mins	89 mins	133 mins	199 mins	283 mins	629 mins
	50	32 mins	60 mins	74 mins	35 mins	53 mins	80 mins	120 mins	171 mins	384 mins
	60	26 mins	50 mins	62 mins	29 mins	44 mins	66 mins	100 mins	143 mins	321 mins

3K Anamorphic										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
	23.98	20 mins	39 mins	48 mins	22 mins	33 mins	50 mins	75 mins	107 mins	242 mins
	24	20 mins	39 mins	48 mins	22 mins	33 mins	50 mins	75 mins	107 mins	242 mins
	25	19 mins	37 mins	46 mins	21 mins	32 mins	48 mins	72 mins	103 mins	232 mins
	30	16 mins	31 mins	38 mins	17 mins	26 mins	40 mins	60 mins	85 mins	194 mins
	50	9 mins	18 mins	23 mins	—	—	24 mins	36 mins	51 mins	117 mins
	60	8 mins	15 mins	19 mins	—	—	20 mins	30 mins	43 mins	97 mins

ULTRA HD										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
256GB	23.98	19 mins	37 mins	45 mins	21 mins	31 mins	47 mins	71 mins	101 mins	230 mins
	24	19 mins	37 mins	45 mins	21 mins	31 mins	47 mins	71 mins	101 mins	230 mins
	25	18 mins	35 mins	43 mins	20 mins	30 mins	45 mins	68 mins	97 mins	221 mins
	30	15 mins	29 mins	36 mins	16 mins	25 mins	38 mins	57 mins	81 mins	184 mins
	50	9 mins	17 mins	21 mins	—	—	22 mins	34 mins	48 mins	111 mins
	60	7 mins	14 mins	18 mins	—	—	18 mins	28 mins	40 mins	92 mins

4K DCI										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
	23.98	18 mins	34 mins	43 mins	19 mins	29 mins	44 mins	66 mins	95 mins	216 mins
	24	18 mins	34 mins	43 mins	19 mins	29 mins	44 mins	66 mins	95 mins	216 mins
	25	17 mins	33 mins	41 mins	18 mins	28 mins	42 mins	64 mins	91 mins	207 mins
	30	14 mins	27 mins	34 mins	15 mins	23 mins	35 mins	53 mins	76 mins	173 mins
	50	8 mins	16 mins	20 mins	—	—	21 mins	32 mins	45 mins	104 mins
	60	7 mins	13 mins	17 mins	—	—	—	—	—	—

4K 16:9										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
	23.98	17 mins	32 mins	40 mins	18 mins	27 mins	41 mins	62 mins	89 mins	202 mins
	24	17 mins	32 mins	40 mins	18 mins	27 mins	41 mins	62 mins	89 mins	202 mins
	25	16 mins	31 mins	38 mins	17 mins	26 mins	40 mins	60 mins	85 mins	194 mins
	30	13 mins	26 mins	32 mins	14 mins	22 mins	33 mins	50 mins	71 mins	162 mins
	50	8 mins	15 mins	19 mins	—	—	20 mins	30 mins	42 mins	97 mins
	60	6 mins	13 mins	16 mins	—	—	—	—	—	—

4.6K 2.4:1										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
	23.98	18 mins	34 mins	42 mins	19 mins	29 mins	44 mins	66 mins	95 mins	216 mins
	24	18 mins	34 mins	42 mins	19 mins	29 mins	44 mins	66 mins	95 mins	216 mins
	25	17 mins	33 mins	41 mins	18 mins	28 mins	42 mins	64 mins	91 mins	207 mins
	30	14 mins	27 mins	34 mins	15 mins	23 mins	35 mins	53 mins	76 mins	173 mins
	50	8 mins	16 mins	20 mins	—	—	21 mins	32 mins	45 mins	104 mins
	60	7 mins	13 mins	17 mins	—	—	—	—	—	—

4.6K										
CFast Card	Frame Rate	CinemaDNG RAW	CinemaDNG RAW 3:1	CinemaDNG RAW 4:1	ProRes 444 XQ	ProRes 444	ProRes 422 HQ	ProRes 422	ProRes 422 LT	ProRes 422 Proxy
		Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration	Duration
	23.98	13 mins	25 mins	31 mins	14 mins	21 mins	33 mins	49 mins	70 mins	160 mins
	24	13 mins	25 mins	31 mins	14 mins	21 mins	33 mins	49 mins	70 mins	160 mins
	25	13 mins	24 mins	30 mins	14 mins	21 mins	31 mins	47 mins	66 mins	154 mins
	30	10 mins	20 mins	25 mins	–	17 mins	26 mins	39 mins	56 mins	128 mins
	50	6 mins	12 mins	15 mins	–	–	–	–	–	–
	60	5 mins	10 mins	12 mins	–	–	–	–	–	–

Trigger Record

Your URSA Mini automatically sends a signal via the SDI outputs that will trigger recording when connected to equipment that supports the SDI trigger record feature, such as Blackmagic Video Assist. This means when you press record on your camera, your external SDI equipment will also start recording, then will stop recording when you press record again.

You will also need to set your equipment to enable SDI trigger recording to make sure it responds to the trigger signal from your URSA Mini. If your SDI equipment supports SDI trigger recording, it can usually be enabled using your SDI equipment's settings menu.

Playback

Playing Back Clips

Once you have recorded your video, you can use the transport control buttons to play back your video.


Press the 'play' button once for instant playback and you'll see your recorded video on Blackmagic URSA's fold out monitor or URSA Mini's LCD touchscreen. Your clips can also be viewed on Blackmagic URSA's touchscreens and any display connected to your URSA or URSA Mini's SDI outputs.

NOTE Blackmagic URSA will only play back clips with the same codec, frame size and project frame rate as the camera is currently set to. Blackmagic URSA Mini will play back clips of different quality settings as long as they are in the same codec, frame rate and resolution.


The controls of your camera work just like a CD player, so pressing the 'forward skip' button will skip to the start of the next clip. Press the 'reverse skip' button once to go to the start of the current clip or press twice to skip back to the start of the previous clip. Hold the 'forward' or 'reverse skip' button to play or reverse at 2x speed. Once shuttling forward or backwards, press the 'fast forward' or 'reverse skip' buttons twice for x4, three times for x8 and four times for x16.

On Blackmagic URSA EF, URSA Mini EF and URSA Mini PL you can also use the forward and reverse skip buttons to open or close the iris on compatible lenses while recording clips.

When recording a clip using a sensor frame rate that differs from your project frame rate, your clip's playback speed will also differ. For example, imagine you have set your camera's project frame rate to match your post production timeline of 24 frames per second. If you record a clip with your sensor frame rate set to 80 frames per second, your clips will play back in slow motion on both the camera and on your post production timeline.

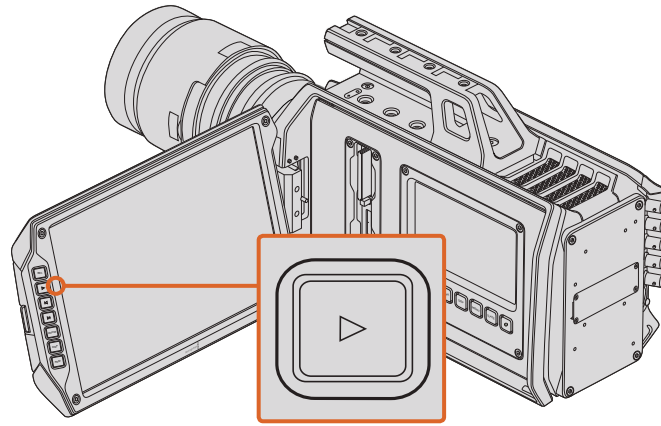

URSA Camera

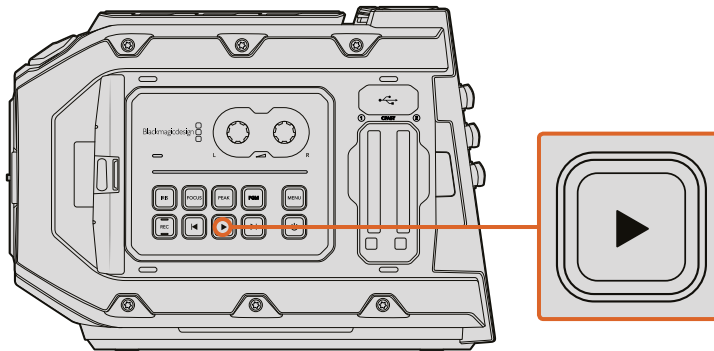

URSA Mini Camera

To ensure your clips play back at normal speed, select 'match' from the 'sensor frame rate' settings in the 'recording' settings touchscreen menu.

Refer to the 'recording settings' section of this manual for more information about frame rates.

Blackmagic URSA Overview and Connectors

Your Blackmagic URSA is built with three workstations including the DOP station on the operator side of the camera, plus the camera assist and audio station on the other side. This provides access to separate monitors and buttons so camera and audio crew can change settings and controls during a shoot.


Industry standard BNC connectors are built into the rear panel and the camera assist and audio station. This lets you connect 12G-SDI video to and from the rear connectors, plus output 3G-SDI HD video from the camera assist and audio station for when connecting an HD signal to accessories such as Blackmagic URSA Viewfinder.

Power is connected via the 4 pin XLR connector on the rear panel, and you can power accessories and other video equipment via the 12V power XLR output on the camera assist and audio station.

DOP Station

The DOP station provides the camera operator with a large 10" fold out monitor for accurate focusing and framing. The size of the monitor lets you catch fine details and action in your shots that could be easily missed on a smaller monitor. That means there is less chance of missing something interesting that is happening in the background of your shot and stopping the recording too early.

TIP All the controls you need to record and play back your clips are on the outside edge of the fold out monitor, including transport controls, a display button for turning overlays on and off, 'zoom' feature for focus assistance, and a program button for switching the monitor between the camera image and the program input.

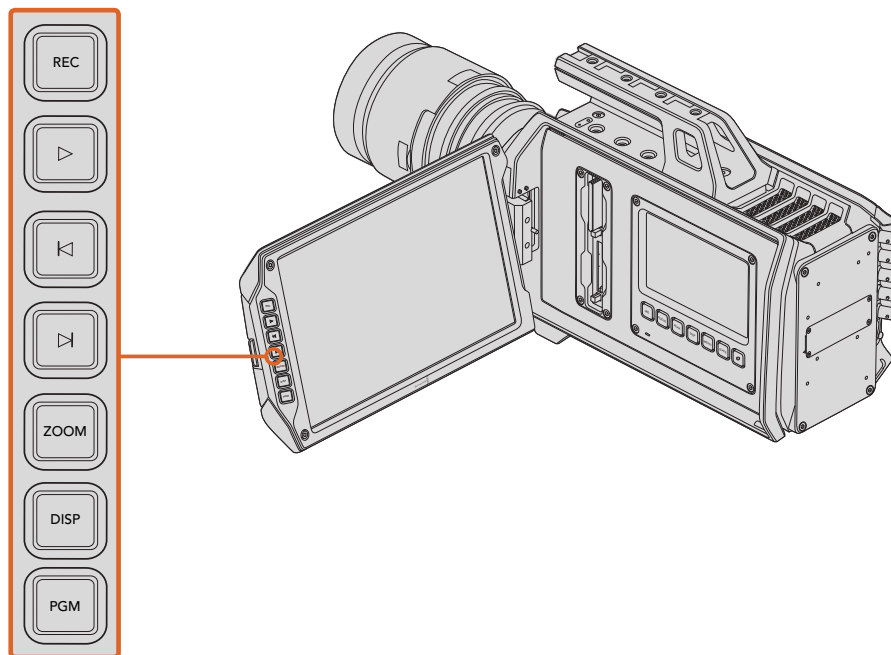

10" LCD Viewfinder

The large fold out LCD monitor pivots up and down so you can shoot high and low angles. The size of the monitor makes it easier to see the finest details in your image for more accurate focusing, checking color, and ensuring you catch all the action.

10" LCD Viewfinder Buttons

The control buttons on the edge of the fold out monitor provide common features you need for recording and playback, plus display options for when you want to turn specific overlays on or off, for example turning off the the status overlays, but keeping the focus peaking visible.

Record - Press the button marked 'REC' to record your clips. Press again to stop recording.

Play - Press the 'play' button to play back your clips. Your Blackmagic URSA will play continuously through all the recorded clips.

Forward and Reverse Skip - These two buttons are used to skip backwards and forwards through your clips. On Blackmagic URSA EF, these two buttons can also be used to open and close the iris when using compatible EF lenses.


Zoom - When shooting in 4K and Ultra HD, the 'zoom' feature helps you find sharp focus by zooming into your picture. Press 'zoom' to display a 1:1 pixel view of your Ultra HD or 4K image. Press again to return to standard view.

Display - The display button is marked 'DISP' and is used to turn display overlays on or off. Pressing the display button will cycle through the different displays. For example, status information together with focus peaking, or just focus peaking, or just the image without overlays.

Program - The program button is marked 'PGM' and is used to switch Blackmagic URSA's 10" monitor between camera view and the program input. If you have an SDI video signal connected to your camera's 'PGM' input, this is the image you will see when switching the 10" monitor to the program view.

DOP Station Buttons and Touchscreen

All of Blackmagic URSA's settings are easily adjusted using the work station buttons and touchscreen. The buttons and touchscreens on both the DOP station and the camera assist and audio station each perform the same functions, but work independently. For example, the camera assistant can be adjusting settings from the camera assist and audio station, while the camera operator is changing settings on the DOP station.

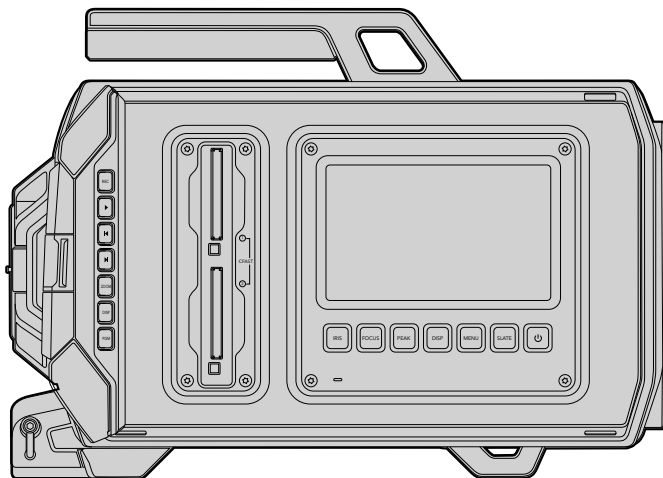

Iris Button - The 'iris' button activates the automatic aperture setting on compatible EF lenses. When using video dynamic range settings, a single press of the iris button will set an average exposure based on the highlights and shadows in your shot. When using film dynamic range settings, pressing the iris button sets your exposure so the brightest highlight in your shot isn't clipped.


To set your aperture electronically when using compatible EF lenses, press the forward and reverse skip transport buttons on the fold out monitor.

Focus Button - When using an EF mount with an EF lens that supports electronic focus adjustments, press the 'focus' button to activate auto focus. A white focus square will appear on the fold out monitor. Anything within the square will be correctly focussed. When the lens is focussed, the square will disappear. It's important to know that while most lenses support electronic focus, some lenses can be set to manual or auto focus modes, and so you need to ensure your lens is set to auto focus mode.

Peak Button - Press the 'peak' button to activate focus peaking. The focus peaking feature creates a green edge around the sharpest parts of the image so you can easily confirm your focus. Focus peaking is not recorded to the CFast 2.0 cards, but can be displayed via the monitoring SDI output, and on URSA's fold out monitor, by activating overlays using touchscreen menu.

Display Button - Press the 'disp' button to cycle through the display modes on each touchscreen. For example, pressing the disp button lets you view the camera's status and scopes, view your clips during recording and playback, and access camera features and settings via the dashboard.

Menu Button - Press the 'menu' button to open the dashboard on the touchscreen. If you want to quickly adjust a specific setting, you can press and hold to bypass the dashboard and go straight to the settings menu. Press the menu button again to close.

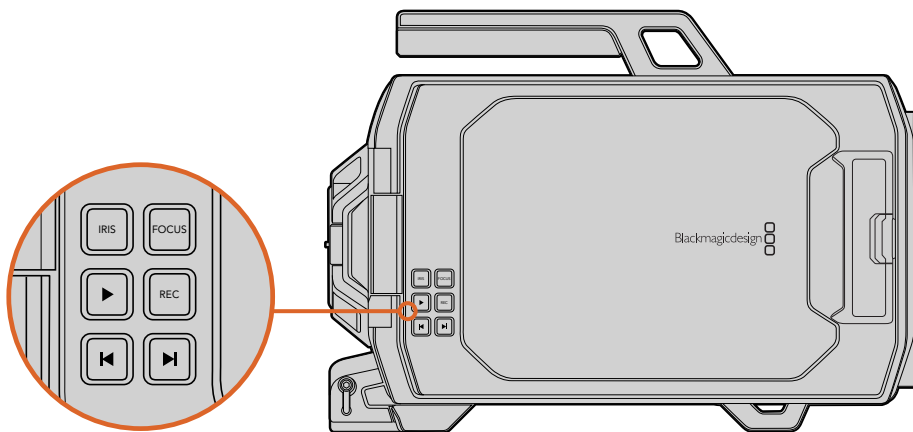

Slate Button - Press the 'slate' button to activate the slate feature on the touchscreen. Press slate again to close.

The slate feature lets you enter metadata for your clips and set your camera ID. See the 'entering metadata' section of this manual for more information.

Power Button - Promptly press and release the 'power' button to turn on your Blackmagic URSA. Press and hold to turn your camera off.

Memory Card Slots

Two CFast slots record your clips to CFast 2.0 cards. You can change a full card over after recording a clip, or you can record indefinitely by swapping the full card over to an empty card while the second CFast slot is still recording.

In 'dual card' mode, Blackmagic URSA can record high frame rates in CinemaDNG RAW by using both slots to record a frame each. By swapping between slots, it halves the workload for each, making it possible to record extremely high data rates at amazing speeds! For more information, refer to the 'recording' section.

Camera Assist and Audio Station

When the camera assistant needs to change settings or monitor the scopes or camera view, he or she can easily use the buttons and touchscreen on the camera assist and audio station, even when the camera operator is using the DOP station to adjust settings. This gives you an efficient workflow on a fast, busy shoot! The camera assist and audio station touchscreen and buttons perform exactly the same function as the buttons and touchscreen on the DOP station. For details on each button, refer to the 'DOP Station Buttons and Touchscreen' section.

It's also easy for the sound recordist to access the workstation to adjust and monitor the audio levels using the audio control buttons, adjustment knobs and built in LED meters.

TIP All video and audio connectors are easily accessible from the Camera Assist and Audio workstation.

Audio Level Adjustment Knobs

Turn each knob clockwise or counterclockwise to increase or decrease the recording level for each channel of audio. As you adjust each knob you'll see the corresponding audio meters respond.

Audio Meters

The audio meters display the strength of your recorded audio. If your audio levels rise too high, your audio peaks can be clipped and you will hear distortion in your audio.

CH SOLO and MUTE Buttons

During recording and playback, these buttons let you monitor your ch 1 and ch 2 stereo audio channels independently via headphones. For example, to monitor only ch 1 audio, press the 'ch 1 solo' button or the 'ch 2 mute' button. Press the button again to monitor both channels.

CH 1 SOLO Button

To monitor ch 1 only, press the 'ch 1 solo' button.

CH 1 MUTE Button

To mute the audio on channel 1 and monitor only channel 2, press the 'ch 1 mute' button.

CH 2 SOLO Button

To monitor ch 2 only, press the 'ch 2 solo' button.

CH 2 MUTE Button

To mute the audio on channel 2 and monitor only channel 1, press the 'ch 2 mute' button.

Camera Assist and Audio Station Connectors


All audio and video connectors are accessible from the Camera Assist and Audio workstation. The BNC connectors on the rear of the camera are arranged so you can connect them from the side or the rear and easily identify them.

SDI Out

Blackmagic URSA's 12G-SDI output is used to send HD and Ultra HD video to SDI equipment such as routers, monitors, SDI capture devices, and broadcast switchers.

SDI In

When connecting Blackmagic URSA to a switcher for live production, connect the switcher's program output to Blackmagic URSA's 12G-SDI input. Now you can view the switcher's program output by pressing the PGM button on the fold out monitor. Your camera's program input can also be used to connect to the playback output of an external recorder. You can then select between the camera image and the feed from the external recorder by pressing the PGM button.

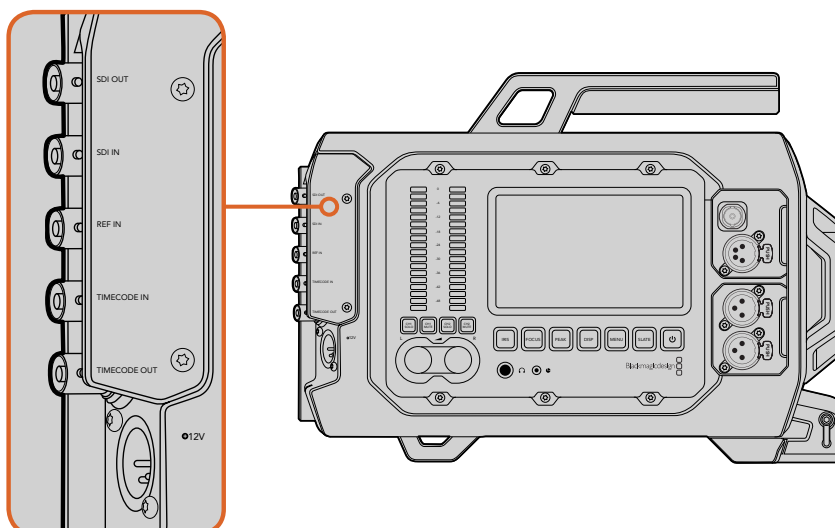

Use the rear panel BNC connectors to input or output timecode, sync to an external reference signal, and input or output 12G-SDI video. Connect external power via the 4 pin XLR connector.

TIP Any video signal connected to your camera's 12G-SDI input can be viewed on the fold out monitor by pressing the program button marked 'PGM'.

REF In

Synchronize Blackmagic URSA to a common reference signal, such as black burst or tri-level sync, by connecting to the 'ref in' BNC connector. This lets you sync Blackmagic URSA to other SDI video equipment, for example, when using multiple cameras connected to a switcher.

Timecode In

Record timecode from other professional audio and video equipment, such as audio mixers and clapper boards by connecting them to Blackmagic URSA's 'timecode in' BNC connector. This ensures audio and picture can be easily synchronized during post production.

Timecode Out


Send timecode from Blackmagic URSA to other professional video equipment by connecting to the 'timecode out' BNC connector.

Power Input +12-20 V

Use the 4 pin 12-20 Volt XLR connector to plug in power from external sources, such as power outlets, portable batteries and generators.

Headphones

Monitor audio while recording or playing back clips by plugging your headphones into the 1/4" TRS stereo headphones jack.

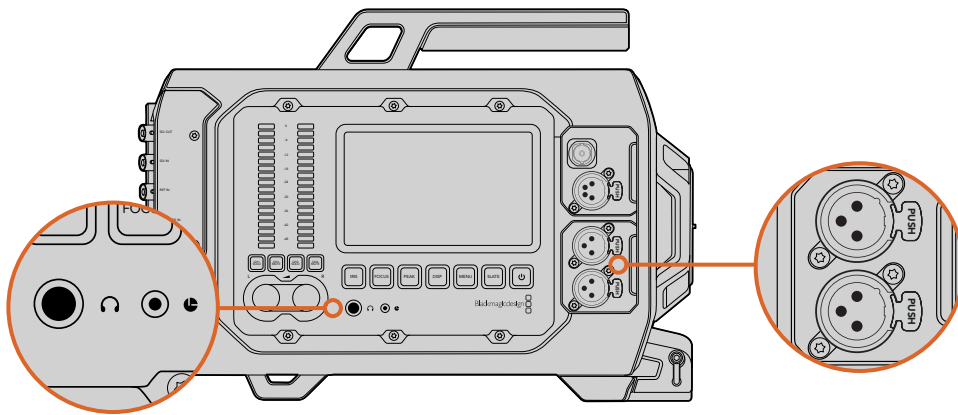

LANC Remote Control

The remote port on your camera is used to remotely control record starting and stopping, iris and focus adjustments when using a compatible lens.


The port is a 2.5 mm stereo jack using the standard LANC protocol.

3G-SDI Out

Use Blackmagic URSA's down converted 3G-SDI output to send 1080 HD video to an external viewfinder such as the Blackmagic URSA Viewfinder. This output can also be connected to routers, monitors, SDI capture devices, broadcast switchers and other SDI video equipment.

+12 V Power Output

Use the 4 pin 12 Volt XLR connector for powering accessories, such as an external viewfinder.

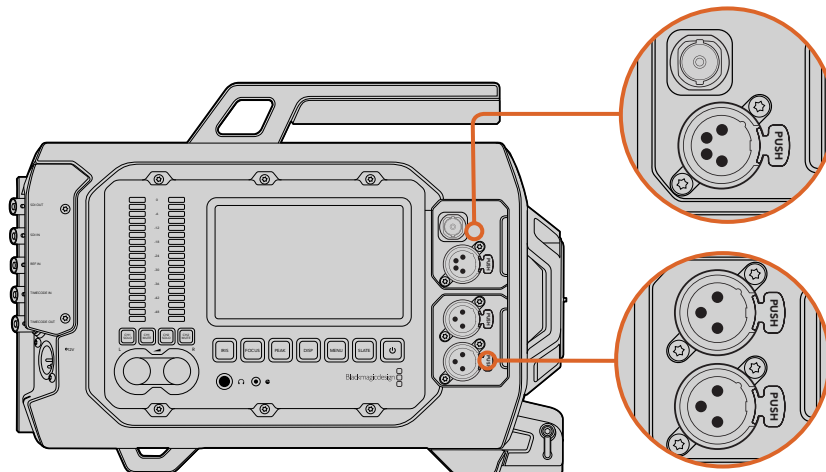

The HD Monitoring output and +12 V power output on the camera assist and audio station lets you plug in accessories such as the Blackmagic URSA Viewfinder. Use the balanced XLR inputs to plug in external analog audio.

XLR Audio In

Use the balanced XLR inputs to plug in external analog audio from professional equipment such as audio mixers, PA systems or external microphones.

The XLR connectors supply phantom power so you can use microphones that aren't self powered. To enable phantom power select 'inputs' audio in the touchscreen audio menu, and 'mic low' or 'mic high'. Scroll the menu to reveal the 'phantom power' setting and select 'on'. To disable phantom power, select 'off'.


Phantom power is active when 'audio input/inputs' and 'mic low' or 'mic high' are selected.

Front Panel and Turret

Your Blackmagic URSA's front panel contains the turret and lens mount.

Depending on your model, you can use a variety of lens types. For example, Blackmagic URSA EF gives you the ability to mount any compatible EF stills lens commonly used on DSLRs, or manual EF prime lenses for the highest quality images. Blackmagic URSA PL lets you mount professional PL mount lenses designed for absolute precision.

However, you are not locked into one mount as you can easily upgrade the mount by replacing the turret on your Blackmagic URSA's front panel. This also gives you the added benefit of updating the sensor as we release new versions in the future so you don't have to purchase an entirely new camera. For more information, refer to the section titled 'upgrading the sensor turret'.

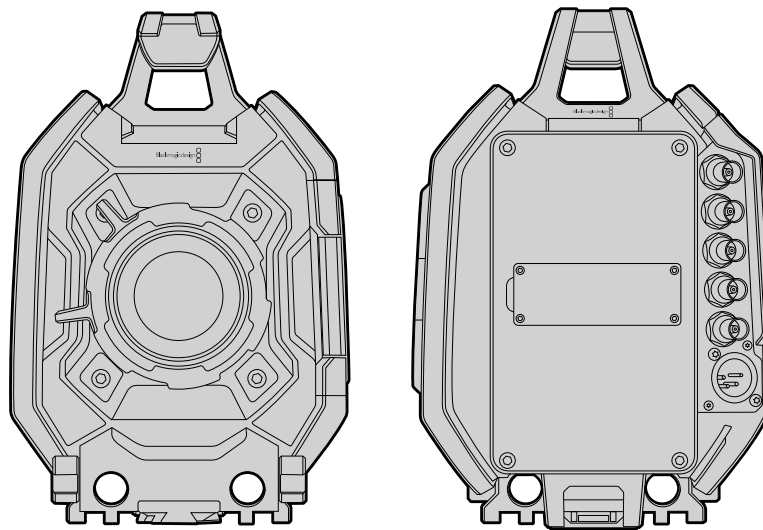

Front and Rear View

Rear Panel

The rear panel lets you attach a Blackmagic V-mount battery plate, or any third party V-mount or gold mount battery plate. This means you have the flexibility to modify your own plate to attach to your Blackmagic URSA, or you can simply purchase the custom plate designed for URSA from your nearest Blackmagic Design reseller. For more information on mounting batteries, refer to the 'mounting batteries' section of this manual.

Connectors on the right side of the panel let you plug in 12V power via the 4 pin XLR connector. Video signals up to 12G-SDI can be connected to and from your Blackmagic URSA via the SDI in and out BNC connectors. A timecode input and output is also provided, plus a reference BNC input for syncing your video to an external reference signal.


TIP For more information about the side connectors on your Blackmagic URSA's rear panel, refer to the 'Camera Assist and Audio Station Connectors' section.

Top Panel and Underside

The top panel contains a series of heavy duty 3/8" mounting points for adjusting the position of the top handle, or for mounting accessories to your camera.

On the underside you'll find 15mm LWS rod mounts and VCT 14 base plate support. The rod mounts conform to the LWS lightweight standard and the base plate support mounts to a standard V-lock VCT-14 tripod plate commonly used in production environments.


Connect the USB 2.0 port to your computer when updating your Blackmagic URSA's internal software. Refer to the Blackmagic Camera Setup Utility section for more information.

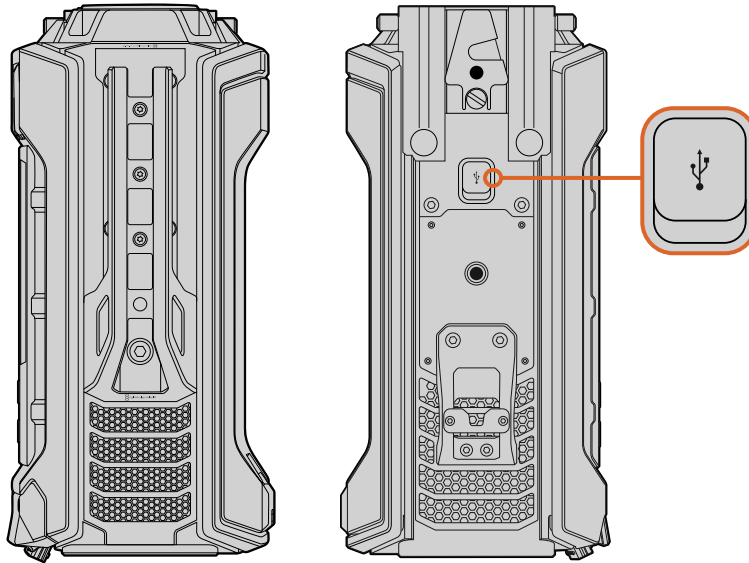

Touchscreens

Each work station features a touchscreen so you can monitor your recordings, view scopes, apply settings and activate camera features.

By pressing the 'disp' button you can switch between viewing your clips during recording and playback, you can open the dashboard where you can access camera features and apply settings, or you can view scopes and status information. Scopes are provided to assist with focusing, setting exposure and audio monitoring.

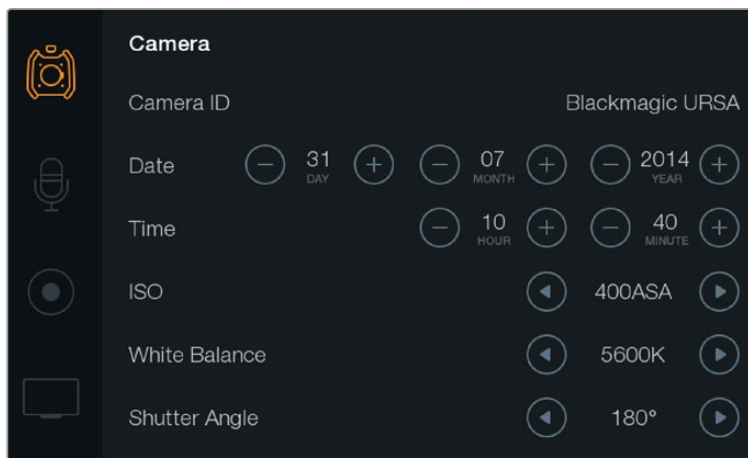

Settings can be accessed using the touchscreen menus. Press the 'menu' button to open the touchscreen settings. Navigate the settings by tapping the icons on the left side of the screen. Scroll down through the menu to reveal any additional settings. You can also access camera settings by pressing the 'disp' button below a touchscreen until the dashboard appears, then tapping the settings icon.

Touchscreen Features


Status Strip

Your chosen settings are always displayed on a status strip at the top of each touchscreen, showing a convenient summary of your camera's settings.



Power Indicator

The power indicator displays a battery icon when using battery power, or an external power icon when plugged into external power via the 12-20 Volt XLR input.

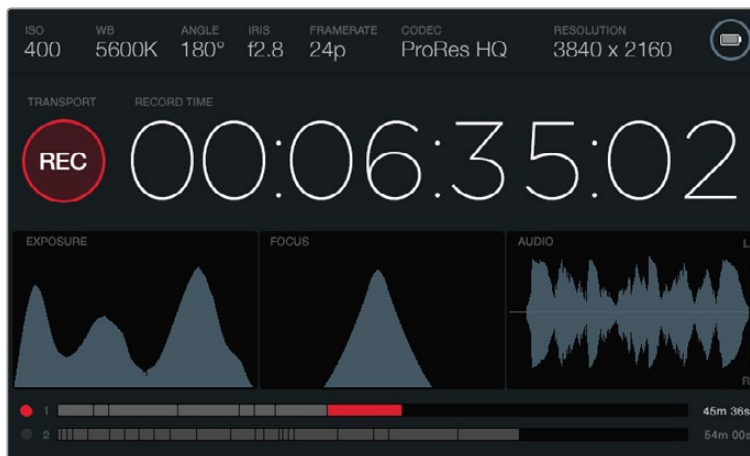

The touchscreens provide scopes to help set optimum exposure, focus and audio quality. The battery indicator changes to the external power icon when external power is plugged into the 12-20V XLR input.

Duration Display

The duration display provides a timecode counter for checking the duration of your clips and monitoring timecode during recording and playback. The counter displays a time sequence showing Hours:Minutes:Seconds:Frames and will progress through the sequence as you record or play back clips.

The displayed duration of each clip starts from 00:00:00:00 for the first clip, or from the end of the previous recorded clip. For example, if a clip stopped recording at 00:06:25:00, the next clip will start recording at 00:06:25:01.

Clip duration is displayed on the touchscreen, however time of day timecode is embedded into your clips for post production, so it's worth regularly checking the time settings in the 'camera' settings menu to make sure they are always accurate.

Transport Display

The transport display provides a bright colored icon that indicates which transport buttons are being used. The icon also provides a dropped frames alert if frames are dropped during recording, and displays FULL when recording has reached maximum capacity.


Exposure Scope

The exposure scope displays a histogram which shows the contrast between whites and blacks along a horizontal scale. The left edge of the histogram displays shadows, or blacks, and the far right displays highlights, or whites. When you close or open the lens aperture, you'll notice the information in the histogram moves to the left or right accordingly.

To achieve optimum exposure, set your lens aperture so the information is distributed towards the right of the histogram and curves to a point at the bottom right edge. This is known as ETTR, or exposing to the right.

Focus Scope

The focus scope displays a bell curve that moves up and down as you focus and defocus your lens. The height of the curve depends on the amount of detail in your picture. For example, in images containing lots of detail, the curve will be higher and more pronounced. When the curve peaks relative to the amount of detail in your image, you'll know your image is in perfect focus.

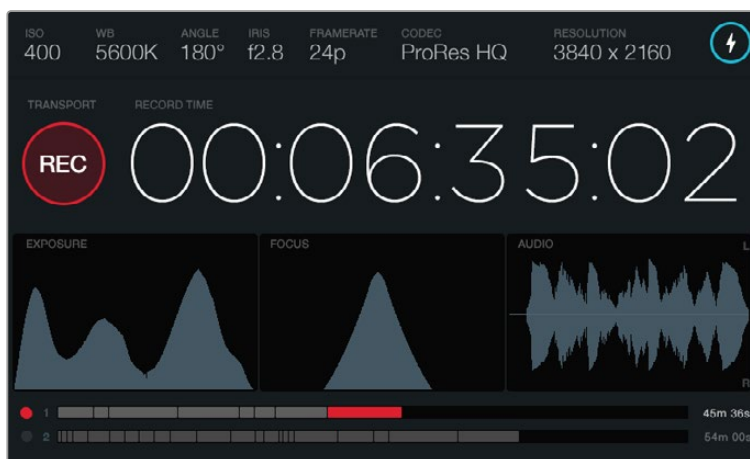


When the peak of the focus scope curve reaches its highest point, you'll know your image is in focus.

Audio Scope

The audio scope displays a continually updating waveform of the previous 3 seconds of recorded audio. If you hear a loud sound while recording, you can easily check if your audio is clipped because the waveform will display red tips on the waveform spikes. You can make adjustments to avoid clipping by turning the audio level adjustment knobs counterclockwise until the audio meter stops rising above 0dB.

Media Timeline

The media timeline displays the recording and playback status of your CFast cards. The dot and clip indicators illuminate different colors depending on use: Red when writing to the card, green when reading the card, and yellow in the event of a card error. As a new clip is recorded, the active slot displays a new clip on the timeline. The time remaining indicator at the end of each timeline displays the remaining minutes and seconds of recording time for each CFast card and displays FULL when a card reaches maximum capacity.

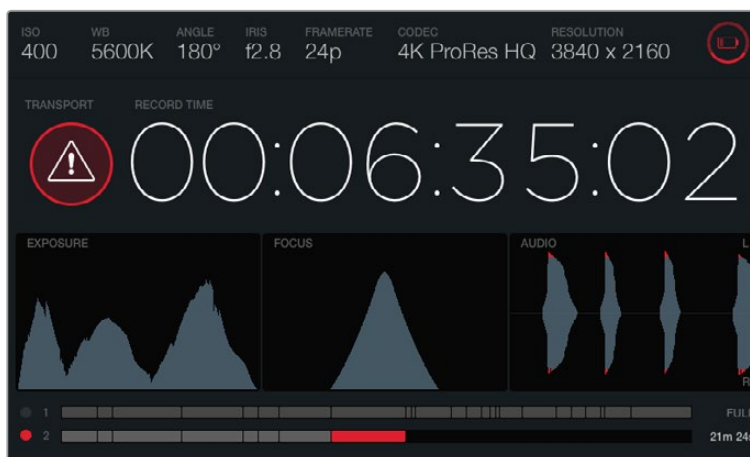


The dropped frames alert indicates when your CFast card is dropping frames during recording. The red tips on the audio scope waveform indicate when your audio has clipped.

When a card is full and you have an empty CFast card in the second slot, Blackmagic URSA will automatically record to the other CFast card. To play a selected clip, press the 'play' button on the fold out monitor transport controls, or on the outside of the door.

Blackmagic URSA Settings

Dashboard


On Blackmagic URSA press the 'display' button marked DISP on the control panel to open the dashboard. You can also tap on icons to hide or show meters and guides on the LCD monitor, or format your CFast cards.

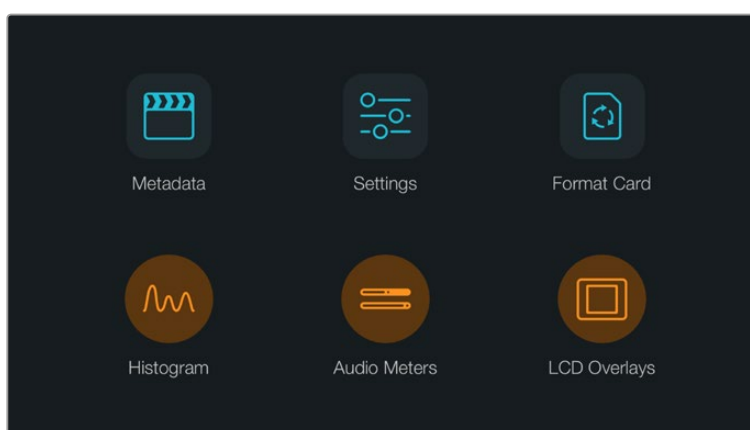

Press the 'disp' button below a touchscreen to open the dashboard.

Camera Settings

To configure camera settings on your Blackmagic URSA, select the 'camera' touchscreen menu, then tap the relevant arrows and icons with your finger.

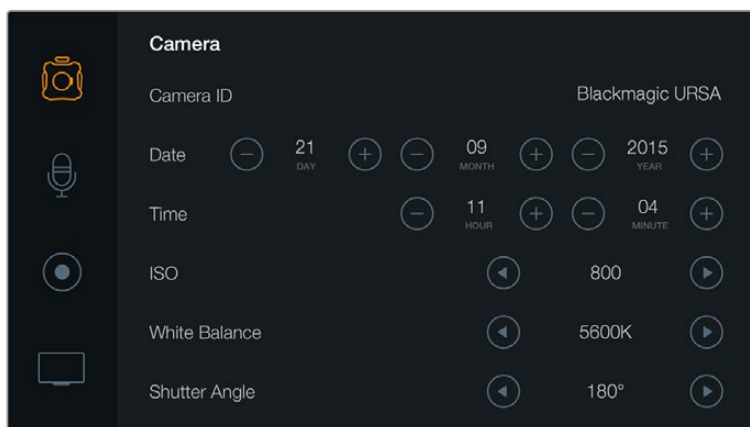

To configure camera settings on your Blackmagic URSA, select the 'camera' touchscreen menu.

Camera ID

If using more than one Blackmagic URSA, it's helpful to set each camera's ID which will be included with any metadata recorded with your clips. Set the 'camera ID' with the touchscreen keyboard. Select 'enter' to save your camera ID, or 'cancel' to discard any changes.

Setting Date and Time

To set date and time on your Blackmagic URSA, tap the + or - icons to change the year, month and day settings.

Time is set to 24 hour format. To set the time, tap the + and - icons to make adjustments. If traveling with your Blackmagic URSA, remember to change the date and time to local time zones.

If you have your Blackmagic URSA stored for long periods, the time may need to be reset. It is always a good idea to check the time and date prior to recording. When connecting your camera to your computer via USB and launching Blackmagic Camera Setup utility, Blackmagic URSA's time is synced to your computer time.

ISO

To adjust the ISO settings, tap the ISO arrow icons.

ISO settings are helpful when you are shooting in a variety of light conditions. The optimum ISO setting for your Blackmagic URSA is ISO 400.

Depending on your situation, however, you may choose a lower or higher ISO setting. For example, in low light conditions ISO 800 can be suitable. In bright conditions ISO 200 can provide richer colors.

White Balance


To adjust the 'white balance' settings, tap the white balance arrow icons with your finger.

Your Blackmagic URSA includes white balance presets for a variety of color temperature conditions. These are:

- 2500, 2800, 3000, 3200, 3400, 3600, 4000, 4500 and 4800K for various conditions under tungsten, incandescent or fluorescent light, or under dull natural light including candle light, sunrise/sunset, morning, and after noon light.
- 5000, 5200, 5400 and 5600K for outdoors on a clear, sunny day.
- 6000, 6500, 7000, 7500 and 8000K for a variety of daylight conditions.

Every light source emits a color. For example, a candle flame emits a warm color, and an overcast sky emits a cool color. White balance settings are used to color balance your image so white stays white. For example, when shooting under tungsten lamps which emit a warm light, selecting 3200K adds some blue to the image. This balances the color so white is accurately recorded.

Color balance settings can also be used for creating color effects. For example, setting your white balance to 7500K can significantly warm your picture to create an intimate mood.

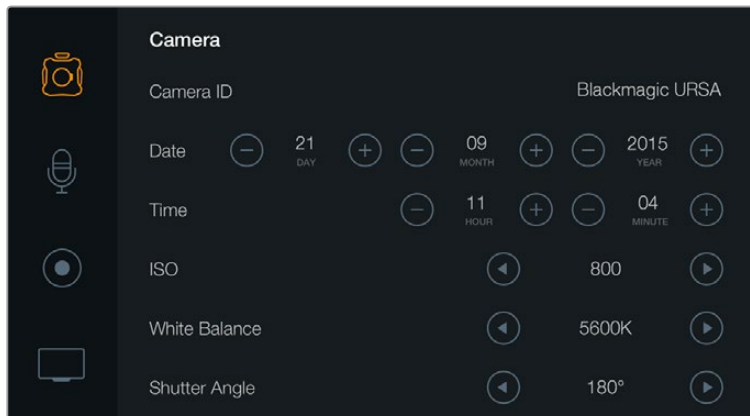

The camera settings screen.

Shutter Angle

To adjust the 'shutter angle' settings, tap the shutter angle arrow icons.

Shutter angle defines the level of motion blur in your video, and can be used to compensate for varying light conditions. 180 degrees is the optimum shutter angle for capturing a satisfying motion blur in most conditions. However as lighting conditions change, or the amount of movement in your scene increases, you may decide to adjust accordingly.

For example, 360 degrees is considered 'wide open' and allows maximum light onto the sensor. This is useful for low light conditions with subtle movement in your scene. Alternatively, if shooting motor sport with rapid movement, a narrow shutter angle will provide minimal motion blur for sharper, crisper images.

When shooting 24p in countries with 50 hertz power supplies, 172.8 degrees will minimize potential flickering from 50Hz light sources.

Audio Settings


To adjust audio input and monitoring settings on your Blackmagic URSA, select the 'audio' touchscreen menu, then tap or slide the relevant arrows and slider icons with your finger. Scroll the menu to reveal more audio settings.

Audio Input

To change the audio input between camera mic and external XLR inputs, select 'camera' or 'inputs'.

Microphone Level

Microphone level adjusts the recording levels for Blackmagic URSA's built in microphone. Move the audio slider left or right to adjust levels. The built in microphone records to audio channels 1 and 2.

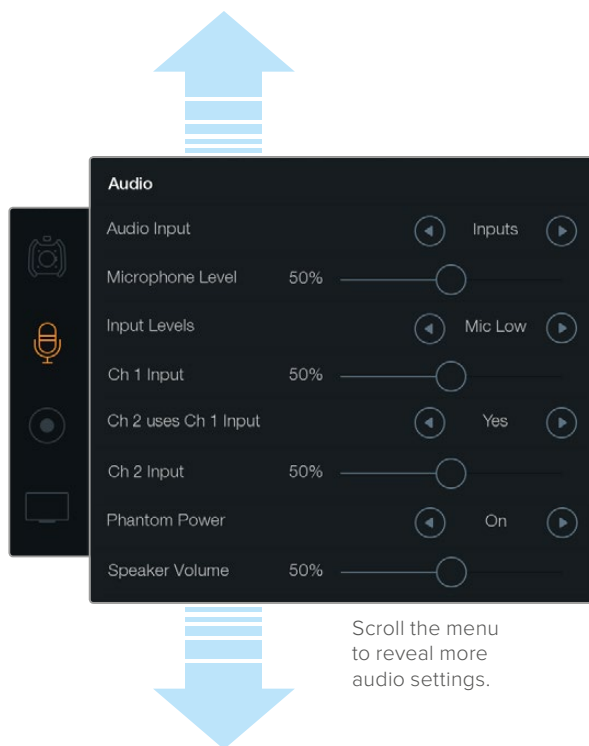

Input Levels

Set the external audio input levels by tapping the relevant left and right arrow icons. External audio connectors support line, or microphone levels with 48V phantom power. It's important to select the appropriate level for your audio signal. Level settings include 'line', 'mic low', and 'mic high'.

Channel 1 Input

Touch and drag the ch 1 Input slider icon left or right to adjust the channel 1 audio level.

Channel 2 uses Channel 1 Input

Select 'yes' if you want to record channel 1 external audio to channels 1 and 2. Select 'no' if you want channel 1 audio to remain on one channel only.

Channel 2 Input

Touch and drag the ch 2 Input slider icon left or right to adjust the channel 2 audio level.

Phantom Power

Select 'on' to enable phantom power, or 'off' to disable. The phantom power setting is active only when 'audio input' is set to 'inputs' with 'mic low' or 'mic high' input levels selected.

Headphone and Speaker Volume


Touch the headphone or speaker volume icon and drag left or right to adjust audio monitoring levels. When headphones are connected, the headphone setting is displayed. Alternatively, when headphones are not detected, the speaker setting is displayed. Headphones are active when recording or playing a clip. The built in speaker is active only during playback.

Recording Settings

To set the video format recorded to your CFast 2.0 cards, tap the circular record icon with your finger, then tap the relevant arrow icons.

Codec

The 'codec' setting lets you choose between various CinemaDNG RAW and Apple ProRes codecs such as RAW, RAW 3:1, ProRes 444 XQ, and more. The amount of video you can record on a CFast card will increase when choosing codecs that utilize higher compression. Refer to the 'record duration table' in the 'recording' section for more information.

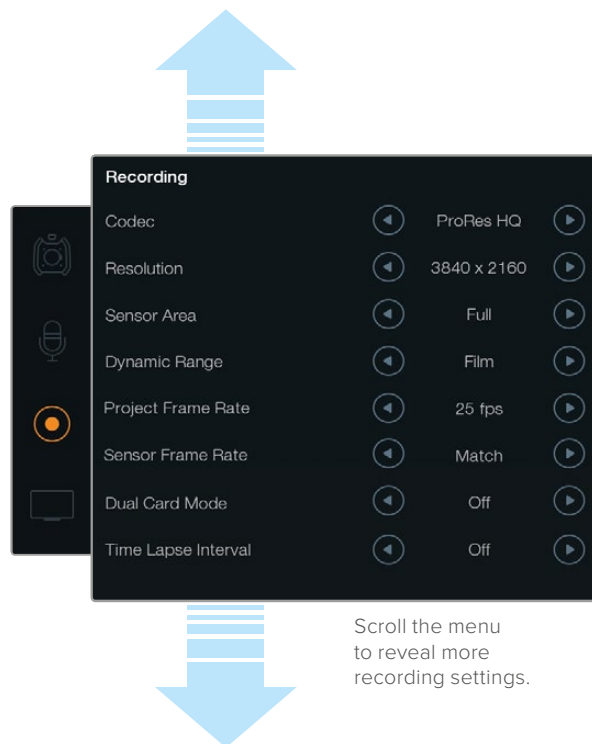

Resolution

This setting works in combination with the 'codec' setting. Select the resolution for your desired recording format.

For example, if you want to record clips using 4K RAW, select 4000x2160. Now choose which CinemaDNG RAW codec you wish to use by adjusting the codec setting.

Sensor Area

Use this setting to select between 'full' and 'window' shooting modes. URSA can be set to use the 'full' sensor area up to 120 frames per second. For even higher frame rates up to 150 frames per second you can use 'window' mode. Window mode allows higher frame rates and takes a 1080 HD resolution image from the center of the super 35mm sensor.

Dynamic Range

Adjust the 'dynamic range' setting by tapping the dynamic range arrow icons. Blackmagic URSA has two dynamic range settings:

- **Film**

The 'film' setting shoots video using a log curve giving you 12 of dynamic range and maximizes the information in your video signal to help you get the most out of color grading software, such as DaVinci Resolve. When recording in CinemaDNG RAW formats, only the film dynamic range setting is available.

- **Video**

The 'video' setting uses the REC709 color standard for high definition video. This lets you work faster by recording directly to the compressed video formats your camera supports, which are compatible with popular post production software.

Frame Rate

Adjust the 'frame rate' settings by tapping the frame rate arrow icons.

Blackmagic URSA has two frame rate settings; project frame rate and sensor frame rate.

- **Project Frame Rate**

The project frame rate is URSA's recording format frame rate and provides a selection of common frame rates used in the film and television industry. For example, 23.98 frames per second using 4K ProRes HQ. This frame rate is normally set to match your playback speed used in your post production workflow.

Your Blackmagic URSA has 8 project frame rate settings including 23.98, 24, 25, 29.97, 30, 50, 59.94 and 60 frames per second.

- **Sensor Frame Rate**

The sensor frame rate sets how many actual frames from the sensor are recorded every second. This frame rate will affect how fast or slow your video will play back at your set project frame rate. For standard playback speed, make sure you set your sensor frame rate to match your project frame rate by selecting 'match' in the sensor frame rate settings.

For information on the maximum frame rates available for each recording format and codec, refer to the 'maximum sensor frame rates' table in the 'recording' section of this manual.

Variable Frame Rates

You can create dynamic and interesting speed effects in your clips by varying the sensor frame rate. Setting the sensor frame rate higher than your project frame rate will create slow motion during playback. Alternatively, the lower your sensor frame rate, the faster your clips will appear. The principle is similar to overcranking and undercranking a film camera. Overcranking speeds up the sensor frame rate so you can stretch out moments in time during playback to enhance emotion. Undercranking slows down the sensor frame rate so you can increase the action in fast moving scenes. The creative possibilities are endless and entirely up to you!



A sensor frame rate higher than your project frame rate will result in slow motion. To ensure your recorded clips play back at standard speed, set the sensor frame rate to match the project frame rate.

Dual Card Mode

Blackmagic URSA lets you record CinemaDNG RAW clips at higher frame rates by recording to both CFast cards simultaneously. Turn 'dual card mode' on or off by tapping the setting arrow icons. You can also enable 'dual card mode' to increase the reliability of CFast cards if you find a single card is dropping frames while recording CinemaDNG RAW clips.

When dual card mode is enabled an icon will appear on the touchscreen linking the two CFast slot indicators together. While recording, both CFast slot indicators will flash to show the cards are active and their respective media timelines will update accordingly.

When recording in dual card mode, the CinemaDNG RAW clip folders on both Cfast cards share the same name. To copy the files to your storage location, simply transfer the contents from each CFast card to the same storage folder. You can choose to keep the audio file from only one CFast card as both are exactly the same.



Set dual card mode to 'on' to record CinemaDNG RAW clips to two CFast cards simultaneously. This feature lets you record clips using higher frame rates than is achievable on a single CFast card.

Time Lapse Interval

This setting activates the time lapse feature to automatically record a still frame at the following intervals:

- **Frames:** 2 - 10
- **Seconds:** 1 - 10, 20, 30, 40, 50
- **Minutes:** 1 - 10

For example, you can set the camera to record a still frame every 10 frames, 5 seconds, 30 seconds, 5 minutes etc.

The time lapse feature offers many creative options. For example, setting a 2 frame time lapse interval will give your recorded video a high speed effect when played back.



The time lapse feature lets you set Blackmagic URSA to automatically record a new frame at a chosen time interval. For example, one frame every second.

The format of each still frame is based on your recording format, so if you set the camera to record in 4K ProRes HQ, the time lapse setting will maintain this format. The frame rate will be based on your project frame rate setting, i.e., 24 fps. This is so your time lapse footage can be easily incorporated into your post production workflow.

When the 'rec' button is pressed in time lapse mode, the timecode counter updates when a frame of video is recorded. To set the time lapse interval setting, touch the time lapse interval arrow icons. Remember to set the time lapse feature to 'off' when you want to record at standard speed.

File Naming Convention

Clips are recorded to your CFast cards in the CinemaDNG RAW format or to a ProRes QuickTime movie, depending upon which recording format you have chosen. Blackmagic URSA uses the following file naming convention when recording video.

[Camera ID]_[Reel Number]_[yyyy-mm-dd]_[hhmm]_C[Clip number].mov


The table below shows an example of the file naming convention:

BMC01_1_2014-08-08_1631_C0002.mov	QuickTime Movie Filename
BMC01 _1_2014-08-08_1631_C0002.mov	Camera ID
BMC01_ 1 _2014-08-08_1631_C0002.mov	Reel Number
BMC01_1_ 2014-08-08 _1631_C0002.mov	Date (2014 Aug 08)
BMC01_1_2014-08-08_ 1631 _C0002.mov	Time (16:31pm - 24hrs)
BMC01_1_2014-08-08_1631_ C0002 .mov	Clip Number

For CinemaDNG files, the folder of the image sequence will also be named the same way.

Display Settings

To adjust the 'display' settings on a touchscreen, select the display touchscreen menu, then touch or slide the relevant arrows and sliders. Scroll the menu with your finger to reveal more display settings.

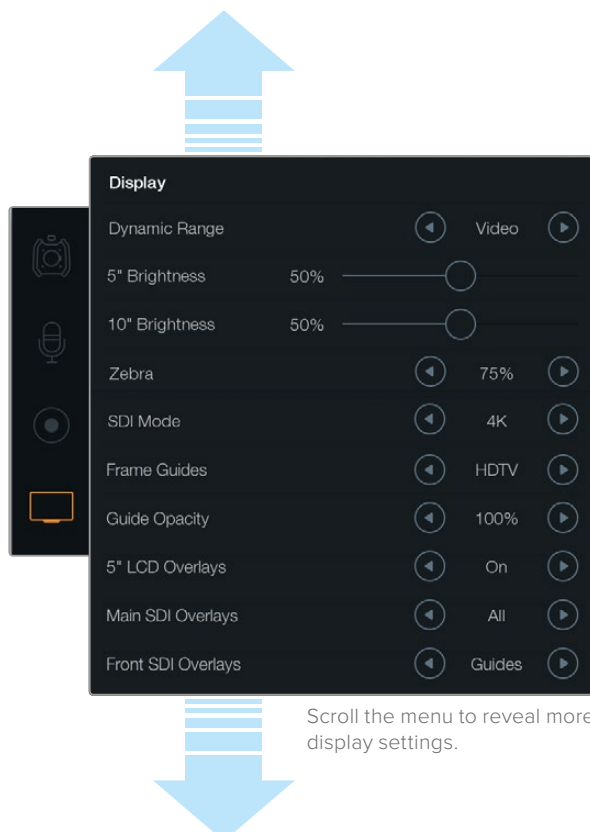

Dynamic Range

Blackmagic URSA's fold out monitor and touchscreens let you view your video as you are recording. You can set the display dynamic range to 'video' or 'film' settings. The 'display' settings dynamic range lets you monitor your video with the display set to video even when the recording format is set to film!

To adjust the 'display' settings dynamic range, touch the dynamic range arrow icons.

5" Brightness


On Blackmagic URSA, move the 5" Brightness setting slider icon left or right to adjust brightness for each touchscreen.

10" Brightness

On Blackmagic URSA, move the '10" brightness' slider icon left or right to adjust brightness for the 10" fold out monitor.

Zebra

To activate and adjust the zebra setting, tap the left and right zebra arrow icons.

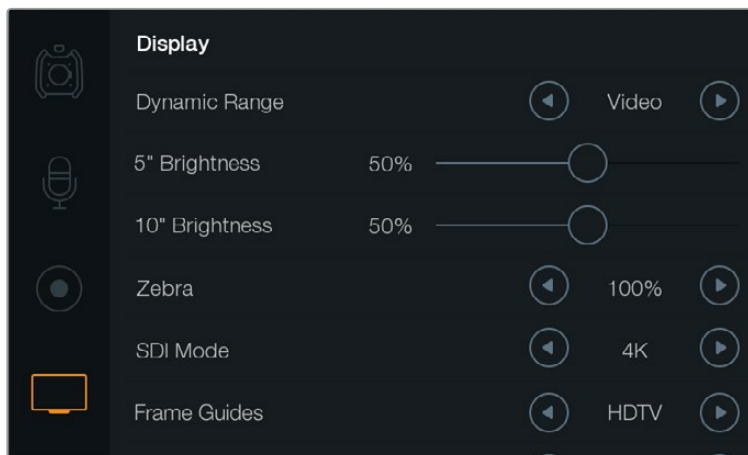

Display settings screen with zebra set to 100%. This will let you see which areas of your image are over exposed.

The zebra helps you achieve optimum exposure by displaying diagonal lines over areas of the video that exceeds your set zebra level. For example, setting the zebra to 100% shows which areas are over exposed.

Simply open the lens aperture until the zebra pattern appears, then gradually close the aperture until the zebra pattern disappears. To achieve optimum exposure, you may need to decide which areas of your picture to leave over exposed. Car headlights and extreme highlights are a good example of what can often be left over exposed.

SDI Mode

Use this setting to switch Blackmagic URSA's 12G-SDI output between Ultra HD and HD video. When the recording resolution is set to HD, only HD will be output.

Your selected overlays can be viewed independently via URSA's 10" fold out monitor, touchscreens and SDI outputs. Press the 'disp' button on the fold out monitor to independently cycle through the SDI overlay settings on the fold out monitor.



SDI overlays set to 'all' with the HDTV frame guide.

Overlay Settings

You can monitor your video with overlays via the fold out monitor and touchscreens. Overlays can also be viewed via URSA's HD-SDI monitoring output and 12G-SDI output. To choose an overlay to display, tap the overlay setting arrow icons:

Off

Gives you a clean feed.

Status

Displays only the recording information, such as f-stop number, frame rate and shutter angle.

Guides

Displays only the frame guides.

All

Displays both frame guides and recording information.

5" LCD Overlays

On Blackmagic URSA, select 'on' or 'off' to enable or disable a touchscreen's overlays.

Main SDI Overlays

This setting lets you choose which overlays to display via the rear 12G-SDI output.

Front SDI Overlays

This setting lets you choose which overlays to display via the HD-SDI monitoring output.

Frame Guides

You can choose from seven different frame guides to display on your camera's fold out monitor and SDI outputs. Frame guides include aspect ratios for various cinema, television and online standards, plus a rule of thirds composition grid.

Tap the 'frame guide' setting arrow icons to select your desired frame guide. When using Blackmagic URSA Viewfinder, make sure you have frame guides turned off in your camera's front SDI settings as the URSA Viewfinder will generate its own frame guides or you will find them doubled up in the viewfinder display.



SDI Overlays set to 'guides' with the 2.39:1 frame guide. Change the transparency of the frame guide by adjusting the 'guide opacity' setting.

HDTV

Displays action and title safe regions of your image within a 1.78:1 aspect ratio compatible with 16:9 HD television and computer screens.

4:3

Displays the 4:3 aspect ratio compatible with SD television screens, or for to help with framing when using 2x anamorphic adapters.

2.35:1, 2.39:1 and 2.40:1

Displays the broad widescreen aspect ratio compatible with anamorphic or flat widescreen cinema presentation. The three widescreen settings differ slightly based on the changing cinema standards over time. 2.39:1 is one of the most prominent standards in use today.

1.85:1

Displays another common flat widescreen cinema aspect ratio. This ratio is slightly wider than HDTV 1.78:1 but not as wide as 2.39:1.

Thirds

Displays a grid with two vertical and horizontal lines placed in each third of the image. Thirds are an extremely powerful tool to help compose your shots. For example, the human eye typically looks for action near the points where the lines intersect, so it's helpful to frame key points of interest in these zones. An actor's eyeline is commonly framed along the top third of the screen, so you can use the top horizontal third to guide your framing. Thirds are also useful to maintain framing consistency between shots.

Guide Opacity

Aspect ratios are displayed as mattes on the top and bottom of your touchscreen and fold out monitor. You can adjust the opacity of the matte by adjusting the 'guide opacity' setting.

For example, if you prefer to view your guides as solid mattes, select 100%. Alternatively, if you would like to view guides at maximum transparency, set the guide opacity to 25%.

Image Stabilizer

When using an EF lens mount, Blackmagic URSA or URSA Mini supports the image stabilizer feature found in many EF lenses. Simply set the stabilizer switch to 'on' to use it with your camera.

When URSA is battery powered, the image stabilizer is activated only while recording in order to conserve power. When external power is connected to the camera, the image stabilizer will always be active when the lens stabilizer switch is set to 'on'.

Dropped Frame Indicator

A flashing red record icon on the 10" LCD and SDI overlays indicates that dropped frames are detected. URSA Viewfinder a flashing exclamation mark top right indicates dropped frames detected. Refer to the 'Choosing a CFast 2.0 card' and 'Important note about CFast card speed' for more information on how to avoid dropping frames.



Blackmagic URSA indicates dropped frames by flashing the red "recording" icon at the bottom of the 10" LCD.


Blackmagic URSA Mini Overview and Connectors

Industry standard BNC connectors are located on the right side and rear panel for SDI video in and out, plus two separate LANC inputs, one for the side handle controls and one for an external LANC controller.

XLR inputs are on the top panel behind the mounting points for professional balanced analog audio. A 4 pin XLR connector is provided on the rear panel for external power input, and an output is available on the right side for powering accessories such as Blackmagic URSA Viewfinder.

The USB port above the CFast slots on your URSA Mini is for connecting to a computer when updating your camera's internal software.

Front Panel

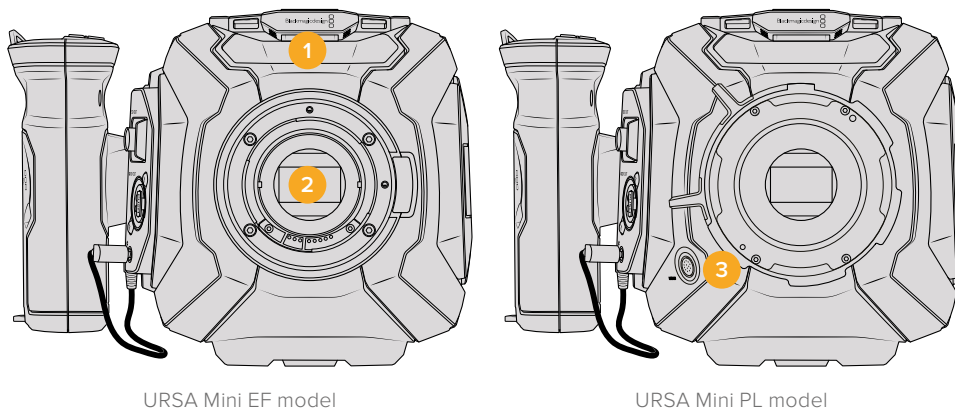

1 Stereo Microphone

Built in high quality stereo microphone. Refer to the 'Settings' section for information on microphone audio settings.

2 Lens Mount


EF or PL lens mount, depending on model. Refer to the 'Getting Started' section for information on mounting lenses.

3 Broadcast Lens Connector

This connector provides power and control to compatible PL and B4 mount lenses with 12 pin connections. This connector is only available on URSA Mini PL models. Refer to the 'URSA Mini B4 lens' section in this manual for a list of compatible lenses, including PL and B4 models.

Left Side

URSA Mini's left side panel lets you insert CFast cards, access the control panel and change settings. The USB port is located just above the CFast slots so you can easily plug into a computer when updating your URSA Mini's internal software.

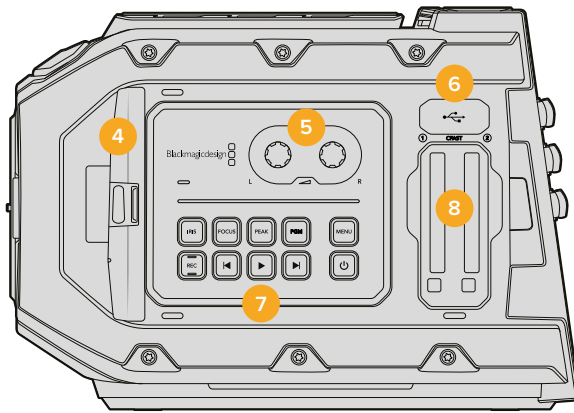

4 Fold Out Touchscreen

5 inch fold out touchscreen monitor, pivots for viewing at different camera heights. Refer to the 'Blackmagic URSA Mini Features' section.

5 Audio Level Adjustment Knobs

Adjustment knobs to set the recording levels for audio channels 1 and 2. Refer to the 'Blackmagic URSA Mini Features' section.

6 USB Port

USB 2.0 port for updating internal software. Refer to the 'Blackmagic Camera Setup Utility' section on for more information.

7 Control Panel Buttons


Buttons for powering the camera, record and playback control, focus peaking, accessing the settings menu, plus iris and auto focus control on compatible EF lenses. Refer to the 'Blackmagic URSA Mini Features' section for more information.

8 Memory Card Slots

Insert CFast 2.0 cards into the slots for record and playback. Refer to the 'CFast Cards' section.

Right Side

URSA Mini's right side panel gives you access to all the video, audio and power connectors plus the side handle rosette mount.

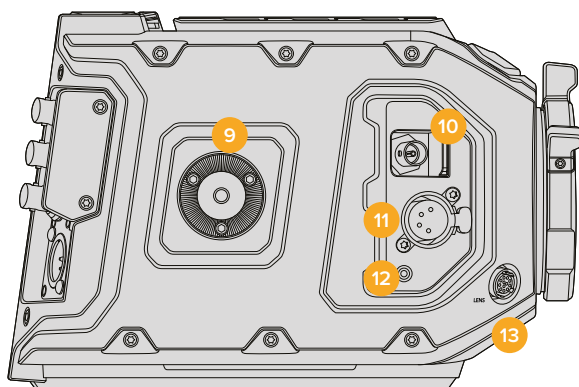

URSA Mini PL model

9 Side Rosette Mount

Standard rosette mount for the side handle. Refer to the 'Getting Started' and 'Blackmagic URSA Mini Shoulder Mount Kit' sections.

10 HD Monitoring Output

3G-SDI connector for down converted 1080HD output. Use with Blackmagic URSA Viewfinder or external monitors. Refer to the 'Camera Video Output' and 'Blackmagic URSA Viewfinder' sections for more information.

11 +12V Power Output

4 pin XLR connector for powering Blackmagic URSA Viewfinder, or external monitors and accessories. Refer to the 'Blackmagic URSA Viewfinder' section for more information.


12 LANC Input

Dedicated 2.5mm TRS LANC connector for Blackmagic URSA Mini side handle. Refer to the 'Getting Started' section for more information on connecting the side handle.

13 Broadcast Lens Control Connector

Provides power and control to compatible PL and B4 mount lenses with 12 pin connections. This connection is only available on URSA Mini PL models. Refer to the 'URSA Mini B4 lens' section in this manual for a list of compatible lenses, including PL and B4 models.

Rear Panel

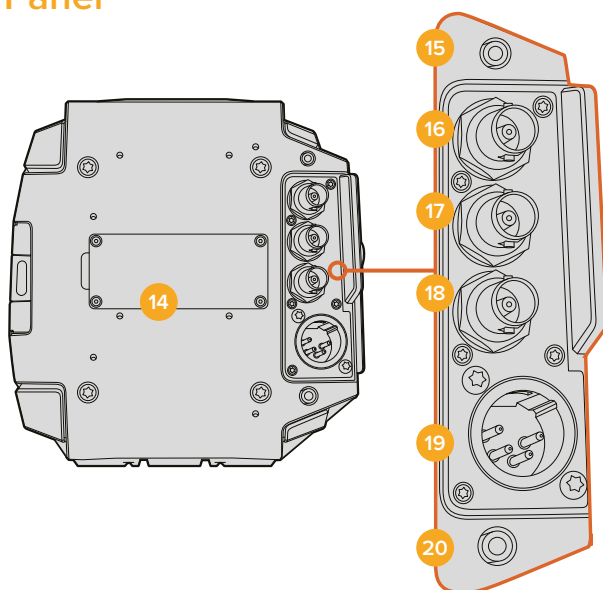

14 Battery Mount Plate

Your Blackmagic URSA Mini has 4 mounting points and a molex connector behind a small cover for attaching the optional V-mount or gold mount battery plate. Refer to the 'Mounting Batteries' section for more information.

15 LANC

This 2.5mm jack is used for external LANC remote control, such as an external record start stop control mounted to a tripod arm. LANC supports record start and stop, plus iris and focus control using compatible EF lenses.

16 12G-SDI In

The 12G-SDI input is used for connecting to a switcher or external recorder such as Blackmagic Video Assist. This lets you monitor the program output from a switcher, or view the playback of your external recording on your Blackmagic URSA Mini's built in LCD and via the HD monitoring output. When working with multiple cameras this is an easy way to check angles prior to shooting.

You can also use an ATEM switcher's 'camera control' feature to remotely adjust many URSA Mini functions. See the section 'controlling URSA Mini with ATEM camera control' for more information. The Blackmagic 3G-SDI Arduino Shield can also be used to provide custom control of the camera over SDI.

17 12G-SDI Out

Blackmagic URSA Mini's 12G-SDI output is used to send HD and Ultra HD video to SDI equipment such as routers, monitors, SDI capture devices, and broadcast switchers.

18 Reference and Timecode In

This input automatically recognizes and switches between timecode and reference input signals. Synchronize Blackmagic URSA Mini to a common reference signal, such as tri-level sync, by connecting to the 'reference' BNC input marked 'REF In'. This lets you sync URSA Mini to other SDI video equipment, for example, when using multiple cameras connected to a switcher. You can also use this connector to record timecode from other professional audio and video equipment, such as audio mixers and clapper boards. This ensures audio and picture, or video from multiple cameras, can be easily synchronized during post production.


19 12V+ Power Input

Use the 4 pin 12-20 Volt XLR connector to plug in power from external sources, such as the supplied power adapter, power outlets, portable batteries and generators.

20 Headphone/Headset

The 3.5mm jack output is used for headphone monitoring and talkback. You can plug in iPhone and Android compatible headsets that have a built in microphone for quick and easy talkback. Talkback audio is embedded in channels 15 and 16 of the SDI output.

Top Panel

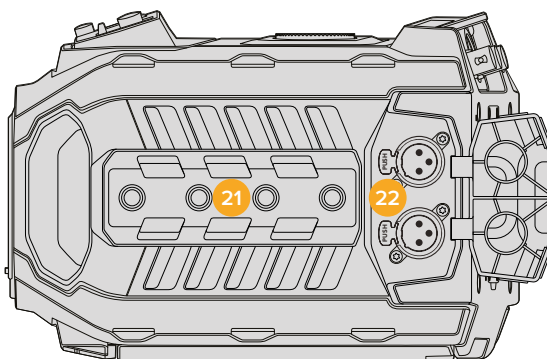

External analog audio can be plugged into the balanced XLR connectors on the top panel.


21 1/4 Inch Mounting Points

Your camera's top panel contains 4 strong mounting points for attaching the top handle and accessories.

22 XLR Audio In

Use the balanced XLR inputs to plug in external analog audio from professional equipment such as audio mixers, PA systems or external microphones. The XLR connectors supply 48V phantom power so you can use microphones that aren't self powered. To enable phantom power select 'inputs' on the 'audio input' setting, plus 'mic low' or 'mic high' on the audio 'input levels' settings. Scroll the menu to reveal the 'phantom power' setting and select 'on'. To disable phantom power, select 'off'. Phantom power is active only when external audio inputs are selected in the audio settings.

Underside

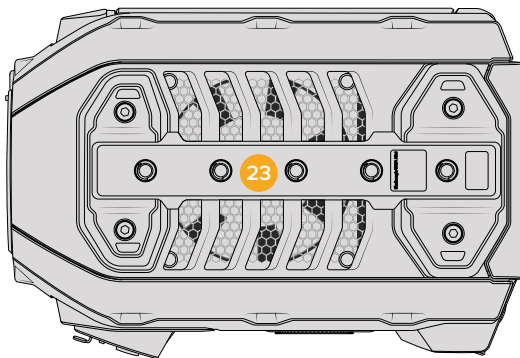


23 1/4 Inch Mounting Points

The 5 mounting points on the underside are used for attaching tripod heads, the optional URSA Mini shoulder mount kit and other accessories.

Camera Buttons and Touchscreen


Your Blackmagic URSA Mini has a control panel on the left side, behind the fold out monitor and contains all the buttons and adjustment knobs you need to change settings and control audio levels. You can monitor your audio levels using the audio meters on the LCD touchscreen.

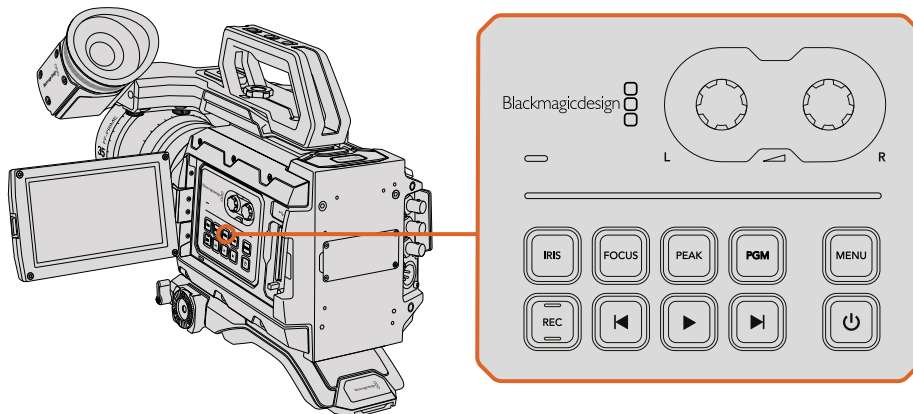

Adjust camera settings using the inside control panel buttons and touchscreen.

Control Buttons

In addition to the inside control panel, your Blackmagic URSA Mini has control buttons on the outside of the LCD and on the side handle. The iris, focus, record and playback buttons all perform the same function.

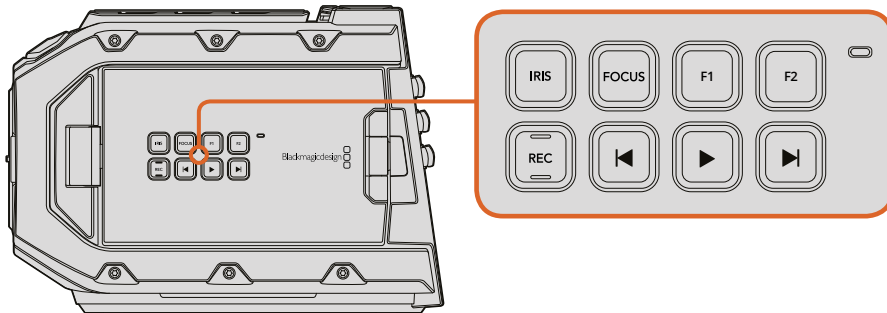

The outside panel buttons let you record and play back clips, turn focus peaking on or off, switch between the program and camera view on the LCD, plus adjust the iris and auto focus when using compatible EF lenses.

Iris

The 'Iris' button activates the automatic aperture setting on compatible lenses. When using video dynamic range settings, a single press of the iris button will set an average exposure based on the highlights or shadows in your shot. When using film dynamic range settings, pressing the iris button sets your exposure to the brightest highlight in your shot.

On URSA Mini EF models, this button works with compatible EF lenses. On URSA Mini PL models, this button works with compatible lenses connected to the broadcast lens controller.

To set your aperture manually, press the forward and reverse skip transport buttons.

Focus

When using an EF mount with an EF lens that supports electronic focus adjustments, press the 'focus' button to activate auto focus. A white focus square will appear on the fold out monitor. Anything within the square will be correctly focused. When the lens is focused, the square will disappear.

NOTE It's important to know that while most EF lenses support electronic focus, some lenses can be set to manual or auto focus modes, and so you need to ensure your lens is set to auto focus mode.

Peak

Press the 'Peak' button to activate focus peaking. The focus peaking feature creates a green edge around the sharpest parts of the image so you can easily confirm your focus. Focus peaking is not recorded to the CFast 2.0 cards, but can be displayed via the HD monitoring output and on the fold out monitor by activating overlays using the touchscreen menu.

Program

The program button is marked PGM and lets you switch the LCD between the camera view and any signal plugged into the 12G-SDI input on the rear panel. This means if you're using URSA Mini in a live broadcast, you can plug in the switcher's program output and monitor it during the shoot. Press and hold the program button to see your program feed. The program feed will continue to display whilst the program button is being held. Double pressing the program button will switch to the program feed, and pressing the program button again will exit the program feed.

NOTE To display a switcher's program output, your camera and switcher must be set to the same frame rate.

Menu

Press the 'menu' button to open the dashboard. Press and hold the 'menu' button to bypass the dashboard and go straight to the settings menu. Refer to the 'settings' section for more information about the dashboard feature and how to adjust settings.

Record


The 'record' button is marked REC on your Blackmagic URSA Mini's control panel, fold out LCD and side handle. Press any of the record buttons to start and stop recording. Refer to the 'recording' section for more information.

Playback Control Buttons

The playback buttons let you start and stop playback, plus skip to the next or previous clip. On Blackmagic URSA Mini EF, the forward and reverse skip buttons can also be used to open or close the iris when using compatible lenses. Refer to the 'playback' section for more information on how to use the playback buttons.

Audio Level Adjustment Knobs

Use the built in adjustment knobs to set the recording levels for audio channels 1 and 2. Turn each knob clockwise or counterclockwise to increase or decrease the recording level for each channel of audio. Monitor the corresponding on screen audio meters as you adjust each knob so you can see the best level to set it to.

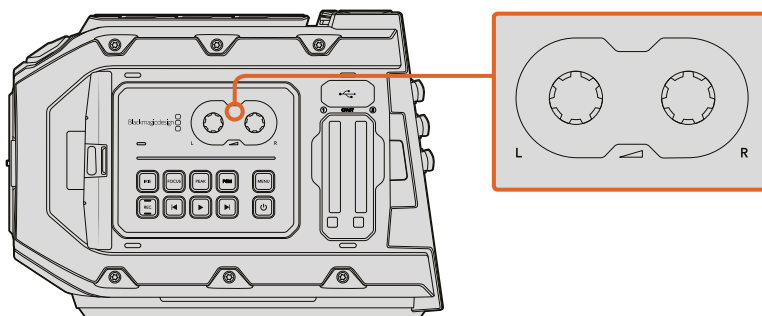


Turn the audio level adjustment knobs clockwise or counterclockwise to increase or decrease your audio recording levels.

Function Buttons

On the outside of Blackmagic URSA Mini's LCD there are two 'function' buttons marked F1 and F2. You can map these to your choice of a variety of commonly used functions using your URSA Mini's 'setup' menu. For more information, see the 'Blackmagic URSA Mini settings' section of this manual.

Side Handle

Your Blackmagic URSA Mini is shipped with a side handle that provides a comfortable, secure grip for the camera, plus built in iris, focus and record start/stop controls. These control signals are sent to the camera via the included LANC cable and connector. The side handle lets you trigger auto iris and focus on compatible EF lenses, plus start or stop recording with the simple press of a button.

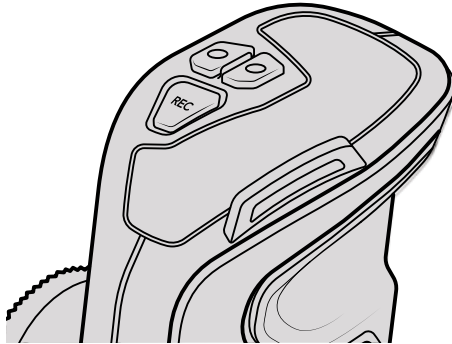

Control buttons on the side handle let you control your Blackmagic URSA Mini via the dedicated LANC port on the side of your camera.


For information on how to attach the side handle to your Blackmagic URSA Mini, refer to the 'getting started' section.

Touchscreen

Your Blackmagic URSA Mini's 5" fold out LCD touchscreen pivots for shooting high and low angles. Buttons on the outside of the LCD panel let you control your URSA Mini when mounted on your shoulder using the URSA Viewfinder and the LCD closed.

Touchscreen Features


The LCD touchscreen features a touch and gesture based interface that is specifically designed for fast and intuitive user operation. By touching and swiping on different areas of URSA Mini's LCD touchscreen, you can quickly access the camera functions you are most likely to use while shooting.

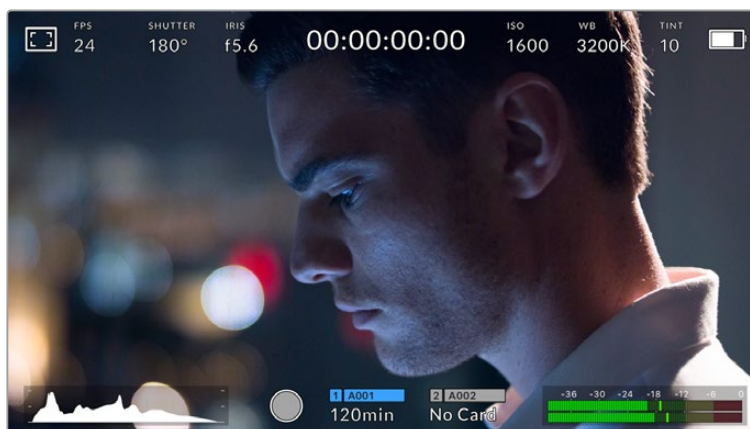

Your URSA Mini's LCD touchscreen has a comprehensive head up display and gives you easy access to your camera's most used settings.

LCD Monitor Options


Tap the 'monitor' icon at the top left of your URSA Mini's LCD touchscreen to access the LCD monitor settings. These settings let you toggle and adjust the appearance of your URSA Mini's monitoring features, including zebra, focus assist, frame guide, and grids. When accessing LCD monitor options, the controls for these features appear in a tabbed menu along the bottom edge of the LCD touchscreen.

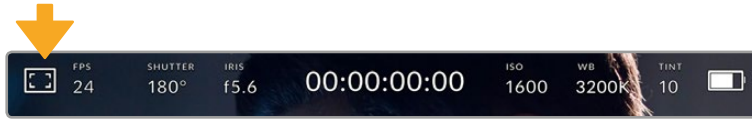

Tap the icon at the top left of your URSA Mini's LCD touchscreen to access LCD monitor options.

Zebra

The 'zebra' setting toggles the appearance of zebra on the LCD touchscreen, as well as setting the zebra level for all URSA Mini outputs.

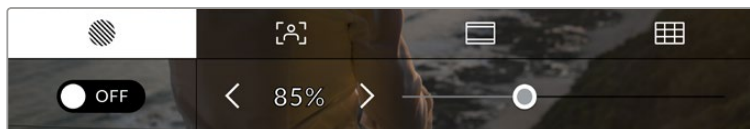

Tap the 'zebra' icon while accessing 'LCD monitor options' to access your URSA Mini's zebra settings.

Zebra displays diagonal lines over areas of your image that exceed a set exposure level. For example, setting zebra to 100% shows which areas are completely overexposed. This is useful for achieving optimum exposure in fixed lighting conditions.

To toggle zebra for the LCD touchscreen, tap the switch icon in the bottom left of the screen.


Set the exposure level that zebra appears at by dragging the slider left and right, or tapping the arrow buttons next to the zebra level percentage. Zebra level is adjustable in five percent increments between 75 and 100 percent exposure.

For information on enabling zebra on your camera's front and main SDI outputs, see the 'monitor settings' section in this manual.

TIP If you're shooting in variable light such as outdoors on a partly overcast day, setting your zebra level lower than 100 can warn you of potential overexposure.

Focus Assist

The 'focus assist' setting toggles the appearance of focus assist on the LCD touchscreen, as well as setting the level of focus assistance for all outputs on your URSA Mini.

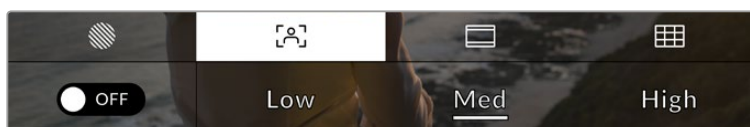

Tap the 'focus assist' icon while accessing 'LCD monitor options' to access your URSA Mini's focus assist settings.

To toggle focus assistance for the LCD touchscreen, tap the switch icon in the bottom left of the screen while in the 'focus assist' tab.

To set the level of focus assistance for all outputs on your URSA Mini, tap the 'low,' 'medium' or 'high' titles along the bottom of your touchscreen.


For information on enabling focus assist on your camera's front and main SDI outputs, see the 'monitor settings' section in this manual.

TIP Your URSA Mini has two focus assist modes. You can switch between 'peaking' and 'colored lines' focus assistance in the 'monitor' settings menu. For more information, see the 'monitor settings' section in this manual.

TIP The optimum level of focus assistance varies shot by shot. When focusing on actors, for example, a higher level of focus assistance can help resolve edge detail in faces. A shot of foliage or brickwork, on the other hand, may show distracting amounts of focus information at higher settings.

Frame Guides

The 'frame guide' setting toggles the appearance of frame guides on the LCD touchscreen. You can also choose from seven frame guide options for all outputs on your URSA Mini.

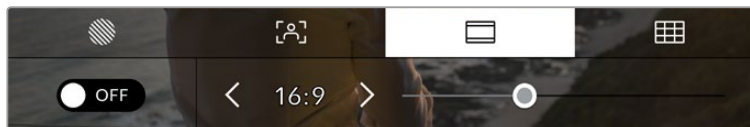

Tap the 'frame guides' icon while accessing 'LCD monitor options' to access your URSA Mini's frame guide settings.

Frame guides include aspect ratios for various cinema, television and online standards.


To toggle the appearance of frame guides on your URSA Mini's LCD touchscreen, tap the switch icon in the bottom left of the screen.

Choose the frame guide you want to use by dragging the slider left and right, or tapping the arrow buttons on either side of the currently selected aspect ratio.

The available guides are:

- **2.35:1, 2.39:1 and 2.40:1**
Displays the broad widescreen aspect ratio compatible with anamorphic or flat widescreen cinema presentation. The three widescreen settings differ slightly based on the changing cinema standards over time. 2.39:1 is one of the most prominent standards in use today.
- **1.85:1**
Displays another common flat widescreen cinema aspect ratio. This ratio is slightly wider than HDTV 1.78:1 but not as wide as 2.39:1.
- **16:9**
Displays a 1.78:1 aspect ratio compatible with 16:9 HD television and computer screens. This ratio is commonly used for online video.

- **14:9**
Displays a 14:9 aspect ratio used by some television broadcasters as a compromise between 16:9 and 4:3 television sets. Ideally, both 16:9 and 4:3 footage remains legible when center cropped to fit 14:9. You can use this as a compositional guide if you know your project may be broadcast by a television station that uses 14:9 cropping.
- **4:3**
Displays the 4:3 aspect ratio compatible with SD television screens, or to help with framing when using 2x anamorphic adapters.

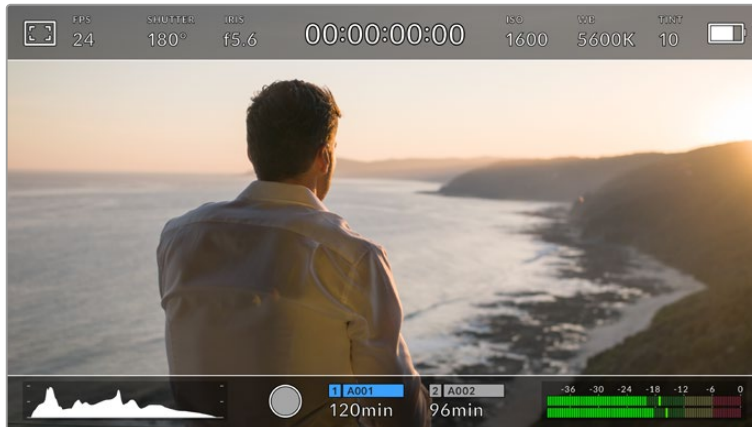


URSA Mini LCD touchscreen with 2.40:1 frame guides enabled.

TIP You can change the opacity of frame guide overlays. For more information see the 'monitor settings' section of this manual.

NOTE For information on enabling frame guides on your camera's front and main SDI outputs, see the 'monitor settings' section in this manual.

Grids

The 'grids' setting toggles the appearance of a rule of thirds grid, crosshair or center dot on the LCD touchscreen, as well as setting which overlay is visible on all URSA Mini outputs.

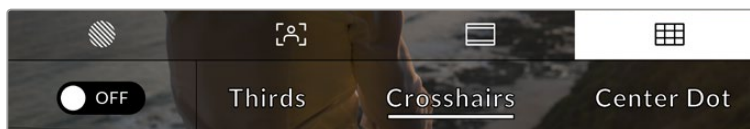


Tap the 'grids' icon while accessing 'LCD monitor options' to access your URSA Mini's grid settings.

Grids and crosshairs are overlays that can help with image composition. When 'grids' are enabled, your URSA Mini can show a rule of thirds grid, crosshairs, or center dot.

To toggle the appearance of grids on your URSA Mini touchscreen, tap the switch icon in the bottom left of the screen.

When your URSA Mini is set up and connected to an ATEM switcher as the current program source, and 'grids' are set to 'on', the red 'Program' tally outline will automatically illuminate on your LCD.

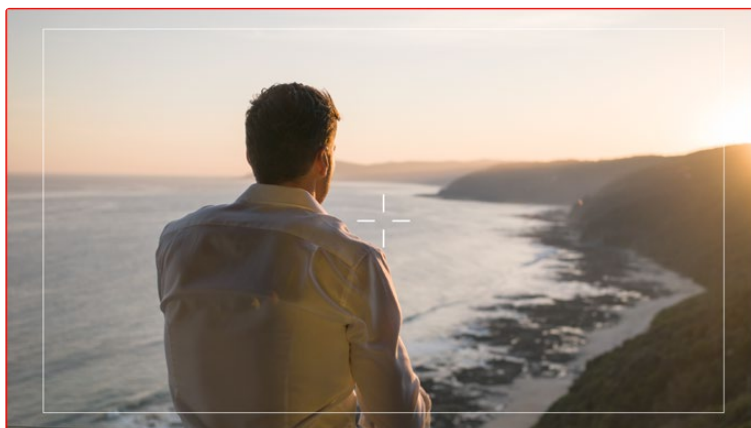

To set which overlay you want to display on all URSA Mini outputs, tap the ‘thirds,’ ‘crosshairs,’ or ‘center dot’ options.

- **Thirds**

The ‘thirds’ setting displays a grid with two vertical and horizontal lines placed in each third of the image. Thirds are an extremely powerful tool to help compose your shots. For example, the human eye typically looks for action near the points where the lines intersect, so it’s helpful to frame key points of interest in these zones. An actor’s eyeline is commonly framed along the top third of the screen, so you can use the top horizontal third to guide your framing. Thirds are also useful to maintain framing consistency between shots.



The rule of thirds grid automatically scales to any on screen frame guides.

- **Crosshairs**

The ‘crosshair’ setting places a crosshair in the center of the frame. Like thirds, the crosshair is a very useful compositional tool, making it easy to frame the subject of a shot in the very center of a frame. This is sometimes used when filming scenes that will be assembled using very fast cuts. Keeping viewers’ eyes focused on the center of a frame can make rapid editing easier to follow.

- **Center Dot**


The ‘center dot’ setting places a dot in the center of the frame. This works in exactly the same way as the ‘crosshair’ setting, albeit with a smaller overlay that you may find less intrusive.

TIP For information on enabling grids on your URSA Mini’s front and main SDI outputs, see the ‘monitor settings’ section in this manual.

NOTE You can enable a combination of 'thirds' and 'crosshairs' or 'thirds' and 'center dot' by tapping both options in the 'grids' menu. 'Crosshairs' and 'center dot' cannot be selected together.

Frames Per Second

The 'FPS' indicator displays your currently selected frames per second.

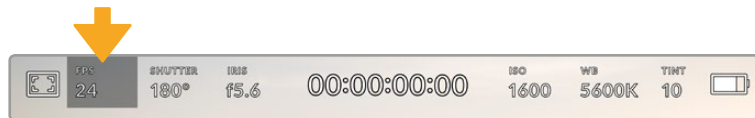

Your URSA Mini's frames per second indicator.
Tap this to access frame rate settings.


Tapping the 'FPS' indicator lets you change your camera's sensor and project frame rates via a menu at the bottom of your LCD touchscreen.

Project frame rate

The project frame rate is URSA Mini's recording format frame rate and provides a selection of common frame rates used in the film and television industry. This frame rate is normally set to match your playback speed used in your post production workflow.

Your Blackmagic URSA Mini has 8 project frame rate settings including 23.98, 24, 25, 29.97, 30, 50, 59.94 and 60 frames per second.

To adjust your URSA Mini's project frame rate while in the 'FPS' menu, tap the left or right arrows next to the current frame rate at the bottom left of your touchscreen. Alternatively, you can drag the slider left or right.

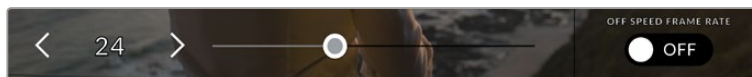


Tap the arrows on either side of the project frame rate
or move the slider to make adjustments.

TIP Your URSA Mini's project frame rate also sets the frame rate of the front and main SDI outputs.

Sensor frame rate

The sensor frame rate sets how many actual frames from the sensor are recorded every second. This frame rate will affect how fast or slow your video will play back at your set project frame rate.

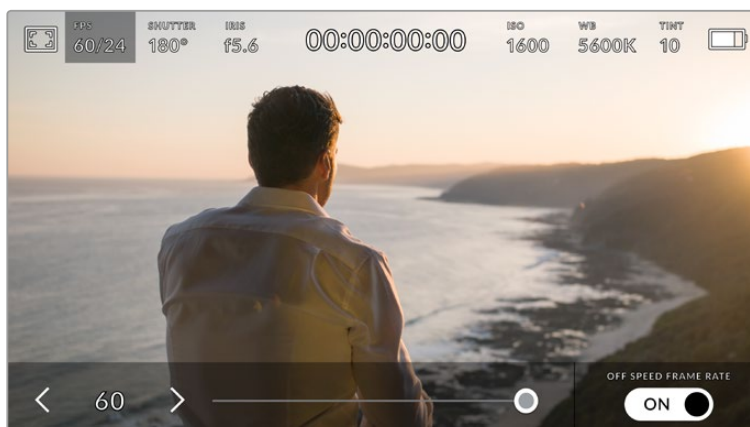

With 'off speed frame rate' enabled, tap the arrows on either side of the sensor frame rate or move the slider to make adjustments.

By default, your URSA Mini's project and sensor frame rates are matched for a natural playback speed. However, by tapping the 'off speed frame rate' switch icon in the bottom right hand side of your URSA Mini's 'FPS' menu, you can independently set your sensor frame rate.

To change your sensor frame rate, tap the arrows next to the sensor frame rate indicator in the lower left of your touchscreen, or drag the slider left or right.

You can create dynamic and interesting speed effects in your clips by varying the sensor frame rate. Setting the sensor frame rate higher than your project frame rate will create slow motion during playback. Alternatively, the lower your sensor frame rate, the faster your clips will appear. The principle is similar to overcranking and undercranking a film camera. Overcranking speeds up the sensor frame rate so you can stretch out moments in time during playback to enhance emotion. Undercranking slows down the sensor frame rate so you can increase the action in fast moving scenes. The creative possibilities are endless and entirely up to you!


TIP When adjusting your URSA Mini's frame rate by dragging the frames per second slider, changes will only take once you have released the slider.

NOTE When 'off speed frame rate' is selected your URSA Mini's audio and video are no longer synced. This is true even if you set the same project and sensor frame rate. For this reason, 'off speed frame rate' should never be selected if you want to guarantee audio syncing.

NOTE For information on the maximum frame rates available for each recording format and codec, refer to the table in the 'recording' section of this manual.

Shutter

The 'Shutter' indicator displays your shutter angle. By tapping this indicator, you can manually change your URSA Mini's shutter angle or configure shutter priority auto exposure modes.

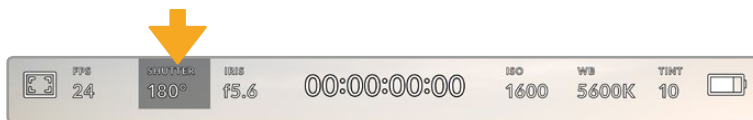

Your URSA Mini's shutter indicator.
Tap this to access shutter settings.

Shutter angle defines the level of motion blur in your video, and can be used to compensate for varying light conditions. 180 degrees is the optimum shutter angle for capturing satisfying motion blur in most conditions. However as lighting conditions change, or the amount of movement in your scene increases, you may decide to adjust accordingly.


For example, 360 degrees is considered 'wide open' and allows maximum light onto the sensor. This is useful for low light conditions with subtle movement in your scene. Alternatively, if shooting motor sport with rapid movement, a narrow shutter angle, for example 90 degrees, will provide minimal motion blur for sharper, crisper images.

NOTE When shooting under lights, your shutter angle can effect the visibility of flicker. Your URSA Mini will automatically calculate flicker free shutter angles for your current frame rate. These angles are effected by mains power frequency in your region. You can set your local power frequency to 50Hz or 60Hz in your URSA Mini's setup menu. See the 'setup settings' section in this manual for more information.

Tapping the 'shutter' indicator brings up the shutter angle menu along the bottom of your URSA Mini's touch screen. If you have auto exposure set to 'off,' this screen will show you your currently selected shutter angle, as well as the available flicker free shutter angles, based on the mains power frequency you have selected in your URSA Mini's 'setup' menu. For more information, see the 'setup settings' section in this manual.

NOTE The characteristics of individual light sources may still cause flicker even when using flicker free angles. We recommend always performing a test shoot when not using continuous lights.

To select one of the flicker free shutter angles, simply tap it or use the arrows on either side of the current shutter angle indicator to cycle through available angles.

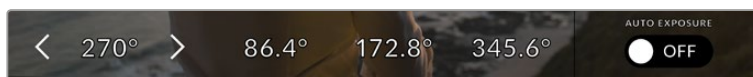

Your URSA Mini will suggest flicker free **shutter angles** based on the mains power frequency you choose in the 'setup' menu.

If you are shooting outside, or using flicker free lights, you can also manually select a shutter angle by double tapping the current shutter indicator at the bottom left of your screen. This will bring up a keypad which you can use to set any shutter angle between 5 and 360 degrees.



Use the manual shutter keypad to enter your shutter timing of choice when shooting outdoors or under flicker free lights.

Your URSA Mini has three shutter based auto exposure modes. To select one of these, tap the 'auto exposure' button in the far right of the shutter menu.

Shutter


This setting automatically adjusts shutter speed to maintain a constant exposure while keeping iris aperture constant. If you want to maintain a fixed depth of field, this is the setting to choose. It's worth mentioning that the subtle automatic adjustments of the shutter may have an effect on motion blur. It's also worth keeping an eye out for any flicker that may be introduced from various light fixtures on indoor shoots. URSA Mini's auto iris feature is not available when the 'shutter' auto exposure mode is selected.

Shutter + Iris

Maintains the correct exposure levels by adjusting the shutter, then the aperture. If the maximum or minimum available shutter speed is reached and exposure still cannot be maintained, URSA Mini will begin adjusting the aperture to keep exposure constant.

Iris + Shutter

Maintains the correct exposure levels by adjusting the aperture, then the shutter speed. If the maximum or minimum available aperture is reached and exposure still cannot be maintained, URSA Mini will begin adjusting the shutter speed to keep exposure constant.

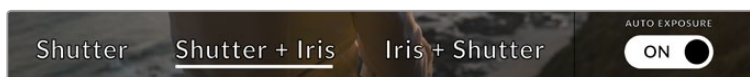


While in the shutter menu, tap 'auto exposure' to access shutter based auto exposure modes.

TIP When an auto exposure mode that effects the shutter is enabled, a small "A" will appear next to the shutter angle indicator at the top of your URSA Mini touchscreen.

Iris


The 'Iris' indicator displays your current lens aperture. By tapping this indicator, you can change the aperture of compatible lenses and configure iris based auto exposure modes.

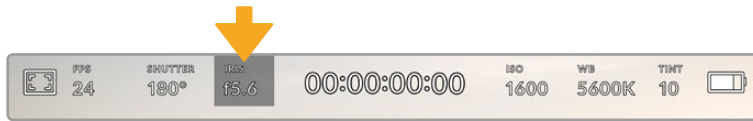

Your URSA Mini's iris indicator.
Tap this to access shutter settings.

NOTE To adjust your Iris from the LCD touchscreen, your URSA Mini must be fitted with a lens that supports changing aperture via the camera. If you are using a B4 or PL lens connected via the broadcast 12 pin connector on URSA Mini PL, make sure that the lens iris switch on the handgrip is set to 'A' or 'auto.'

Tapping the 'iris' indicator once brings up the iris menu along the bottom of your URSA Mini touchscreen. You'll see your current lens aperture at the far left of this menu. You can change the aperture by tapping the left and right arrows on either side of the current aperture, or moving the slider left or right.

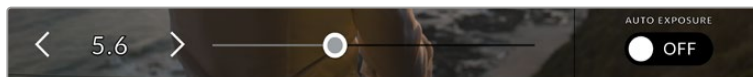

While in the 'iris' menu, tap the arrows on either side of the iris indicator or use the slider to adjust iris settings.

Tapping the 'auto exposure' switch icon at the far right of the iris menu opens the iris auto exposure menu. This gives you the following auto exposure options.

Iris


This setting automatically adjusts the aperture to maintain a constant exposure, while keeping shutter speed constant. This will keep motion blur constant, but may affect your depth of field.

Iris + Shutter

Maintains the correct exposure levels by adjusting the aperture, then the shutter speed. If the maximum or minimum available aperture is reached and exposure still cannot be maintained, URSA Mini will begin adjusting the shutter speed to keep exposure constant.

Shutter + Iris

Maintains the correct exposure levels by adjusting the shutter, then the aperture. If the maximum or minimum available shutter speed is reached and exposure still cannot be maintained, URSA Mini will begin adjusting the aperture to keep exposure constant.

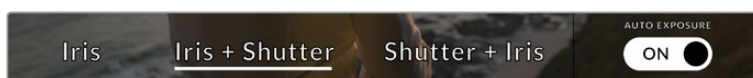

While in the iris menu, tap 'auto exposure' to access iris based auto exposure modes.

TIP Automatic exposure works smoothly with compatible B4 or PL lenses which are designed for video or film production. EF lenses may produce noticeable ‘steps’ in exposure when changing aperture. For this reason, we recommend using only ‘shutter’ auto exposure mode if shooting on URSA Mini EF.

TIP When an auto exposure mode that effects the iris is enabled, a small “A” will appear next to the iris indicator at the top of your URSA Mini touchscreen.

Duration Display

At the top of your URSA Mini LCD touchscreen, you’ll see your camera’s duration display.



Your URSA Mini's duration display. This will turn red while recording.

The duration display provides a timecode counter for checking the duration of your clips and monitoring timecode during recording and playback. The counter displays a time sequence showing Hours:Minutes:Seconds:Frames and will progress through the sequence as you record or play back clips. The timecode will turn red during recording.

The displayed duration of each clip starts from 00:00:00:00 for each clip. The clip duration of the current, or last recorded, clip is displayed on the touchscreen. Time of day timecode is embedded into clips for easier post production.

To see the time of day timecode, simply tap the duration display. Tap the duration display again to return to clip duration.

Additional status indicators may appear around the duration display:

W

Appears to the left of the duration display when your URSA Mini is using a windowed sensor mode.

TC

Appears to the right of the duration display when showing time of day time code.

EXT

Appears to the right of the duration display if an external timecode is connected and valid.

INT

Appears to the right of the duration display if the camera is running off an internal timecode after being ‘jam synced’ and disconnected.


GEN

Appears when a valid reference source is connected and locked, based on the reference input settings.


ISO

The 'ISO' indicator displays your URSA Mini's current ISO setting, or light sensitivity. Tapping this indicator lets you adjust your ISO to suit varying lighting conditions.

The optimum ISO for URSA Mini 4K is 400. The optimum ISO for URSA Mini 4.6K is 800.

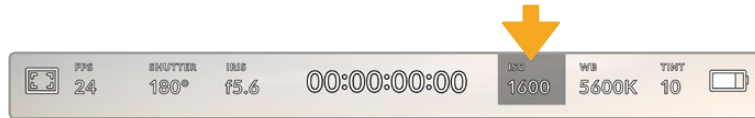

Your URSA Mini's ISO indicator. Tap this to access ISO settings.

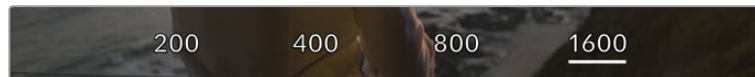


While in the 'ISO' menu, your URSA Mini's ISO settings appear along the bottom of the LCD touchscreen.

Depending on your situation, you may choose a lower or higher ISO setting. For example, in low light conditions ISO 1600 can be suitable when shooting on URSA Mini 4.6K but may introduce some visible noise. In bright conditions ISO 200 can provide richer colors.

White Balance

The 'WB' and 'TINT' indicators display your camera's current white balance and tint. Tapping these indicators lets you adjust your camera's white balance and tint to suit varying lighting conditions.

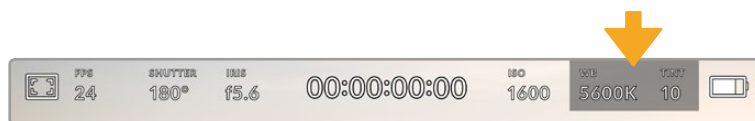






Your URSA Mini's white balance and tint indicators. Tap these to access white balance and tint settings.

Every light source emits a color. For example, a candle flame emits a warm color, and an overcast sky emits a cool color. White balance settings are used to color balance your image so white stays white by adjusting the mix of orange and blue in your image. For example, when shooting under tungsten lamps which emit a warm, orange light, selecting 3200K adds some blue to the image. This balances the color so white is accurately recorded.

Your URSA Mini comes with white balance presets for a variety of color temperature conditions.

These are:

	Bright sunlight	(5600K)
	Incandescent bulbs	(3200K)
	Fluorescent bulbs	(4000K)
	Mixed light	(4500K)
	Cloud	(6500K)

You can customize any of these presets by tapping or holding the arrow icons to the left and right of the temperature indicator in the bottom left of the 'white balance' menu. Each tap moves the color temperature up or down 50K, but holding the arrow icons down will increase these increments for faster changes. Alternatively, you can move the temperature slider in the middle of the 'white balance' menu.

To further dial in your image, you can adjust the 'tint.' This adjusts the mix of green and magenta in your image. For example, adding a bit of magenta can compensate for the green cast of many fluorescent lights. Many of your URSA Mini's white balance presets include a little bit of tint.



Tapping the white balance and tint indicator on your URSA Mini gives you access to five presets, as well as a white balance indicator and slider on the left, and a tint indicator on the right. Adjust these to set a custom white balance for your lighting conditions.

While in the 'white balance' menu, your camera's current tint setting is shown at the bottom right of the screen. To adjust the tint, simply tap or hold the arrows to the left and right of the tint indicator. The available range is -50 to +50 in one unit increments. Holding down on the arrows speeds up adjustment.

NOTE Customizing the white balance or tint will change your preset to 'CWB,' or custom white balance. Custom white balances are persistent; your CWB settings will stay configured between power cycles, and when switching to a preset and back to CWB. This makes it easy to compare a custom white balance to the last preset used.

Auto White Balance

Your URSA Mini can set white balance automatically. Tapping 'AWB' will bring up the white balance screen.


When setting white balance automatically, a square will be overlaid on the center of your image. Fill this square with a neutral surface such as a white or gray card and tap 'update.' Your URSA Mini will automatically adjust its white balance and tint values to ensure that the average of the white or grey within the white balance square is as neutral as possible. Once updated, this will be set as your camera's custom white balance.



Tapping the 'AWB' icon in the white balance menu will bring up the auto white balance screen. Use this with a white or neutral grey surface to automatically set a neutral white balance.

Power

Your URSA Mini's power status is displayed in the top right of the LCD screen. There are four possible indicators:

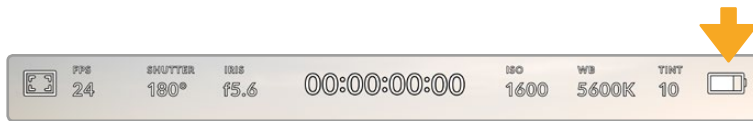

Your URSA Mini's power indicator is at the top right of the LCD touchscreen. While using battery power, tapping this toggles between 'voltage' and 'percentage' displays.



AC

Displayed when your URSA Mini is plugged into mains power.



Percentage

If you are using a percentage accurate battery and plate combination and have your battery display set to 'percentage,' the indicator will display your battery level as a percentage. At 20% charge remaining, the indicator will turn red.



Battery bars

If your battery display is set to 'percentage' but your battery plate and battery combination does not support percentage accurate battery information, your URSA Mini will display a battery icon that drains in 25% increments. At 20% charge remaining, the battery bar will turn red.



Voltage

When your battery display is set to 'voltage,' this indicator will display your battery's remaining voltage. When your battery drops below 12.5 volts, this indicator will turn red. Your URSA Mini will automatically shut down once the battery reaches 11.9 volts.

NOTE When using battery power, you can switch between 'voltage' and 'percentage' or 'battery bars' power indicators by tapping the power indicator. For more information on setting up and reading different battery display modes, see the 'setup' section in this manual.

TIP A list of batteries that support percentage accurate power information is provided in the 'mounting batteries' section of this manual.

Histogram

At the bottom left of your URSA Mini touchscreen, you'll see the histogram. The histogram shows the contrast between whites and blacks along a horizontal scale.



The histogram gives you an indication of the tonal range between shadows and highlights in your clip. It is also a helpful tool for checking the balance of your exposure and to prevent your highlights from clipping.

The left edge of the histogram displays shadows, or blacks, and the far right displays highlights, or whites. When you close or open the lens aperture, you'll notice the information in the histogram moves to the left or right accordingly. You can use this to check 'clipping' in your image shadows and highlights. If the left and right of your edges of the histogram come to an abrupt stop rather than falling off gradually, you may be losing highlight or shadow detail.

NOTE If you don't see a histogram in the bottom left of your touchscreen, your LCD monitor settings may be set to display 'codec and resolution.' See the 'monitor settings' section in this manual for more information.

Record button

Next to the histogram at the bottom of your URSA Mini's touchscreen, you'll see a round grey button. This is the 'record' button. Tap this once to begin recording, and tap it again to stop. While recording, the button and the timecode at the top of your URSA Mini touchscreen will turn red.




Your URSA Mini's 'record' button, next to the CFast indicators at the bottom of the LCD touchscreen.



The 'record' button turns red when recording.

Dropped Frame Indicator

The 'record' button will be overlaid with a flashing '!' indicator if your URSA Mini begins dropping frames while recording. The time remaining indicator for the affected card or cards will also turn red. For example, if you are recording in dual card mode and card 1 is dropping frames, the '!' indicator will appear over the 'record' button, and the time remaining indicator on card 1 will turn red. This lets you know if a particular card is too slow for your currently selected codec and resolution. The 'dropped frame indicator' will also display if you have dropped a frame on the previously recorded clip. This indicator will continue to display until another clip is recorded, or the camera is power cycled.

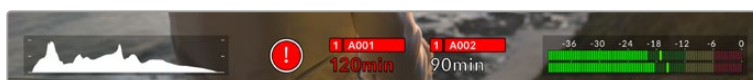

Dropped frame indicator for CFast card 1 dropping frames.

TIP If you have the your URSA Mini's door LED enabled, this will flash rapidly when dropped frames are detected. For more information, see the 'setup settings' section of this manual.

TIP Refer to the 'Choosing a CFast 2.0 card' for more information on how to avoid dropping frames.

NOTE You can set your URSA Mini to stop recording if dropped frames are detected to prevent a situation where you waste time shooting unusable footage if you don't notice the dropped frame indicator. See the 'record settings' section in this manual for more information.

Recording Time Remaining

At the bottom of your URSA Mini touchscreen, you'll see the CFast card indicators.

When a CFast card is inserted, the CFast indicator at the bottom of the screen will show how much recording time is left on the card. The time is shown in minutes and will vary according to your selected frame rate and codec.

The indicator will automatically recalculate if either of these settings are changed. When there is approximately 5 minutes remaining on your card, the indicator text will turn red, and will blink intermittently when there is only 2 minutes remaining. The indicator displays FULL when a card reaches maximum capacity.

The card name will also be shown in a small bar above the time remaining. This bar will turn blue to indicate that it is the card that the camera will be recording to. While recording, the bar will turn red.

Tapping the CFast card indicators will bring up the storage and formatting menu.



Your URSA Mini's CFast indicators will display the name of your CFast card and the record time remaining in minutes.



Tap the CFast indicators on your URSA Mini's LCD touchscreen to access the storage manager.

This menu displays the amount of free space on each CFast card currently in your URSA Mini, as well as the card name, length of the last clip, total number of clips per card, and each card's file format.

You can format CFast cards from this menu. For more information on formatting CFast cards using URSA Mini, see the 'preparing a CFast card for recording' section of this manual.

TIP Tapping the card name in the storage menu sets it as the active card. Your URSA Mini will fill this card first.

Audio Meter

The peak audio meters display audio levels for channels 1 and 2 when using the internal microphone, or via external audio when connected. The display is calibrated to dBFS units and features peak hold indicators which stay visible for a short time so you can clearly see the maximum levels reached.



The colored bars on the audio meter represent peak audio levels. Ideally your peak audio levels should fall in the upper end of the green zone, between -20 and -12dBFS. If your peaks enter into the yellow or red zones, corresponding to -12 and -6dBFS your audio is in danger of clipping.

To achieve optimum audio quality, ensure your audio levels do not reach 0 dBFS. This is the maximum level that your camera can record, meaning that any audio that exceeds this level will be clipped, resulting in distortion.

You can tap the audio meter to bring up volume controls for audio input channels 1 and 2, as well as headset or speaker volume.



Tap the audio meters on your URSA Mini LCD touchscreen to easily access volume and headset or speaker settings.

Double tap to zoom


You can magnify any part of your URSA Mini's preview image by double tapping the LCD touchscreen. The area you tap will be magnified, and you can move around the image by dragging your finger around the LCD touchscreen. This is very helpful when checking focus. To return to standard magnification, simply double tap your camera's touchscreen again.



While zoomed in, an indicator in the top left of your LCD touchscreen will show which part of the image you are viewing. You can move around the image by dragging your finger along the screen as you would on a smartphone or tablet.

Full Screen Mode

It can be useful when framing or focusing a shot to temporarily hide your touchscreen's status text and meters. Simply swipe up or down on URSA Mini's LCD touchscreen to hide these. The record indicator, frame guides, grids, focus assist and zebra will remain visible.

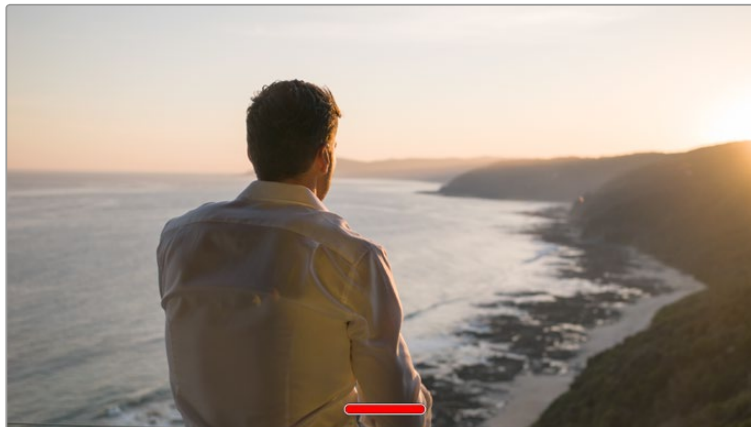

Swipe up or down to hide all status indicators on your URSA Mini LCD touchscreen.

Playback Menu

Tap the 'play' control button on your URSA Mini to access the playback menu. You can control previously recorded clips with your camera's control buttons or the LCD touchscreen.


When using the LCD touchscreen, tap 'play' once to start playback and again to pause. Use the forward and reverse buttons just as you would on a CD player. Tapping 'forward' once will move you to the next clip, while tapping 'reverse' once will move you back to the beginning of the current clip. Tapping 'reverse' twice will move to the beginning of the previous clip.

To shuttle, hold down either the forward or reverse transport buttons. This will play your footage

back at twice regular speed in either forward or reverse, depending on which transport key you held.

Once shuttling, you can change the shuttle rate by tapping the transport keys again. Each time you tap the transport key in the same direction you will double the shuttle rate. The maximum shuttle rate is x16 normal speed. Tapping the transport key again at x16 speed will return you to x2 speed. Tapping the opposite direction will halve the current shuttle speed until you reach 2x speed. You can return to normal playback by tapping the 'play' button.

Tapping the 'record' control button in playback mode will return your camera to 'standby' mode, ready to record.

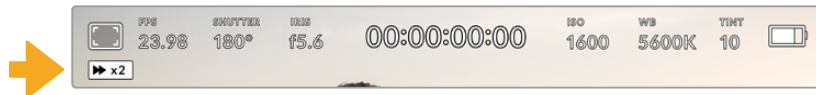

The shuttle speed indicator displays the speed and direction of footage being fast forwarded or reversed.


TIP Swipe up or down on your URSA Mini's touchscreen to hide status text while playing back footage.

TIP Entering the slate in playback mode will allow you to mark the current clip 'good take' in metadata. For more information, see the 'entering metadata' section in this manual.

URSA Mini Settings

Dashboard

Pressing the 'menu' control button on your URSA Mini will bring up your camera's dashboard. This is a tabbed menu containing the settings not available from your URSA Mini's head up display. Settings are divided by function into 'record,' 'monitor,' 'audio,' 'setup,' 'presets,' and 'LUTS' tabs. Some tabs, such as 'record,' 'monitor,' and 'setup' contain multiple pages. You can cycle between these pages by tapping the arrows on the left and right of the settings screen, or swiping left or right as you would on a smartphone or tablet.

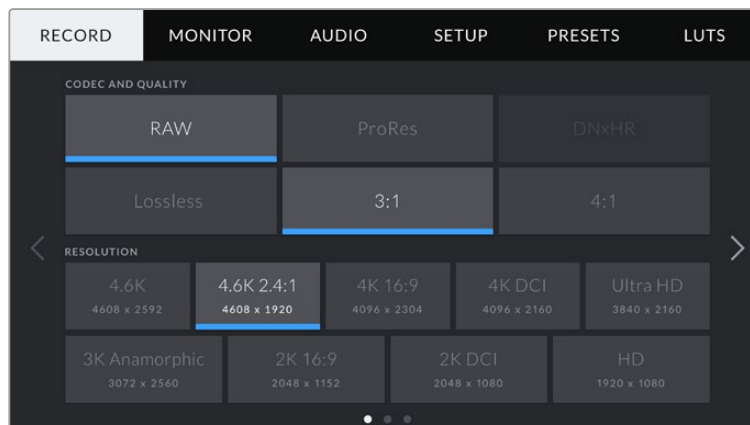

Tap the 'record,' 'monitor,' 'audio,' 'setup,' 'presets,' and 'LUTS' headings to move between your URSA Mini's dashboard tabs.

Record Settings

The 'record' tab allows you to set your video format, codec, and resolution, as well as other settings which affect the footage saved by your URSA Mini, such as preferred card and detail sharpening. This menu has three pages, which you can cycle through by tapping the arrows at the edge of your camera's touchscreen, or swiping left or right.

Record Settings 1


The first page of the 'record' settings tab contains the following settings.



Codec and Quality

The 'codec and quality' menu is split into two rows. The top row lets you choose between two codec families, CinemaDNG RAW and Apple ProRes, while the bottom row offers quality options within those families. For example, the quality options available within the RAW codec family are 'lossless', '3:1' and '4:1'.

The DNxHR codec family is planned to be available in an upcoming release.

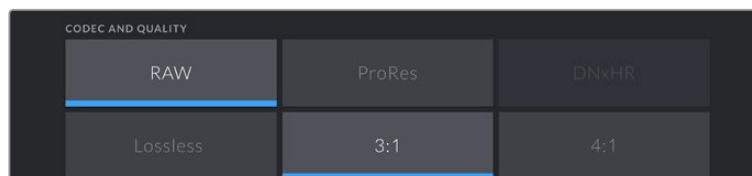

TIP The amount of video you can record on a CFast card will increase when choosing codecs that utilize higher compression. Refer to the 'record duration table' in the 'recording' section for more information.

Resolution

This setting works in combination with the 'codec' setting. Use it to select the resolution for your desired recording format.


For example, if you want to record Ultra HD clips using ProRes HQ, select 'ProRes' and 'HQ' in the 'codec and quality' menu. Now choose 'Ultra HD' in the resolution menu.



NOTE Blackmagic URSA Mini supports a wide range of Cinema DNG RAW and Apple ProRes resolutions from 4.6K or 4K on URSA Mini 4.6K and URSA Mini 4K, respectively, down to HD.

Record Settings 2

The second page of the 'record' settings tab contains the following settings.

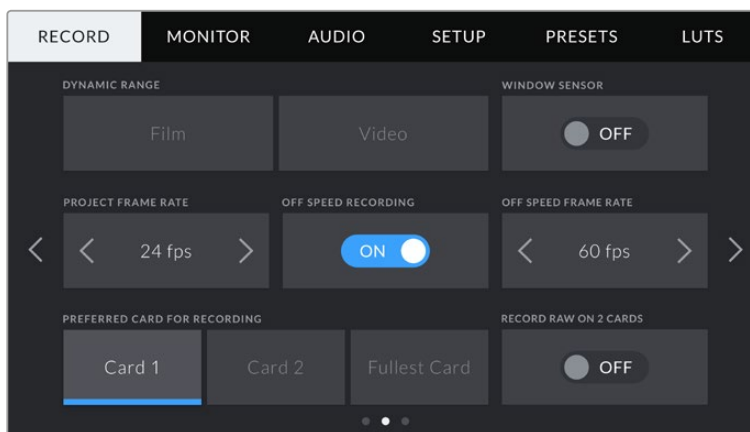

Dynamic Range

Adjust the 'dynamic range' setting by tapping the dynamic range icons. Blackmagic URSA Mini has two dynamic range settings:

- **Film**

The 'film' setting shoots video using a log curve giving you 12 to 15 stops of dynamic range, depending on your URSA Mini model, and maximizes the information in your video signal to help you get the most out of color grading software, such as DaVinci Resolve.

NOTE When recording in CinemaDNG RAW formats, only the film dynamic range setting is available.

- **Video**

The 'video' setting is similar to the REC 709 color standard for high definition video. This lets you work faster by recording directly to the compressed video formats in a color space suitable for direct delivery or minimal post processing.

Window Sensor

URSA Mini can be set to use the 'full' sensor area. Alternatively, for even higher frame rates you can use 'window' mode. This will use only the amount of sensor pixels needed for a given video format rather than downscaling images from the entire sensor.

This setting is available when shooting below your URSA Mini's maximum resolution. For example, 'window sensor' is available when shooting 4.6K 2.4:1, 4K, 3K anamorphic, 2K or HD ProRes footage on URSA Mini 4.6K.

The fastest frame rates are available when shooting HD footage in windowed mode.

TIP When using 'window sensor' mode, your URSA Mini's 'resolution' settings will be labelled 'resolution - sensor windowed' to reflect this.

NOTE As the HD 'window sensor' and 2K 'window sensor' modes use only the very center of URSA Mini's sensor, the field of view of any given lens will appear narrower due to the crop factor involved. When using a 20mm lens to shoot HD footage in windowed sensor mode, for instance, field of view of URSA Mini will be equivalent to a 48mm lens.

Project Frame Rate

The project frame rate is URSA Mini's recording format frame rate and provides a selection of common frame rates used in the film and television industry. For example, 23.98 frames per second using 4K ProRes HQ. This frame rate is normally set to match your playback speed and audio sync used in your post production workflow and delivery requirements.

Your Blackmagic URSA Mini has 8 project frame rate settings including 23.98, 24, 25, 29.97, 30, 50, 59.94 and 60 frames per second.

Off Speed Recording

By default, your URSA Mini's project and sensor frame rates are matched for a natural playback speed. However, by tapping the 'off speed frame rate' switch icon you can set your sensor frame rate independently.

Off Speed Frame Rate

With 'off speed frame rate' enabled, simply tap the arrows next to the 'off speed frame rate' indicator to set your URSA Mini's sensor frame rate.

The sensor frame rate sets how many actual frames from the sensor are recorded every second. This frame rate will affect how fast or slow your video will play back at your set project frame rate.

TIP For more information on off speed frame rates, see the 'FPS' guide in the 'touchscreen features' section of this manual.

NOTE For information on the maximum frame rates available for each recording format and codec, refer to the 'maximum sensor frame rates' table in the 'recording' section of this manual.

Preferred Card for Recording

Use this setting to select which CFast card your URSA Mini will record to first when both slots are in use. The options are 'card 1,' 'card 2,' and 'fullest card'. Picking either 'card 1' or 'card 2,' is a matter of personal preference, but using either consistently will let you know which card to swap out first as your storage fills up. 'fullest card' can help group files chronologically when shooting a single camera project.

The setting you choose is applied when a CFast card is inserted. You can override this setting at any time by entering the storage manager and setting a different card as 'active.' It's important to note, however, that ejecting and reinserting cards will revert to the current 'preferred card for recording' setting.

TIP The 'fullest card first' setting is based on the percentage that your CFast cards are filled, rather than their sizes or the amount of data used.


Record RAW on 2 Cards

Blackmagic URSA Mini lets you record CinemaDNG RAW clips at higher frame rates by recording to both CFast cards simultaneously. When this setting is enabled your URSA Mini will record to both cards when available. If only one CFast card is inserted, your camera will attempt to record at the chosen frame rate to the single card. Turn 'record RAW on 2 cards' on or off by tapping the switch icon.

You can also enable 'record RAW on 2 cards' to increase the reliability of CFast cards if you find a single card is dropping frames while recording CinemaDNG RAW clips.

Record Settings 3

The third page of the 'record' settings tab contains the following settings.

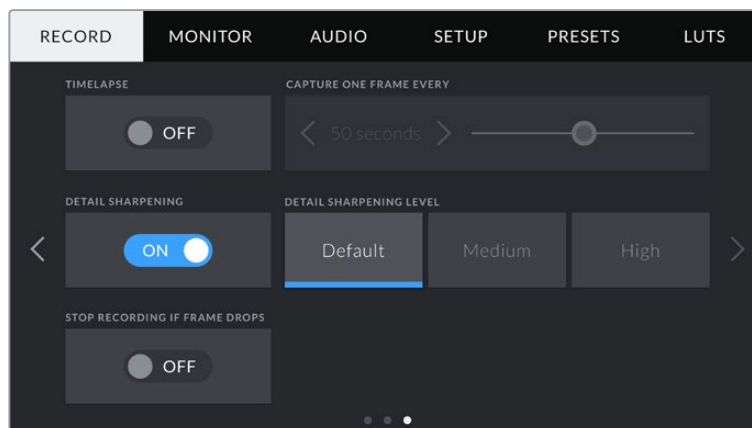

Timelapse

This setting activates the time lapse feature to automatically record a still frame at the following intervals:

- **Frames:** 2 - 10
- **Seconds:** 1 - 10, 20, 30, 40, 50
- **Minutes:** 1 - 10

For example, you can set the camera to record a still frame every 10 frames, 5 seconds, 30 seconds, 5 minutes etc.

The time lapse feature offers many creative options. For example, setting a 2 frame time lapse interval will give your recorded video a high speed effect when played back.

The format of each still frame is based on your recording format, so if you set the camera to record in 4K ProRes HQ, the time lapse setting will maintain this format. The frame rate will be based on your project frame rate setting, i.e., 24 fps. This is so your time lapse footage can be easily incorporated into your post production workflow.



Your URSA Mini will indicate it is in time lapse mode with an icon over the 'record' button.

TIP When you record footage in time lapse mode, the timecode counter updates when a frame of video is recorded.

Detail Sharpening

Use this setting to sharpen your URSA Mini's image. When sharpening is enabled, decrease or increase the level of sharpening by selecting 'default', 'medium' or 'high'.

When sharpening is enabled, it will be applied to ProRes video recorded on camera as well as your URSA Mini's SDI output.

This setting is intended for live studio production where there is no time for post production and you want to output the image live to air. We recommend leaving it 'off' for images you are recording for further post production. For this reason, sharpening is not applied to RAW files that are intended for significant post processing.

Stop Rec If Card Drops Frames

Use this setting to configure your URSA Mini's behavior when dropped frames are detected. When set to 'off,' recording will continue with dropped frames. When set to 'on,' your camera will stop recording if dropped frames are detected. This can prevent you wasting time shooting unusable footage if you don't spot the dropped frame indicator.

TIP Refer to the 'Choosing a CFast 2.0 card' for more information on how to avoid dropping frames.

File Naming Convention

Clips are recorded to your CFast cards in the CinemaDNG RAW format or to a ProRes QuickTime movie, depending upon which recording format you have chosen.

The table below shows an example of the file naming convention:

A001_08151512_C001.mov	QuickTime Movie Filename
A001_08151512_C001.mov	Camera index
A 001 _08151512_C001.mov	Reel Number
A001_ 08 151512_C001.mov	Month
A001_08 15 1512_C001.mov	Day
A001_0815 15 12_C001.mov	Hour
A001_081515 12 _C001.mov	Minute
A001_08151512_ C001 .mov	Clip Number


For CinemaDNG files, the folder of the image sequence will also be named the same way.

Monitor Settings

The 'monitor' tab lets you adjust status text, overlays, and other monitoring options for your URSA Mini's LCD touchscreen, front and main SDI outputs. Options are arranged by output between 'LCD', 'Front SDI' and 'Main SDI', as well as 'All,' which covers monitor settings that affect all outputs on your URSA Mini. Each of these menus has two pages of options, which you can cycle through by tapping the arrows at the edge of your camera's touchscreen, or swiping left or right.


LCD, Front SDI, Main SDI Monitor Settings 1

The first page of the 'LCD,' 'Front SDI,' and 'Main SDI,' monitor tab contains identical settings for each output. For example, you can set 'zebra' on for the LCD touchscreen, but off the Front or Main SDI outputs.

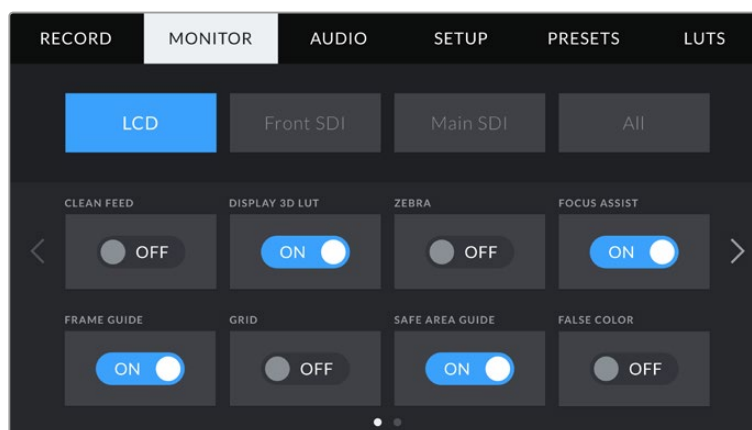

Clean Feed

Tap the 'clean feed' switch in the 'LCD,' 'Front SDI' and 'Main SDI' menus to disable all status text and overlays for that output, except the record tally indicator.

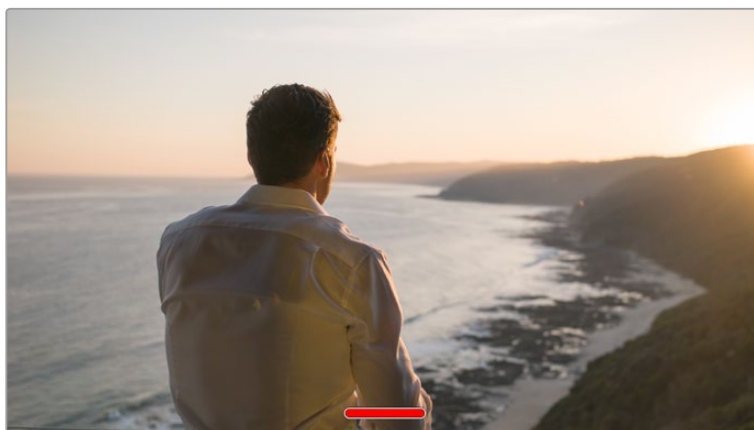

Your URSA Mini LCD touchscreen will still display a record tally in clean feed mode.

NOTE LUTs will still be applied to outputs with 'clean feed' enabled. To disable LUTs, disable the 'display LUT' switch in the 'Monitor' menu for that output.

Display 3D LUT

Your URSA Mini can apply 3D LUTs to any output to approximate the look of color graded footage. This is especially useful when shooting RAW footage, or with 'film' dynamic range in ProRes or DNxHR, as these produce an intentionally 'flat' low contrast image.

If your URSA Mini has a 3D LUT active, use this setting to independently apply that LUT to your LCD touchscreen, front or main SDI output.

NOTE For more information on loading and using 3D LUTs, see the 'LUTS' section of this manual.

Zebra

Tap the 'zebra' switch in the 'LCD,' 'Front SDI' and 'Main SDI' menus to enable zebra guides for those outputs. For more information on zebra guides and setting zebra levels, see the 'touchscreen features' section in this manual.

Focus Assist

Tap the 'focus assist' switch in the 'LCD,' 'Front SDI' and 'Main SDI' menus to enable focus assist for those outputs. For more information on focus assist and setting focus assist levels, see the 'touchscreen features' section in this manual.

Frame Guide

Tap the 'frame guide' switch in the 'LCD,' 'Front SDI' and 'Main SDI' menus to enable frame guides for those outputs. For more information on frame guides and choosing different guides, see the 'touchscreen features' section in this manual.


Grid

Tap the 'grid' switch in the 'LCD,' 'Front SDI' and 'Main SDI' menus to enable a rule of thirds grid for those outputs. For more information on the rule of thirds grid, see the 'touchscreen features' section in this manual.

Safe Area Guide

Tap the 'safe area' switch in the 'LCD,' 'Front SDI' and 'Main SDI' menus to enable safe area overlay for those outputs.

Safe areas are used in broadcast production to ensure that the most important parts of a shot can be seen by most viewers. By keeping the most important parts of your shot within a central 'safe area,' you can avoid cropping on older televisions, as well as leaving space for a broadcaster to add bugs, tickers and other overlays along the edges of the screen. Many broadcasters require footage to be submitted within a 90% safe area.

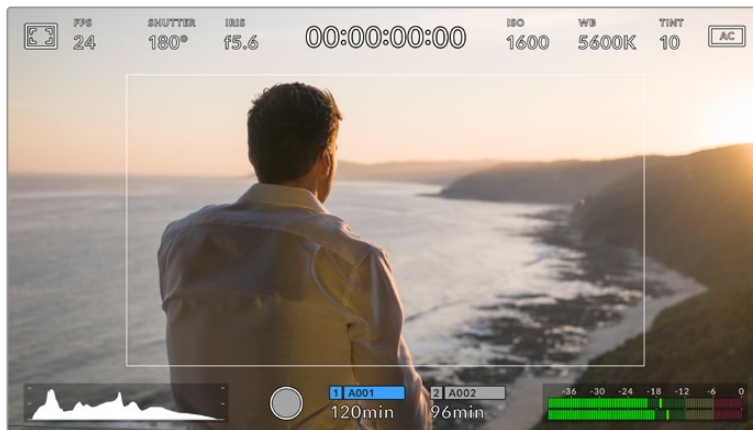


The 'safe area' indicator set to 70%.

NOTE Use the 'safe area guide %' setting in your URSA Mini's 'all' monitoring settings to set the size of the safe area guide.

False Color

Tap the 'false color' switch in the 'LCD,' 'Front SDI' and 'Main SDI' menus to enable false color exposure assistance for those outputs.


False color overlays different colors onto your image that represent exposure values for different elements in your image. For example, pink represents optimum exposure for caucasian skin tones, while green is a good match to darker skin tones. By monitoring the pink or green false color when recording people, you can maintain consistent exposure for their skin tones. Similarly, when elements in your image change from yellow to red, that means they are now over exposed.

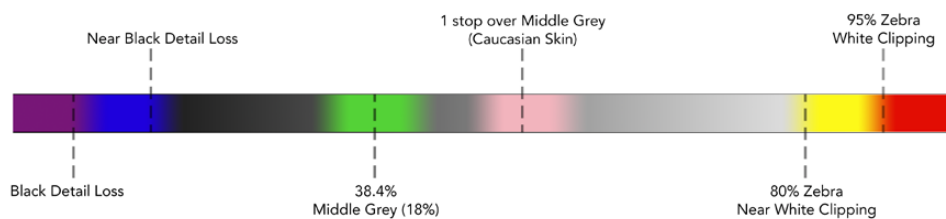

False Color Chart

LCD Monitor Settings 2

The second page of your URSA Mini's 'LCD' monitor tab contains settings unique to your LCD touchscreen.

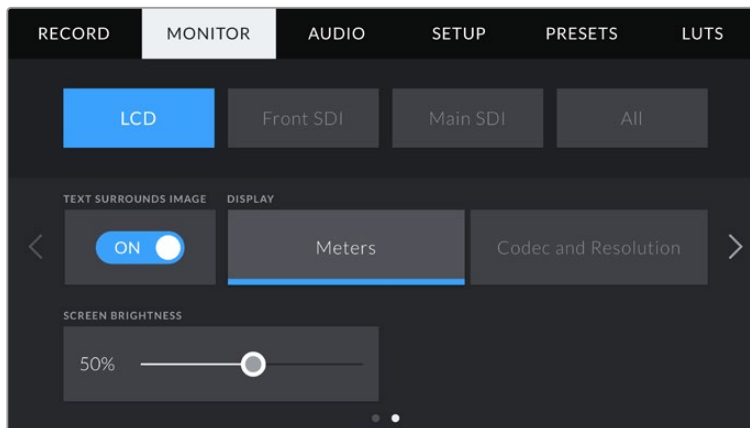

Text Surrounds Image

Tap the 'text surrounds image' switch in the 'LCD' menu to scale the image on your LCD touchscreen down 75%. This puts the image in the centre of the LCD touchscreen away from status indicators at the top and bottom edges, giving you an unobstructed view of your URSA Mini's preview image while keeping status text on screen.




'Text surrounds image' gives you a clear view of your URSA Mini's preview image for framing purposes while keeping status text on screen.

Display

Instead of a histogram and audio meters, your URSA Mini can display codec and resolution information at the left and right bottom edges of the LCD touchscreen. This can be useful if you prefer to use false color for dialling in exposure, or are recording audio separately and want to display additional information in the space normally used by the histogram and audio meter.

Simply tap 'meters' or 'codec and resolution' in the 'LCD' menu to select your preferred view.

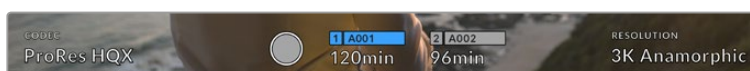


Your URSA Mini can display codec and resolution information in place of the histogram and audio meters.

Screen Brightness

Drag the 'screen brightness' slider in the 'LCD' menu left or right to adjust the brightness of your URSA Mini's LCD touchscreen.

Front SDI and Main SDI Monitor Settings 2

The second page of your URSA Mini's 'Front SDI' and 'Main SDI' monitor tab contains settings unique to your Front and Main SDI outputs.

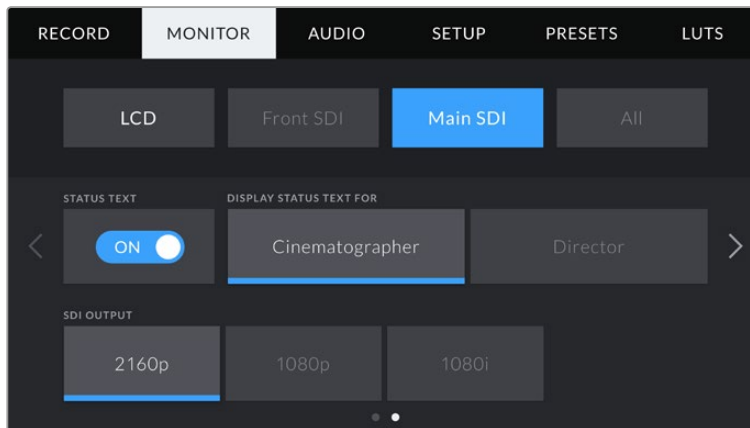


Status Text

It can be useful to hide the status text and meters on your Front SDI or Main SDI output, leaving only the information necessary to compose or direct a shot. Tap the 'status text' switch icon in the 'Front SDI' or 'Main SDI' monitor menus to toggle the appearance of status text and meters for that output. Overlays such as frame guides, grids, focus assist and zebra will remain visible, if enabled.

Swiping up or down on your URSA Mini's LCD touchscreen has the same effect for the touchscreen.

Display Status Text For Cinematographer or Director

Your URSA Mini's LCD touchscreen displays information such as ISO, white balance, and aperture that is useful to a camera operator or cinematographer setting up individual shots on that camera. URSA Mini's front and main SDI outputs, however, can also show information useful to a director or script supervisor who is keeping track of multiple shots or cameras.

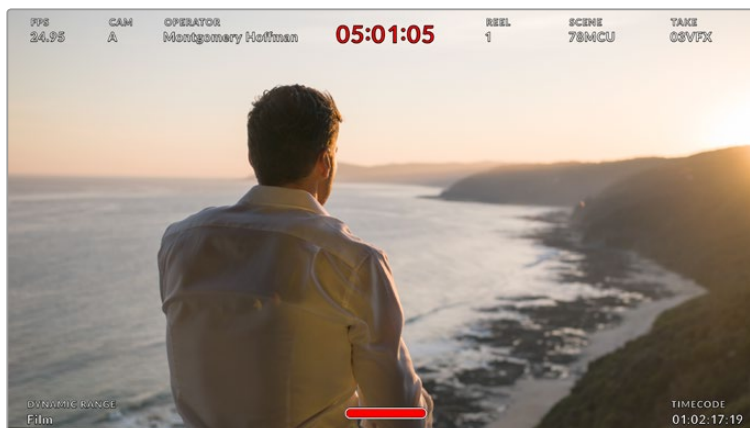

Your URSA Mini can display director specific status text on its Front and Main SDI outputs

Setting the status text to 'director' in your URSA Mini's 'front SDI' or 'main SDI' monitor settings changes the status text for that output to show the following information.

- **FPS**
Displays the currently selected frames per second for that camera. If off speed frame rate is disabled, only the project frame rate will be shown. If an off speed frame rate is being used, the sensor frame rate will be shown, followed by the project frame rate.
- **CAM**
Displays the camera index as set in your URSA Mini's Slate. See the 'slate' section later in this manual for more information.
- **OPERATOR**
Identifies the camera operator as set in your URSA Mini's Slate. See the 'slate' section later in this manual for more information.
- **DURATION DISPLAY**
Displays the duration of the current clip, while recording, or the last recorded clip in the following format: hours:minutes:seconds
- **REEL, SCENE, TAKE**
Displays the current reel, scene and take. For more information on reels, scenes, takes and their labelling conventions, refer to the 'slate' section later in this manual.
- **DYNAMIC RANGE**
The bottom left hand corner of the monitor displays your URSA Mini's currently applied LUT, if applied to that output. If no LUT is applied, 'film' or 'video' dynamic range will be displayed.
- **TIMECODE**
The bottom right of the monitor displays your URSA Mini's timecode, in the following format: hours:minutes:seconds:frames


SDI Output

Both outputs allow you to choose between progressive and interlaced HD output, while your URSA Mini's Main SDI output also has to option of progressive Ultra HD.


The options available in this setting depend on your camera's resolution and frame rate settings.

Progressive HD, or '1080p' is always available regardless of your recording resolution and frame rate, while interlaced HD, or '1080i' is available when your project frame rate is set to 50, 59.95 or 60.

Ultra HD SDI output, or '2160p' is available on your URSA Mini's main SDI when shooting at Ultra HD resolutions.

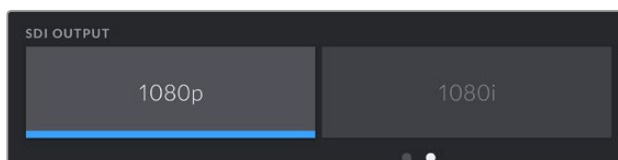

SDI Output - Front SDI

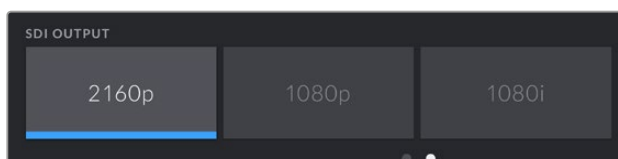


SDI Output - Main SDI

All Monitor Settings 1

Monitor settings that affect all of your URSA Mini's outputs are grouped within the 'all' menu. For example, setting 'safe area guide %' to 90% in this menu will set the safe area guide to 90% for your camera's LCD, Front SDI and Main SDI outputs.

There are two pages of 'all' settings. The first page of your URSA Mini's 'all' monitor tab contains the following settings.

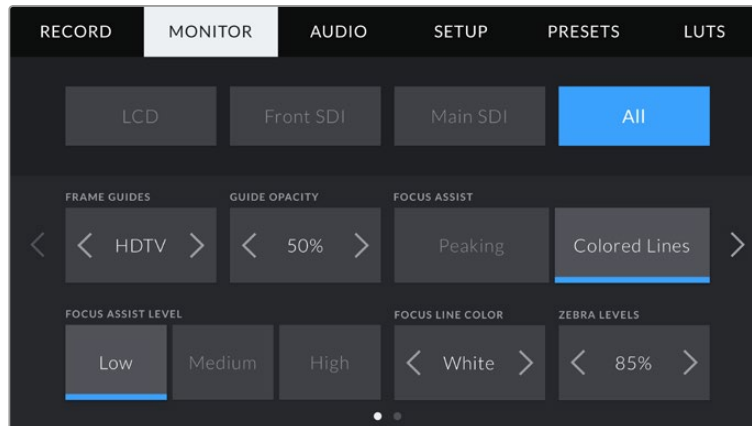

Frame Guides

Tap the left or right arrows in the 'frame guides' menu setting to cycle through seven frame guide options for all outputs on your URSA Mini, including EVFs such as Blackmagic URSA Viewfinder. The options are detailed in the 'touchscreen' section of this manual, and are also accessible from the LCD monitoring menu in your LCD touchscreen head up display. It's worth noting that you can individually select whether frame guides will appear on your LCD touchscreen, front SDI and main SDI output in their respective 'monitor' menus.

Guide Opacity

Tap the left or right arrows in the 'guide opacity' menu setting to choose the opacity of the areas blocked out by frame guides on your LCD touchscreen, front and main SDI outputs. The options are 25%, 50%, 75% and 100%.

Focus Assist

Your URSA Mini camera has two focus assist modes, 'peak' and 'colored lines.'

- **Peak**

When 'peak' style focus assist is selected, areas of the shot that are in focus are heavily sharpened on your LCD touchscreen or SDI outputs, but not in the recorded image itself. This causes focused parts of your shot to 'pop' out of the softer background on screen. As no additional overlays are used, this can be a very intuitive way to tell when focus is dialled in, especially when the subject you're focusing on is physically well separated from other elements in shot.

- **Colored Lines**

When 'colored lines' style focus assist is selected, a coloured line is superimposed around the parts of the image that are in focus. This can be a little more intrusive than 'peak' style focus assistance as the lines are drawn over your image, but especially in busy shots with a lot of visible elements, it can be a precise focus aid.

Focus Assist Intensity

To set the level of focus assistance for your LCD touchscreen, front SDI and main SDI, tap the 'low,' 'medium' or 'high' setting.

NOTE Setting the focus assist intensity level does not effect whether focus assistance is enabled on your URSA Mini's LCD touchscreen or SDI outputs. You'll still need to turn focus assistance on individually for each output in the 'LCD,' 'front LCD,' or 'main LCD' monitor menus.

TIP The optimum level of focus assistance varies shot by shot. When focusing on actors, for example, a higher level of focus assistance can help resolve edge detail in faces. A shot of foliage or brickwork, on the other hand, may show distracting amounts focus information at higher settings.

Focus Line Colour

Use this setting to change the color of focus line overlays when using 'colored lines' style focus assistance. Changing the focus line color can make it easier to tell focus assistance lines apart from your image. The available options are 'white,' 'red,' 'green,' 'blue' and 'black.'


Zebra Levels

Set the exposure level that zebra appears at by tapping the arrow icons on either side of this setting. Zebra level is adjustable in five percent increments between 75 and 100 percent exposure.

For more information, see the 'zebra' guide in the 'touchscreen features' section of this manual.

All Monitor Settings 2

The second page of your Ursa Mini's 'all' monitor tab contains the following options:

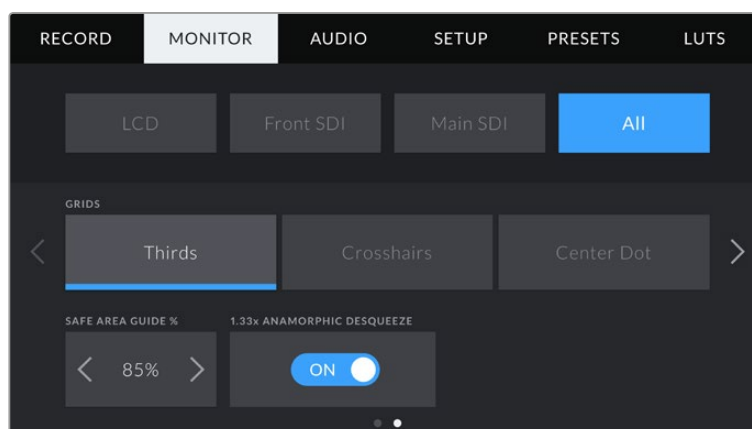

Grids

To set which combination of grids and crosshairs you want to display on your URSA Mini's LCD touchscreen, Front and Main SDI outputs, tap the 'thirds,' 'crosshairs,' or 'center dot' options in this setting.

For more information, see the 'grids' guide in the 'touchscreen features' section earlier in this manual.

Safe Area Guide %

To adjust the size of the safe area overlay on your URSA Mini's LCD touchscreen, Front SDI and Main SDI outputs, tap the arrows to the left and right of the percentage displayed in this setting. This percentage indicates the size of the safe area in relation to the image frame. Most broadcasters require a 90% safe area.

Anamorphic Desqueeze

When shooting with anamorphic lenses, the image will appear horizontally 'squeezed' on your URSA Mini's preview outputs and in recorded files. Enabling 'anamorphic desqueeze' will correct the preview image on your URSA Mini as well as recording the desqueeze amount used in the clip metadata for easy correction in post.

The desqueeze amount available will vary depending on what you've set your URSA Mini resolution to, but the resulting image will always be in the cinematic widescreen 2.4:1 aspect ratio.

Anamorphic lenses designed for film typically have a 2x squeeze factor. Your URSA Mini's '3K anamorphic' resolution is designed for use with these lenses and will perform a 2x desqueeze when set to this resolution with 'anamorphic desqueeze' enabled.

Anamorphic lenses designed for 16:9 digital image sensors often use a 1.33x squeeze factor to produce 2.4:1 cinematic widescreen images from the entire 16:9 sensor. Therefore, when your URSA Mini is set to 16:9 resolutions such as '4K 16:9' and 'HD 16:9,' the desqueeze ratio will be 1.33:1.


TIP If your image appears horizontally stretched when shooting with a standard spherical lens, make sure you don't have 'anamorphic desqueeze' enabled.

Audio Settings

The 'audio' tab lets you adjust the audio input and monitoring settings on your URSA Mini. These settings are divided by audio input source between 'camera' and 'XLR' for onboard and externally sourced audio. 'XLR' settings are spread over two pages, which you can cycle through by tapping the arrows at the edge of the LCD touchscreen or swiping left or right.

Camera Audio Settings

When you select 'camera' audio input, your URSA Mini will have one page of audio settings available. The 'camera' audio tab contains the following settings.

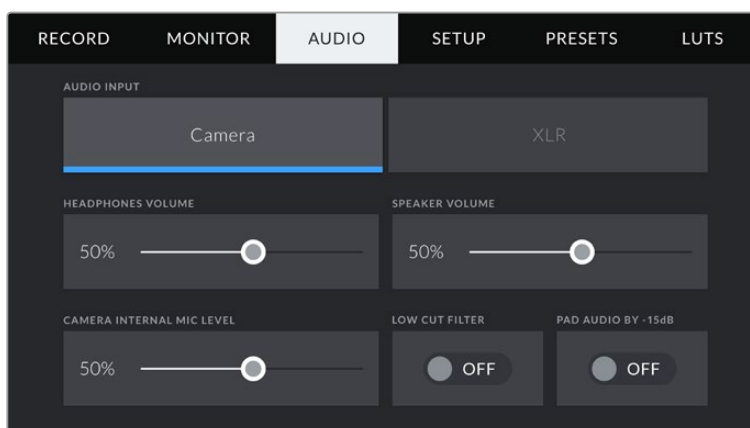

Headphones Volume

This slider adjusts the output levels for headphones attached to URSA Mini's 3.5mm headphone jack. Move the audio slider left or right to adjust levels.

Speaker Volume

This slider adjusts the output levels for your URSA Mini's built in speaker. Move the audio slider left or right to adjust levels.

Camera Internal Mic

This slider adjusts the recording levels for your URSA Mini's built in microphone. Move the audio slider left or right to adjust levels. The built in microphone records to audio channels 1 and 2.

Low Cut Filter


Tap this switch icon to enable the low cut filter which helps to reduce potential wind noise or low frequency rumbling that may occur in exterior shooting conditions.

Pad Audio By -15dB

The -15dB pad option gives you added control to further reduce the microphone input gain levels on your URSA Mini's internal microphone when shooting in a loud environment even after your input levels are already turned down.

XLR Audio Settings 1

When you select 'XLR' audio input, your URSA Mini will have two pages of settings available. The first page of the 'XLR' audio tab contains the following settings.

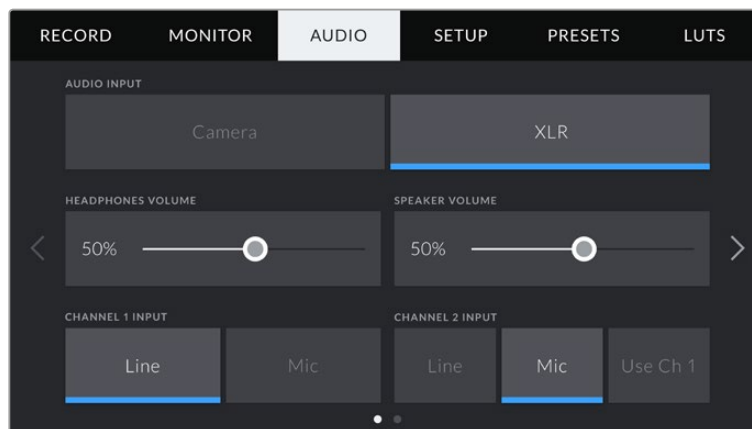

Headphones Volume

This slider adjusts the output levels for headphones attached to URSA Mini's 3.5mm headphone jack. Move the audio slider left or right to adjust levels.

Speaker Volume

This slider adjusts the output levels for your URSA Mini's built in speaker. Move the audio slider left or right to adjust levels.


Channel 1 and 2 input

Set the external audio input levels by tapping 'line' or 'mic' for channels one or two. These correspond to line, or microphone levels with 48V phantom power. It's important to select the appropriate level for your audio signal. You can set these independently for channels one and two.

Channel 2 also has the option of using channel 1's input if you want to record channel 1 external audio to channels 1 and 2.

XLR Audio Settings 2

The second page of the 'XLR' audio tab contains the following settings.

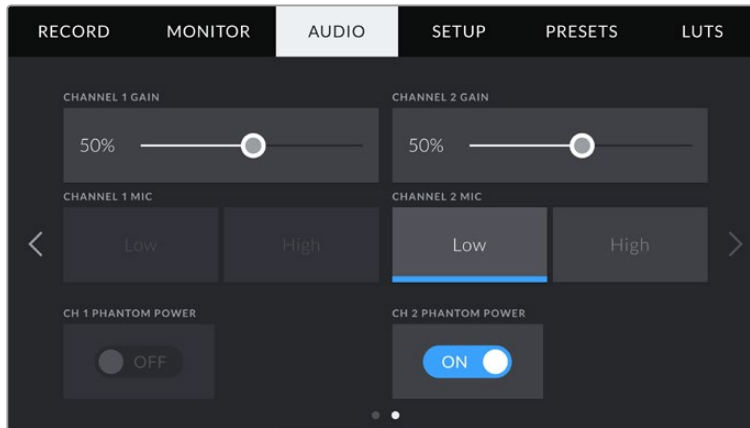

Channel 1 and 2 gain

Move the slider left and right on the 'channel 1 gain' and 'channel 2 gain' settings to adjust the audio levels for each channel.

Channel 1 and 2 Mic

The Mic option gives you added control of input gain levels on an external microphone by setting the preamplification level to 'low' or 'high.' The 'low' setting can be useful when shooting in a loud environment even after your input levels have already been turned down.

Channel 1 and 2 phantom power

Your URSA Mini's XLR inputs can provide 48V phantom power so you can use microphones that aren't self powered. When your camera is set to 'XLR' audio input, simply tap the 'phantom power' switch icon to enable phantom power.


NOTE It is standard practice to always plug in your XLR cable before switching phantom power on. Phantom power can also take quite a while to discharge after switching phantom power off on URSA Mini. Please be aware that you should wait a few minutes when switching off phantom power before plugging in any other microphones or XLR audio equipment.

Setup Settings

The 'setup' tab contains your URSA Mini's identification settings, software version, function button settings and other camera settings not directly linked to recording or monitoring. This menu has four pages, which you can cycle through by tapping the arrows at the edge of the LCD touchscreen, or swiping left or right.

Setup Settings 1

The first page of your URSA Mini's 'setup' tab contains the following settings.

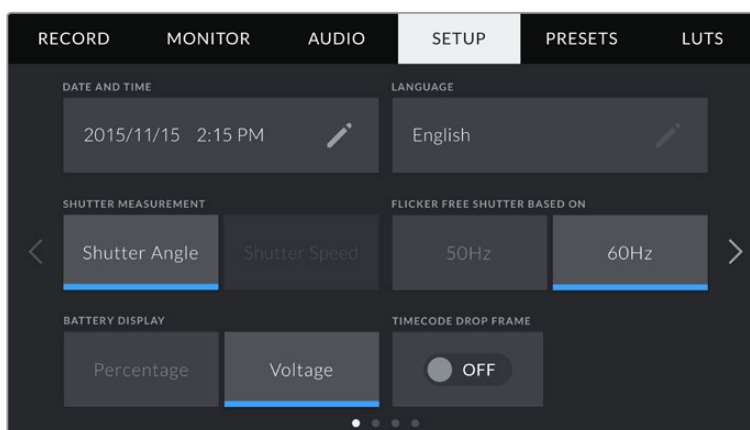

Date and time

Set your URSA Mini's date and time by tapping the 'date and time' setting. The date format is year, month, day and the time format is 12 hour. Your URSA Mini's date and time are also used for time of day timecode if an external timecode source is not connected.

Language

Tap the 'language' setting to change the language of your URSA Mini's menus and status text. English is the only currently available language but more are planned for upcoming software updates.

Flicker Free Shutter Based On

Use this setting to change the mains power frequency your URSA Mini uses to calculate flicker free shutter settings.

When shooting under lights, your shutter angle can effect the visibility of flicker. Your URSA Mini will automatically calculate flicker free shutter angles for your current frame rate and display suggestions in the 'shutter angle' menu. These angles are effected by the frequency of the local mains power supply used to drive those lights. In most PAL countries, this frequency is 50Hz, while NTSC countries typically use 60Hz power. Simply tap '50Hz' or '60Hz' to set the right frequency for your region.

NOTE The characteristics of individual light sources may still cause flicker even when using flicker free angles. We recommend always performing a test shoot when not using continuous lights.

Battery Display

Your URSA Mini can change the way the battery level indicator displays the remaining charge. The two settings are 'percentage' and 'voltage.' When using a battery and plates that support percentage accurate levels, setting 'battery display' to 'percentage' will show your battery power remaining as a percentage.

TIP A list of batteries that support percentage accurate power information is provided in the 'mounting batteries' section of this manual.

If your battery and plate combination does not support percentage accurate readings, the display will show four bars which empty as the battery depletes.

If this option is set to 'voltage,' battery levels will be displayed in volts. We recommend that you swap the battery as it approaches 12V.


TIP You can also toggle between 'voltage' and 'percentage' battery displays by tapping the power icon on the LCD touchscreen.

Time Code Drop Frame

Use the 'timecode drop frame' option to use drop frame timecode when using NTSC project frame rates of 29.97 and 59.94. Drop frame timecode drops a small number of frames from the timecode at set intervals. This keeps your project timecode accurate despite each second not containing a whole number of frames at NTSC frame rates.

Setup Settings 2

The second page of your URSA Mini's 'setup' tab contains the following settings.

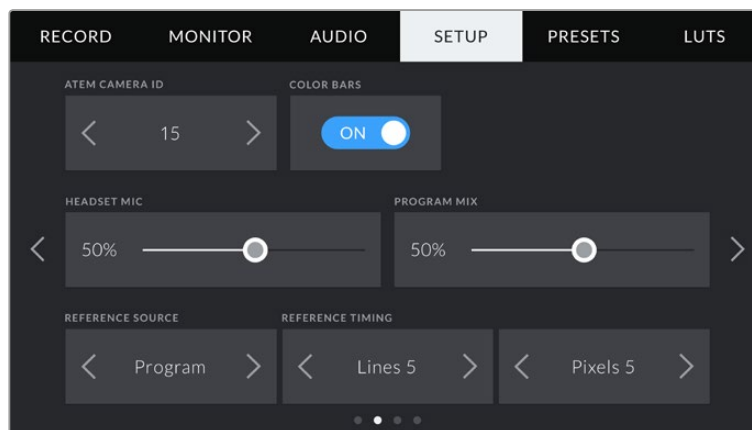

ATEM Camera ID

If you're using URSA Mini with an ATEM Switcher and want your camera to receive tally signals from the switcher, you'll need to set the camera number on your camera. This ensures the switcher sends the tally signal to the correct camera. The camera number can be set to a value of 1-99 by tapping the left or right buttons. The default setting is 1.

Color Bars

Outputting color bars rather than a preview image can be useful when connecting your URSA Mini to a switcher or external monitor. The appearance of your URSA Mini's color bars on your switcher or monitor confirms the connection, and you can perform basic monitor calibration based on the colors of the bars. To turn on color bars for all outputs on your URSA Mini, including the LCD touchscreen, simply tap the 'color bars' switch icon.

Headset Mic

Move this volume slider left or right to increase or decrease audio microphone input levels. The default setting is 50%.

Program Mix

This setting changes the balance of camera sound to talkback sound. The headphones will output audio following what is displayed on the LCD. For instance, if you are in camera view, camera audio is heard. If you are in program view, program audio is heard. The default setting is 100%.

Reference Source


This setting is used to select the reference source. Your URSA Mini can lock to an internal or external reference source, or to the reference signal in program input from an ATEM switcher. If you are using your URSA Mini with an ATEM Switcher's camera control function, you should always set your reference source to 'program' unless the switcher itself and all connected cameras are set to an external reference.

Reference Timing

These settings allow you to manually adjust the reference timing on a line or pixel basis. Simply tap the arrow icons on either side of the "lines" and "pixels" settings to make adjustments.


Setup Settings 3

The third page of your URSA Mini's 'setup' tab contains the following settings

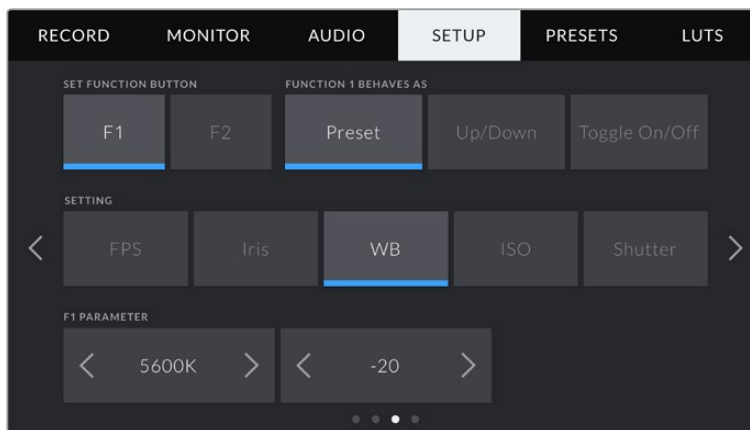


Set Function Button

On the outside of your URSA Mini's LCD touchscreen, you'll notice two function buttons, 'F1' and 'F2.' These are mappable to frequently used features and are quickly accessible when using your camera with the LCD touchscreen closed, such as when you are using URSA Viewfinder.

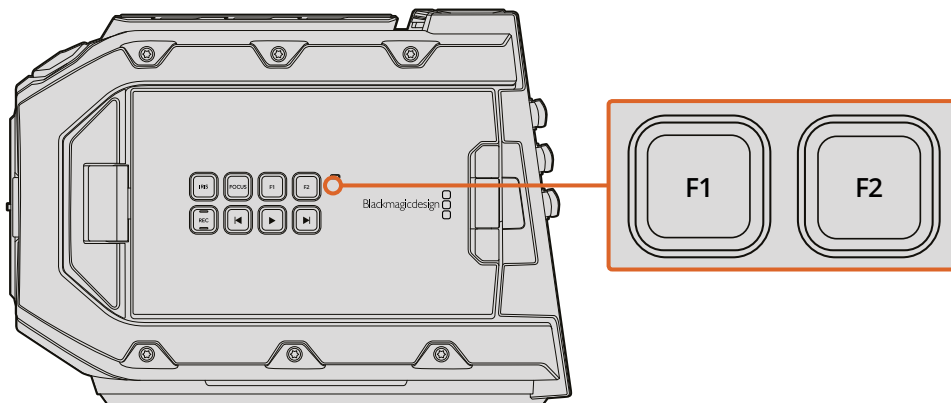

Your URSA Mini's F1 and F2 buttons are located on the outside of the LCD touchscreens

To set these buttons, select a function button and then its behavior, a setting, and a parameter for that setting.

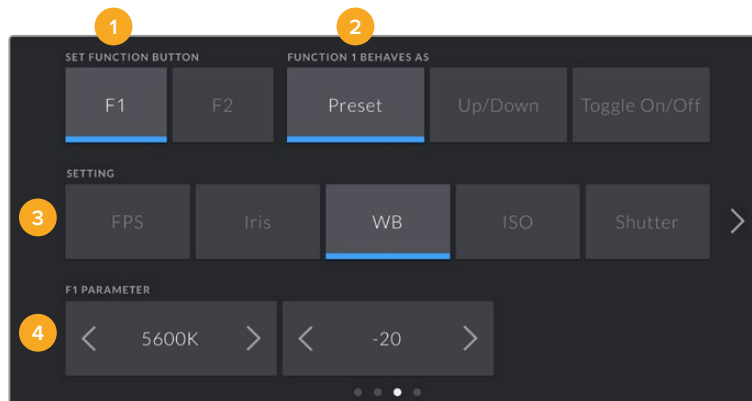

- 1 Button
- 2 Behavior
- 3 Setting
- 4 Parameter

Function 1/2 Behaves as

Once you have selected the function button you want to map, you can select a behaviour. The available options are:

Preset

When set to this behavior, pressing a function button will recall a combination of a setting and a parameter.

To set a preset, select the setting you want to use from the 'setting' menu, and adjust that setting by tapping the arrow icons on either side of the 'parameter' menu.

For example, to set the F1 button to recall a preset aperture of f8, select the 'preset' behavior, tap the 'iris' setting, and tap the arrows on either side of the 'parameter' menu until you get to f8.' Tapping the preset again returns your camera to the previous setting.

Up/Down

When set to this behavior, pressing a function button will move a particular setting up or down.

For example, you may want to set F1 to increase your lens aperture and F2 to decrease it. To do this, select the 'F1' function button, set the behavior to 'up/down', and the parameter to 'up.' Do the same for the 'F2' function button, but set the option to 'down.'


Toggle On/Off

When set to this behavior, pressing a function button will toggle a particular setting on or off. The 'setting' menu is greyed out in this mode. Instead, tap the left or right arrows in the parameter menu to scroll through the available options. These are 'off speed recording,' 'color bars,' 'clean feed,' 'display LUT,' frame guides,' 'focus assist,' 'false color,' and 'zebra.'

Using the 'Toggle On/Off' behaviour also lets you select the output this setting applies to. Simply tap any combination of 'LCD,' 'Front SDI' and 'Main SDI' to select. If the output for an option is not available, such as 'color bars' which always applies to all outputs, the 'LCD,' 'Front SDI,' and 'Main SDI' settings are disabled.

Setup Settings 4

The fourth page of your URSA Mini's 'setup' tab contains the following settings.

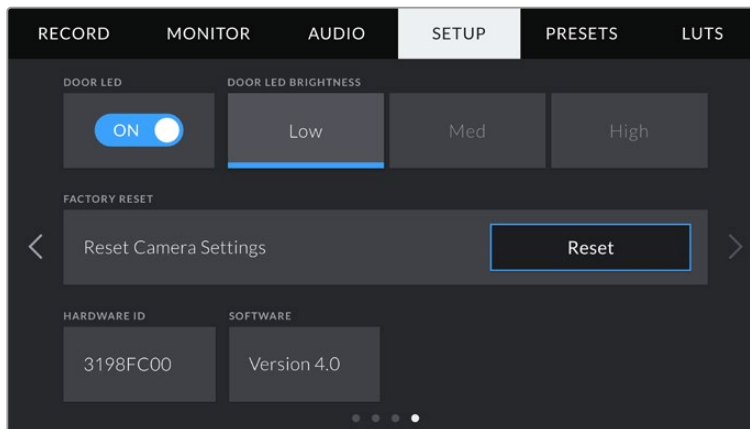

Door LED

Your URSA Mini has a small LED on the outside of the LCD touchscreen that provides tally and status information. You can enable or disable it by tapping the 'Door LED' switch icon. The LED will provide the following status indicators:


- **White** The camera is powered on and in 'standby' mode.
- **Red** The camera is recording. Slow flashing indicates that your camera's storage is filling up, while rapid flashing indicates dropped frames.
- **Green** The camera is in playback mode.
- **Orange** If your camera's battery is low, the LED will flash orange and your other current status color. For example, if currently recording, the LED indicator will flash orange and red. The threshold for 'low' battery is 20 percent for batteries that support percentage accurate charge information, or 12.5 volts for batteries that don't.

Door LED Brightness

To set the brightness of your URSA Mini's door LED, simply tap 'low,' 'medium,' or 'high.'

Factory Reset

To reset the camera to its default factory settings, tap the 'reset' button. You will be asked to confirm this action as it will erase any LUTS and presets currently stored on the camera. Tap 'reset' on the confirmation page to reset your camera settings.

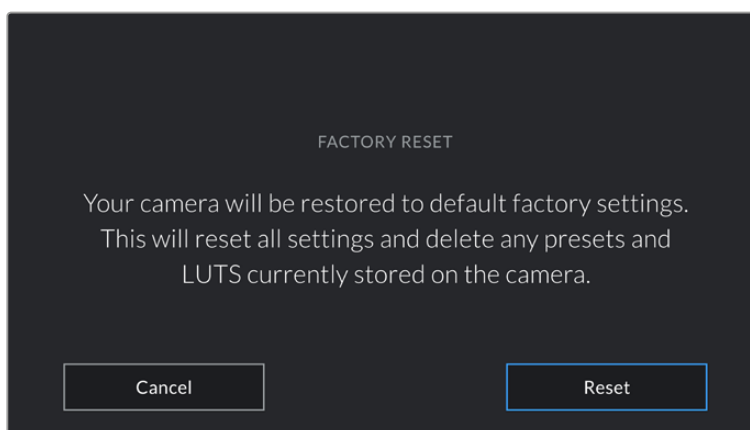

When selecting 'factory reset' you will be prompted to confirm your action.

Hardware ID

The 'Hardware ID' indicator displays an 8 character identifier for your URSA Mini. This is unique to each camera. A longer, 32 character version of this ID is also included in the metadata for RAW and ProRes video. This can be useful for identifying which footage came from a particular camera if filenames are changed as the camera hardware ID remains constant.


Software

Displays the current software version installed on your URSA Mini. See the 'using Blackmagic Camera Utility' section for more information on updating software.

Presets

The 'presets' tab lets you save and recall a complete collection of settings for your URSA Mini. This is very useful when one camera is used for multiple projects. For example, you may use your URSA Mini for a variety of different shoots, from documentaries to music videos, with very different settings between types of projects. Your URSA Mini's 'presets' function lets you save the setup for a particular project or type of shoot and come back to it quickly and easily when required.

You can also import and export presets, which is very useful for setting up a multi camera shoot. Simply set up one URSA Mini to suit your project, then export that preset for all the other URSA Minis on set.

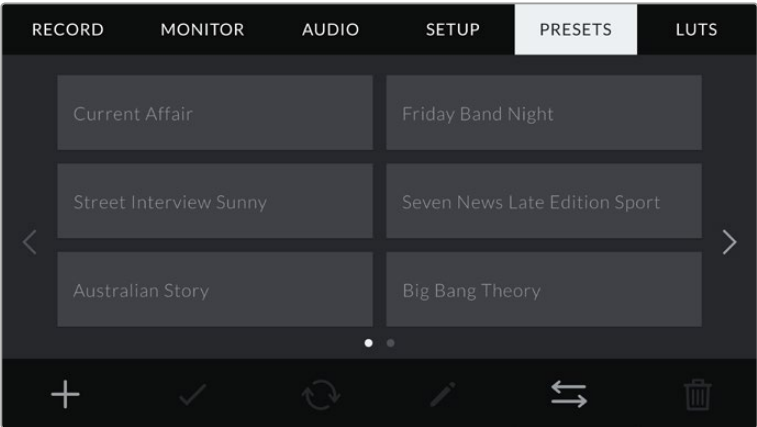

Your URSA Mini's Presets tab

NOTE Your URSA Mini can save up to twelve presets to its internal memory.

Preset buttons


The button icons along the bottom of your URSA Mini's 'preset' menu correspond with the following functions.

Add	Load	Update	Manage	Delete

Saving and loading presets


To create a new preset, tap the 'add' icon. This will bring up a touch keyboard on your LCD touchscreen where you can name your preset. Once you've typed in the name, tap 'update' to save all of your URSA Mini's current settings to that preset.

If your URSA Mini already has a preset loaded with the same name, you will be prompted to overwrite the existing preset or keep both.

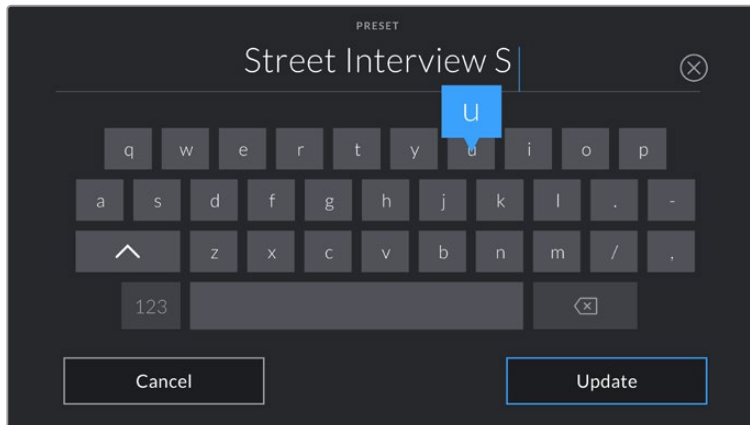

Enter a name for your preset by tapping the 'add' icon in the preset tab and using the touch keyboard.

Once you have a preset saved, tap its name in the preset menu to select it. To load it tap the 'load' icon.

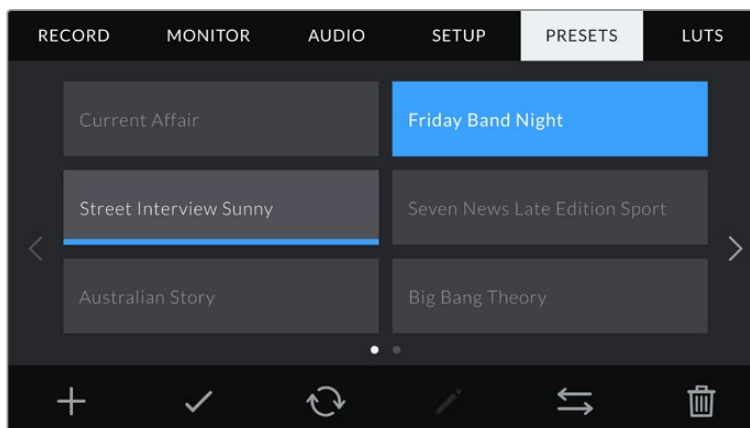

Select a preset and tap the 'load' icon to load it. Selected presets will appear solid blue, while currently loaded presets have a blue line along the bottom of their icon.

You can update a preset by tapping the 'update' icon. This will bring up a prompt asking you if you want to update the preset with your URSA Mini's current setting. Tap 'update' to confirm.

Importing presets

To import presets, tap the 'preset manager' icon at the bottom of the preset menu.

Tap 'import preset' and confirm your selection with the 'import' icon. This will bring up the import screen. Choose 'card 1' or 'card 2' at the top left of this screen to display any available presets on those cards.

Your URSA Mini will search the root directory and 'presets' folder on the selected CFast card. It's worth noting that presets saved elsewhere on your CFast cards will not be visible.

Tap a preset to select it, and tap 'import' to confirm. At the top right of this screen, you'll see the number of remaining empty preset slots available on your camera.

NOTE If your URSA Mini's preset slots are full, the import menu will not be available. You will need to delete an existing preset to make room.

Exporting presets

To export a preset to a CFast card, select the preset you want to export by tapping it, and tap the 'manage' icon. You will be prompted with two options, 'import preset' or 'export selected preset.'

Tapping 'export selected preset' will prompt you to choose which CFast card you would like to export to. Choosing a card will export the selected preset to a 'presets' folder on that card.


If the CFast card you've chosen already has a preset saved to it with the same name as the one you're exporting, you will be prompted to overwrite the preset on the card, or keep both presets.

Deleting presets

Your URSA Mini has space for twelve presets. To delete a preset, select it and tap the 'delete' icon. You will be prompted to confirm your choice. Tap 'delete' to confirm.

LUTS

The 'LUTS' menu lets you import, export and apply 3D LUTs to your camera's outputs.

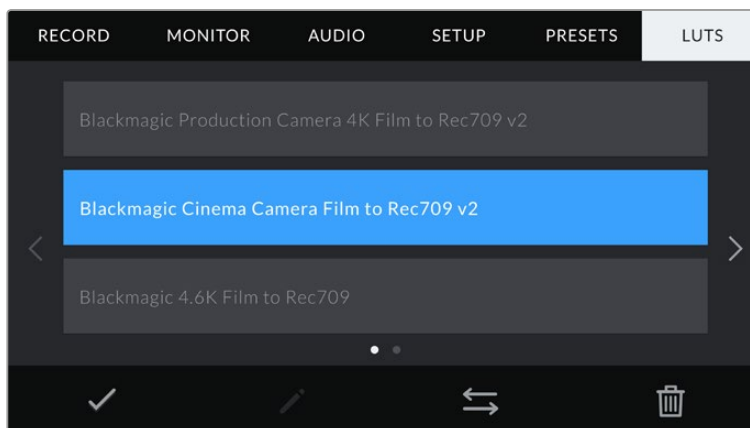

Your URSA Mini's LUT tab

Introducing 3D LUTs

Your URSA Mini can apply 3D LUTs to images on its LCD touchscreen, front SDI and main SDI. LUTs work by telling your URSA Mini what color and luminance output to show for a particular color and luminance input. For example, a LUT may tell your URSA Mini to display a vibrant, saturated blue when it receives a relatively dull blue input. This can be useful when shooting RAW footage, or using 'film' dynamic range, both of which have an intentionally undersaturated, 'flat' appearance. By applying a LUT, you can get an idea of what your footage will look like after it has been graded.

It is easy to create 3D LUTs using DaVinci Resolve or other color correction software, and LUTs are available online from a variety of sources. Your URSA Mini can store up to six 17 point or 33 point 3D LUTs, of up to 1.5 megabytes each. Once loaded, you can choose to display a given LUT on your camera's LCD touchscreen, front SDI, main SDI or any combination of these outputs.

Your URSA Mini supports 33 point 3D LUTs in .cube format created in DaVinci Resolve and 17 point 3D LUTs converted to Resolve .cube format via LUT conversion programs. Your camera processes 3D LUTs using high quality tetrahedral interpolation.

TIP For more information on displaying LUTs, see the 'monitor settings' section in this manual.

NOTE Your URSA Mini does not apply, or 'bake in,' LUTs to recorded footage. LUTs are used as a preview tool only.

LUTS buttons

The button icons along the bottom of your URSA Mini's 'LUTS' screen correspond to the following functions:

		
Load	Manage	Delete

Importing LUTS

To import a 3D LUT, tap the 'manage' icon at the bottom of the LUT menu, and tap 'import LUT' to confirm.

NOTE If your URSA Mini's six 3D LUT slots are full, you will not be able to import until you delete some existing LUTs to make space.

This will bring up the import screen. Choose 'card 1' or 'card 2' at the top left of this screen to display any available 3D LUTs on those cards.

Your URSA Mini will search the root directory and 'LUTS' folder on your selected CFast card. Any LUTs you have saved elsewhere will not be visible.

Tap a LUT to select it and tap 'import' to confirm your selection. The LUT will be saved to your URSA Mini.

If the LUT you want to import has the same name as a LUT already saved to your camera, you will be prompted to overwrite the existing LUT or keep both. At the top right of this screen, you'll see the number of remaining empty LUT slots available on your camera. You will only be able to import as many LUTs as you have free slots on your camera.

NOTE If you are having trouble importing a LUT to your URSA Mini, it may be the wrong size. You can use a LUT editor like Lattice to check its size, or open it in any text editor on your computer. Next to the tag 'LUT_3D_SIZE' will be a number indicating the LUT's size. If this value is not 17 or 33, you can use Lattice to resize your 3D LUT to 17 points.

Applying a LUT

Once you have a LUT saved onto your camera, tap it in the LUT menu to select it, and tap the 'load' icon. This will enable that LUT to all outputs on your camera. However, you will still have to turn 'display LUT' on in the monitor menu for each output to apply it. See the 'monitor settings' section in this manual for more information.

Exporting LUTs

To export a LUT to a CFast card, select the LUT you want to export and tap the icon. You will be prompted with two options, 'import LUT' and 'export selected LUT.'

Tapping 'export selected LUT' will prompt you to choose which CFast card you want to export to. Choosing a card will commence exporting, unless you are exporting a LUT that already exists on that card. If a duplicate LUT is found, you will be asked if you want to overwrite the LUT on your CFast card, or if you would like to keep both.

Deleting LUTs

Your URSA Mini has space for six 17 point LUTs 3D LUTs. To delete LUTs you are no longer using, or make room for more, select the LUTs you want to delete and tap the icon. You will be prompted to confirm your choice. Tap 'delete' to confirm.

Entering Metadata

Metadata is information saved inside your clip, such as take numbers, camera settings and other identifying details. This is extremely useful when sorting and processing footage in post production. For example, take and shot and scene numbers are essential organisational tools, while lens information can be used to automatically remove distortion or better match VFX assets to plates.

Your Blackmagic URSA or URSA Mini automatically saves some metadata to each clip, such as camera settings, timecode, date and time. You can use your camera's slate to add many additional details.


The Slate

Blackmagic URSA

The two touchscreens on Blackmagic URSA have many purposes, one of which is to allow you to easily log metadata directly into the camera using the 'slate' feature. Metadata is stored in the recorded files and is easily accessed by editing software.

- 1 In 'recording' mode, tap anywhere on the LCD screen, or press the 'slate' button on Blackmagic URSA to make the slate appear.

- 2 To enter or change details, tap the text area you wish to change and a touchscreen keyboard will appear. Type in the desired information and tap the 'enter' key on the bottom right corner of the keyboard. The information will be updated on the slate and will also be recorded onto the file.
- 3 If you want the scene, shot or take number to auto-increment, tap the corresponding auto-increment icon so it is highlighted. Tap it again to turn off the auto-increment feature. You will see the information auto increment with every recording.


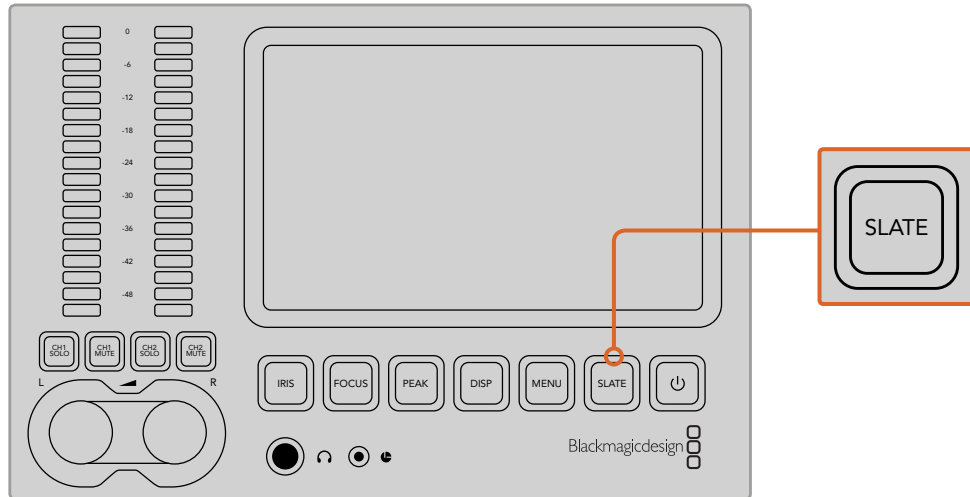


On Blackmagic URSA, press the 'slate' button to activate the slate feature on a touchscreen.

If you wish to edit the metadata of a clip, cue the clip in playback mode and enter the slate screen to display the clip's metadata. Change any information in the slate and tap the 'update' button to confirm the change.

Entering words into the keywords field will allow you to use them as search terms in your library database. This may be particularly useful for large projects where you have lots of material. The use of keywords narrows down the number of clips to search through, saving valuable time when you are editing.

All metadata is compatible with popular software such as Final Cut Pro X and DaVinci Resolve.

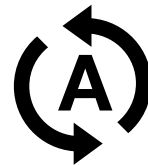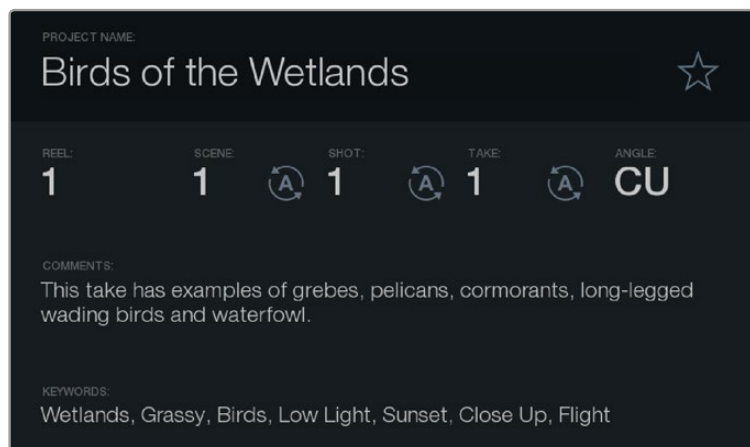

Log metadata directly into the camera using the 'slate' feature. Select the auto-increment icon if you want the scene, shot or take number to auto-increment.

Blackmagic URSA Mini

Swiping left or right on your URSA Mini's touchscreen will bring up the slate.


The slate is divided into two tabs, 'clips' and 'project.' The 'clip' tab contains information that may vary clip by clip, while 'project' is where you enter details common between clips, such as the project name, director, and camera and operator ID.

TIP Metadata entered into the slate is viewable on your URSA Mini's front or main SDI outputs when set to 'director view.' See the 'monitor settings' section in this manual for more information.

'Clip' metadata

Changes made to clip metadata work slightly differently in 'standby' mode, when your URSA Mini is ready to record, and 'playback' mode, when you're reviewing footage you've already shot. In 'standby,' clip metadata will be saved to the next clip recorded, except for 'good take last clip' which refers to the most recently recorded clip.

In 'playback' mode clip metadata is always recorded to the current clip being viewed.

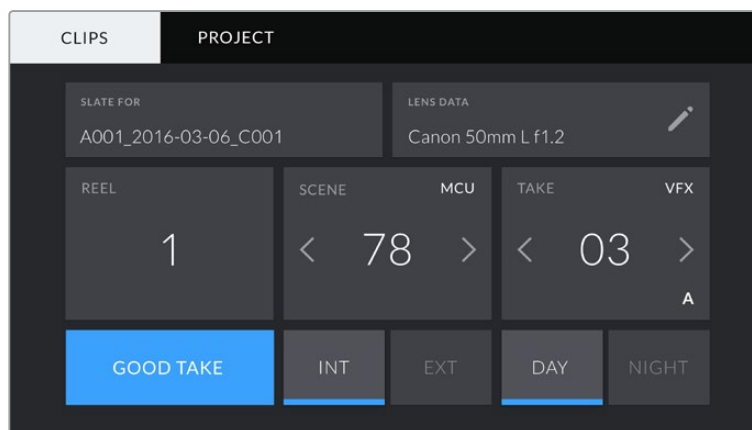

Your URSA Mini's slate is divided into 'clip' and 'project' tabs.


Slate for

This setting shows the clip which the metadata currently displayed in the 'clip' applies to. In 'standby' mode, this refers to the next clip that will be recorded.

Lens Data


These settings displays data about the current lens fitted to your camera. Many electronic lenses automatically supply information such as the lens model, aperture and focal length. If you are using a lens that does not provide this information, or you want to enter additional data, you can tap the pencil icon in this setting to enter the information manually.

This will bring up the 'lens data' menu, which contains the following information:

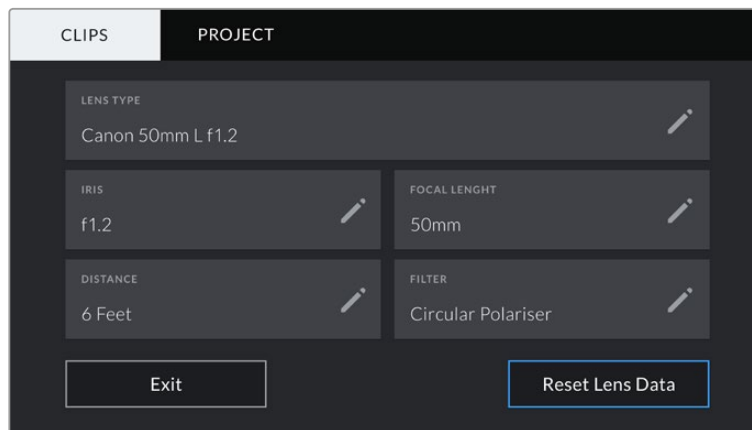

Use the 'lens data' screen to enter in depth information about your lens type, settings, and any filters fitted.

- Lens Type**
 Shows the lens model. If your lens type is not automatically shown here, you can tap this setting to enter the data manually.

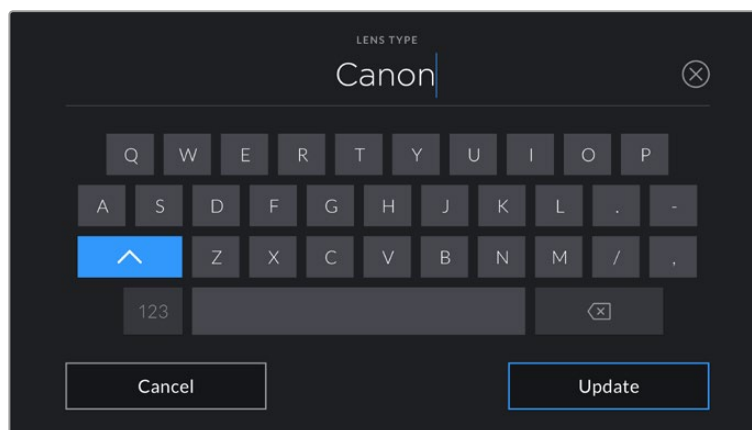

Use the touch keyboard to enter lens data if it is not provided automatically.

- Iris**
 Shows the iris aperture setting at the start of your clip. This information can be displayed in f- or T-stops depending on the lens used, if supplied automatically. Tap this setting to enter data manually.
- Focal length**
 Shows the focal length setting of the lens at the start of the recorded clip. When automatically supplied, this is shown in millimeters. Tap this setting to enter data manually.
- Distance**
 Shows the focal distance settings of the lens for the recorded clip. Some lenses can provide this data automatically and it will be provided in feet and inches. You can also enter this data manually.
- Filter**
 Shows the current lens filters used. Tap this setting to enter data manually. You can make multiple entries separated by commas.


NOTE You can clear lens data at any time by tapping the 'reset lens data' icon in the 'lens data' menu. You will be prompted to confirm your choice. If you confirm, all lens data will be cleared and repopulated with any lens data automatically provided by the currently fitted lens.

Reel

The 'reel' indicator shows the current reel. This number refers to what media will be named when formatted. See the 'URSA Mini settings' section in this manual for more information on file naming conventions.

Your URSA Mini automatically increments reel numbers, so there is usually no need to enter this manually. The only exception is when you are moving to a new project and want to start from reel '1' again.

To manually enter a reel number, tap the 'reel' display' and enter the number you want to increment from. We strongly recommend starting from '1' for each project.

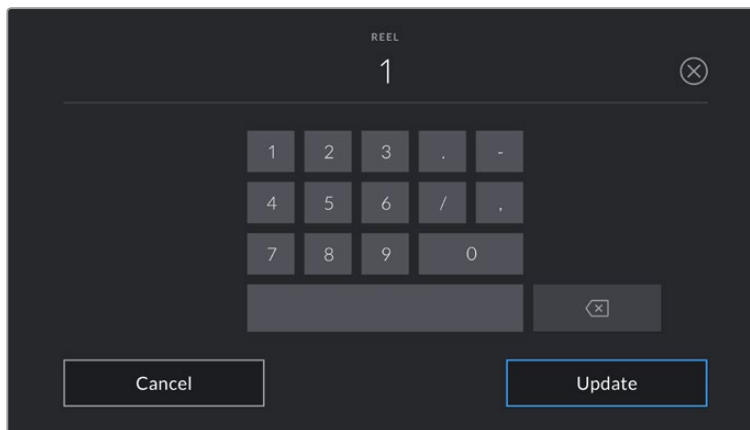

Tap the 'reel' indicator to manually enter a reel number.

NOTE The reel number also effects card formatting. When formatting CFast cards in camera, the current reel number will be applied to the next CFast card formatted in your URSA Mini.

Scene

The 'scene' indicator shows the current scene number, and can also show the current shot number and type.


The number on this indicator always refers to the current scene. You can move this up and down using the left and right arrows on either side of the scene number, or tapping the scene number to enter the scene number editor.

The range of possible scene numbers is 1 to 999.

By adding a letter to the scene number in the scene number editor, you can also indicate the current shot. For example 23A would indicate scene twenty three, shot one. If you have a shot letter added to your scene, your URSA Mini will suggest letter increments whenever you enter the scene number editor. For example, if your current scene number is 7B, your URSA Mini will offer '7C' as an increment suggestion.

The scene number indicator can also show information about the current shot type in the top right corner. You can select these in the scene number editor at the right hand side of the shot keyboard. The shot types available are

WS	wide shot
MS	medium shot
MCU	medium close up
CU	close up
BCU	big close up
ECU	extreme close up

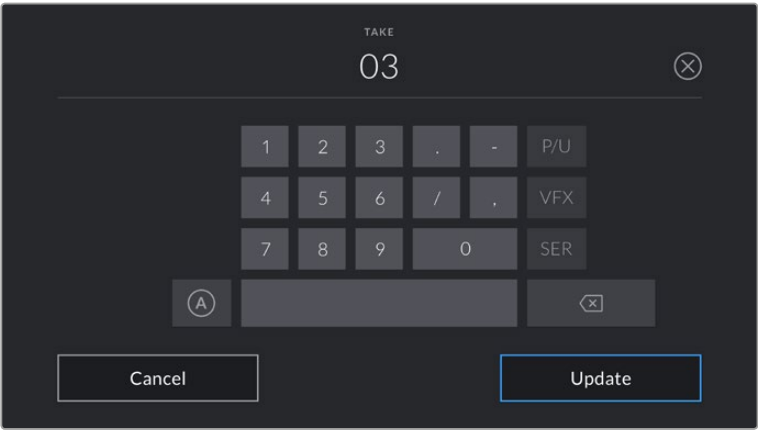

When entering 'scene' metadata, your URSA Mini will prompt you with increment suggestions to the left of the touch keyboard, and shot types to the right.


Take

The 'take' indicator shows the take number for the current shot. You can increment this up or down by tapping the left or right arrows on either side of the take number, or tapping the indicator to enter the take number editor.

TIP When the shot number or scene letter are advanced, the take number will revert to '1.'

You can add take descriptions in the take number editor. These are offered to the right of the take number keyboard, and correspond to the following scenarios:

PU	'Pick up.' This refers to a reshoot of a previous take to add additional material after principal photography has wrapped.
VFX	'Visual effects.' This refers to a take or shot for visual effect use.
SER	'Series.' This refers to a situation in which multiple takes are shot while the camera is kept running.

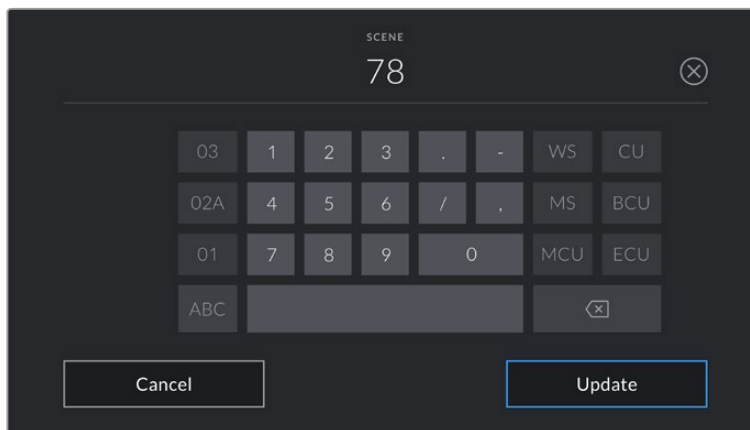

When entering 'take' metadata, your URSA Mini will offer prompts for additional shot types to the right of the touch keyboard.

Good take

Tap the 'good take' indicator to flag good takes for easy recall in post production. This tag applies to either the last clip recorded, if your URSA Mini is in 'standby' mode, or the clip currently being viewed in 'playback' mode.

Int / Ext


Tap 'int' or 'ext' to add a 'interior' or 'exterior' tag to the next clip in standby mode, or the current clip in playback mode.

Day / Night

Tap the 'day' or 'night' icons to add a 'day' or 'night' tag to the next clip in standby mode, or the current clip in playback mode.

'Project' Metadata

Project metadata behaves the same way whether you are in 'standby' or 'playback' mode. This metadata always refers to your project as a whole and is independent of clip numbers.

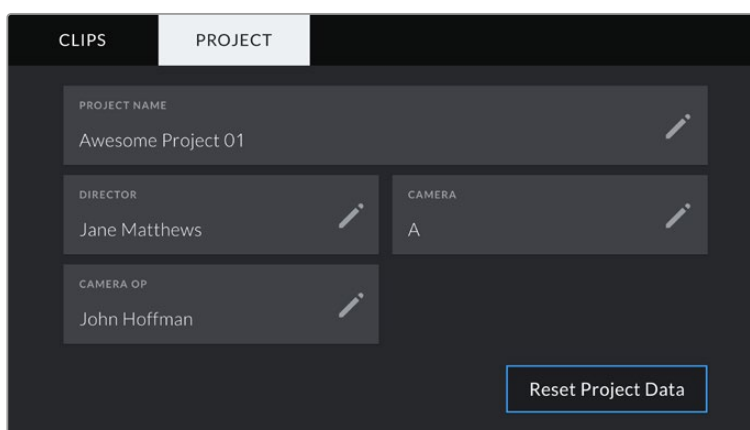

Your URSA Mini's 'project' slate tab.

Project name

Displays your current project name. Tap the pencil icon to change the project name.

Director

Displays the director's name for the current project. Tap the pencil icon to change the director name.

Camera

Displays a single letter camera index. Tap the pencil icon to change the camera index.

NOTE Camera index is used in metadata and for file naming purposes and differs from your URSA Mini's ATEM Camera ID, which is used when controlling your URSA Mini with an ATEM switcher. For more information on ATEM Camera ID, see the 'ATEM camera control' section in this manual.

Camera Op

Displays the camera operator. Tap the pencil icon to change the camera operator name.

Camera Video Output

HD Monitoring Output

Blackmagic URSA and URSA Mini's down converted 3G-SDI out connector always outputs 1080 HD video so you can easily connect to routers, monitors, SDI capture devices, broadcast switchers and other SDI devices. This output is labeled 'Front SDI' in the touchscreen settings menu.

12G-SDI Output

The 12G-SDI out connector on the rear panel supports HD and 4K video including High P formats such as 2160p50, 59.94 and 60 on a single SDI cable. Interlaced HD formats are also supported including 1080i50, 59.94 and 60. You can use the 12G-SDI output to connect to any SDI monitor as well as 4K switchers such as ATEM Production Studio 4K. This output can be switched between HD and Ultra HD by selecting 1080p or 2160p from 'display settings/SDI mode' on the touchscreen.

Connecting to Video Switchers

The SDI outputs allow you to use your camera for live television production. You can connect the rear panel SDI output directly to production switchers for live production work, or to ATEM Camera Converters to convert your signal to optical so you can send it hundreds of meters to a broadcast truck on location.

When connected to a switcher, you can easily view the switcher's program output on your Blackmagic URSA or URSA Mini. To do this, first connect the switcher to your camera's rear 12G-SDI input. Now press the 'program' button marked PGM on your camera's fold out monitor. To switch back to the camera image, simply press the PGM button again.

Connecting to Monitors


SDI monitoring can be really handy when accessing the fold out monitor is impractical, such as when secured high on a jib arm, on a crane, or mounted on a vehicle.

Monitoring information is displayed via your HD-SDI monitoring out connector by adjusting the ‘front SDI overlay’ settings in the display settings menu. SDI overlays provide frame guides and information such as recording details and camera settings. If you simply want to monitor your shots, you can always turn overlays off for a clean SDI output.

Connect the camera’s SDI output to SDI monitors or to a Blackmagic SmartScope Duo 4K for live waveform monitoring.

SDI Output Formats

Rear SDI Output	2160p23.98, 24, 25, 29.97, 30, 50, 59.94, 60. 1080p23.98, 24, 25, 29.97, 30, 50, 59.94, 60. 1080i50, 59.94, 60.
3G-SDI Monitoring Output	1080p23.98, 24, 25, 29.97, 30, 50, 59.94, 60.

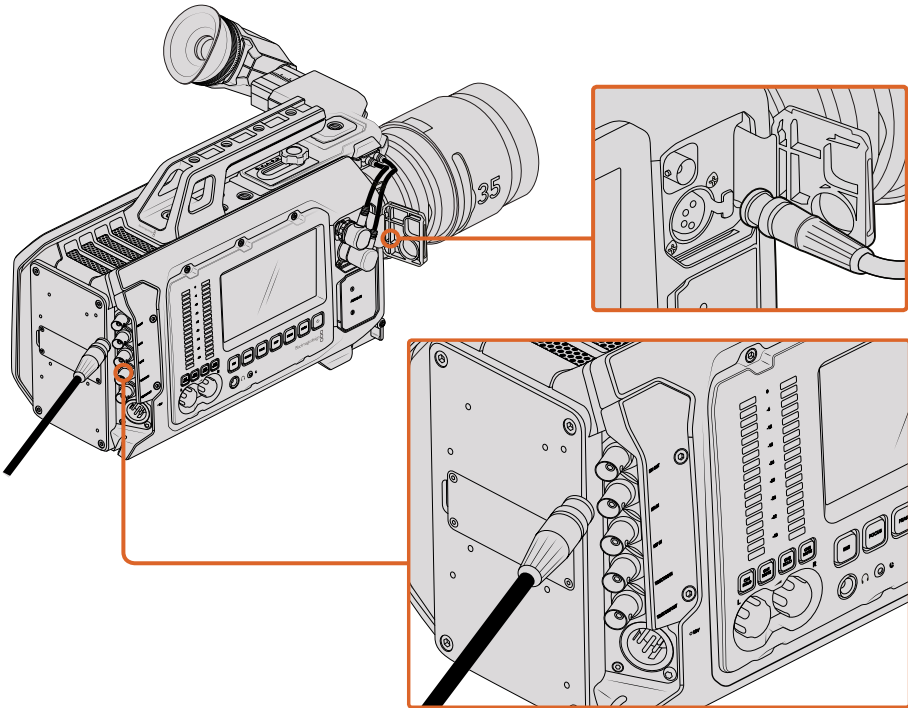

You can connect the 12G-SDI output to any 1080 HD or Ultra HD live production switcher or monitor. The HD monitoring output can be plugged into an external viewfinder, such as the Blackmagic URSA Viewfinder, or plugged into an external monitor when mounted to production equipment. For example a jib arm or crane.

Blackmagic URSA Viewfinder

Blackmagic URSA Viewfinder is a powerful electronic viewfinder designed for your Blackmagic URSA. The 1080HD color OLED display and precision glass optics provides a bright, vivid, and lifelike image so you can quickly find focus and see the finest detail in your images.


This viewfinder is perfect for handheld operation on the shoulder, or for environments where you need absolute precision with zero reflection and light glare, for example in extremely bright shooting conditions.

The viewfinder is connected and powered by the camera and uses the embedded SDI data from the camera to generate the various display options. This means that your camera can output a clean SDI feed to the viewfinder but still allows you to toggle various display options within the viewfinder for quick access to camera status, plus accurate information.

For example, if you select the '2.40:1' frame guide option in URSA's menu, it will actually tell the viewfinder which frame guide is selected in the camera so when you toggle the frame guide display on the viewfinder, the same '2.40:1' frame guide is also displayed.


Mounting and Connecting to Blackmagic URSA

To attach the Blackmagic URSA Viewfinder to the camera body, slide it along the handle ridges and tighten the thumb screw to one of the 3/8" mounting points.

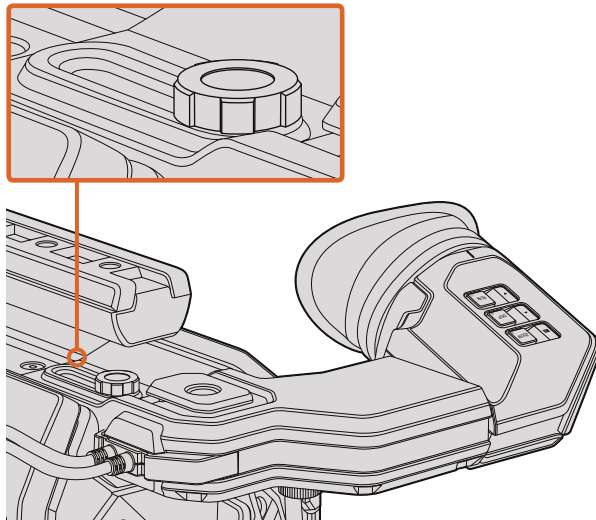

To mount your Blackmagic URSA Viewfinder to your URSA, slide the viewfinder mount along your camera's handle ridges and tighten the thumbscrew to a 3/8" mounting point.

To connect your URSA Viewfinder to your URSA, simply connect the viewfinder's attached cables to URSA's front 12V power and 3G-SDI outputs. Your URSA Viewfinder will turn on automatically when your camera is powered.

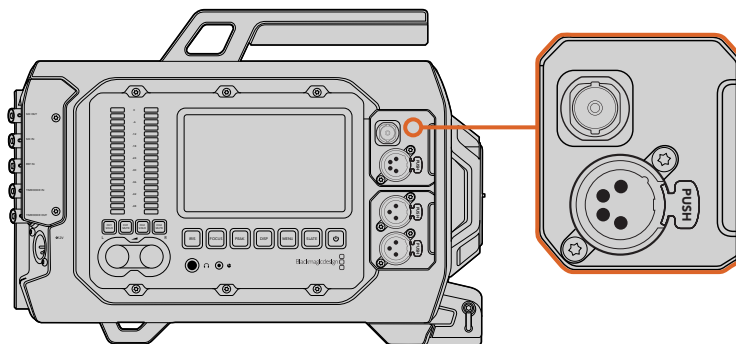

Connect your viewfinder's SDI and power cables to your URSA's HD-SDI monitoring output and +12 volt output.

When using the URSA Viewfinder with URSA Mini, it is highly recommended that you also install the URSA Mini shoulder mount kit as this provides the correct mounting points, 1/4" thumb screw, and height adjustments to optimize the positioning of your viewfinder. See the section 'URSA Mini shoulder mount' section in this manual.

Adjusting the Eyepiece


The detachable rubber eyepiece can be adjusted to fit your left or right eye. Adjust the viewfinder arm by loosening the knob on the bottom of the arm and sliding it left or right to comfortably fit your eye.

Button Features

On the top of the viewfinder you'll find the zoom, display and peak buttons. These buttons are used for zooming into your image, and turning overlays and focus peaking on or off.





They are also used for additional features, such as opening the menu and navigating settings. Icons printed on the side of the buttons show you which buttons are used to control the viewfinder menu and navigation features. The buttons also have a customizable function feature so you can assign shortcuts to quickly enable common features you may use frequently. For example you may wish to assign the false color feature to the zoom button. Refer to the 'shortcuts' section for more information.

- **ZOOM (F1) - 'menu'**
The 'zoom' feature helps you find sharp focus by zooming into your picture. Press the 'zoom' button to zoom in and press again to return to 100% view. When using the settings menu, the 'zoom' button also serves as the 'menu' button. Press and hold this button to open the settings menu. In the settings menu, press this button once to confirm setting changes.
- **DISPLAY (F2) - 'up'**
Press the 'display' button to see the overlay view. When using the settings menu, this button also serves as the 'up' button. You can also quickly open the 'shortcuts' menu setting by pressing and holding this button. Refer to the 'setting shortcut buttons' section for information on how to set shortcuts.
- **PEAK (F3) - 'down'**
The focus peaking feature creates a green edge around the sharpest parts of the image so you can easily confirm your focus. Press the 'peak' button to turn the peaking feature on. Press again to turn peaking off. When using the settings menu, this button also serves as the 'down' button. You can also quickly open the 'setup' menu by pressing and holding this button.

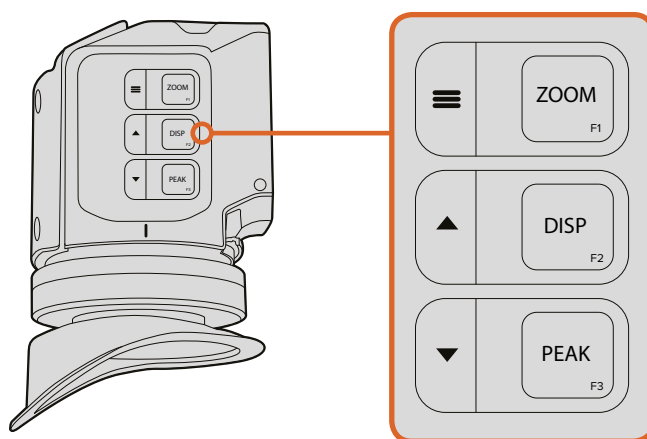

The Zoom (F1), Display (F2) and Peak (F3) buttons are located on top of the URSA Viewfinder.


Menu Settings

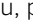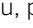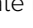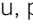The settings menu contains three primary menu headings for display, shortcuts, and setup. To open the settings menu, press and hold the 'menu'  button. Press the 'up'  and 'down'  button to navigate between the settings and press the 'menu'  button again to confirm your selection.

Display


The 'display' menu provides the following features:

- **B&W**
Switches between color and monochrome.
- **Peaking**
Switches peaking on and off.

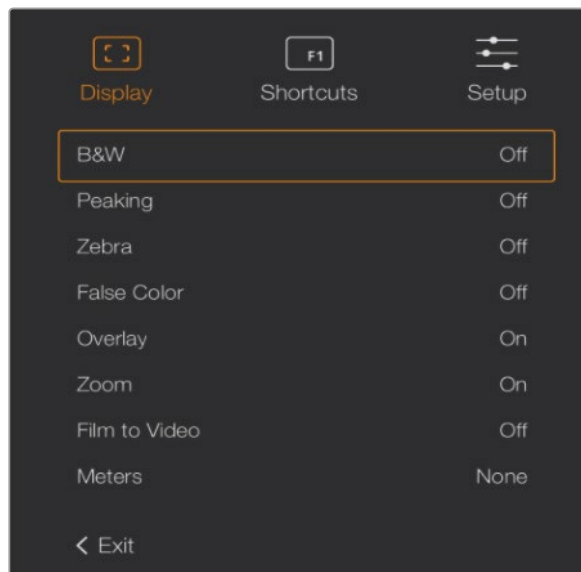

The 'display' menu in URSA Viewfinder

- **Zebra**
Switches zebra levels on and off. Set your desired zebra levels using the camera settings. For more information, refer to the 'settings' section in this manual.
- **False Color**
Switches the false color feature on and off. False color overlays different colors onto your image that represent exposure values for different elements in your image. For example, pink represents optimum exposure for skin tones. By monitoring the pink false color when recording people, you can maintain consistent exposure for skin tones. Similarly, when elements in your image change from yellow to red, that means they are now over exposed.

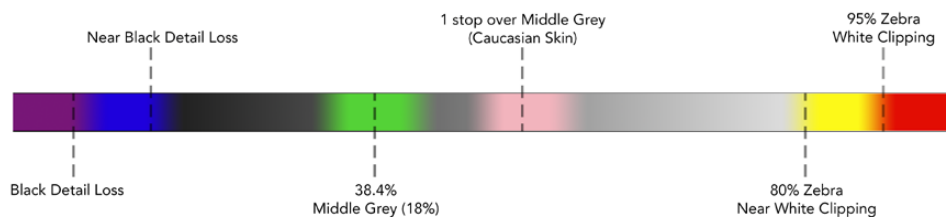


False Color Chart

- **Overlay**
Switches overlays on and off. The type of guides and status information displayed in the overlays are set in your camera.
- **Zoom**
Turns the zoom feature on and off.
- **Film to Video**
Switches between film and video display mode. Refer to the 'settings/display settings' section in this manual for information on film and video mode.
- **Meters**
Switches between the types of meters to display in overlay view. The options are 'histogram', 'audio', 'both' or 'none'.

Shortcuts

The shortcut function is useful when you need to quickly access a particular setting for a frequently used feature. To customize your shortcut buttons:

- 1 In the 'shortcuts' menu, press the 'up' ▲ or 'down' ▼ button to move up or down and select one of the 3 buttons to make it your shortcut button. Press the 'menu' ≡ button to confirm your selection.

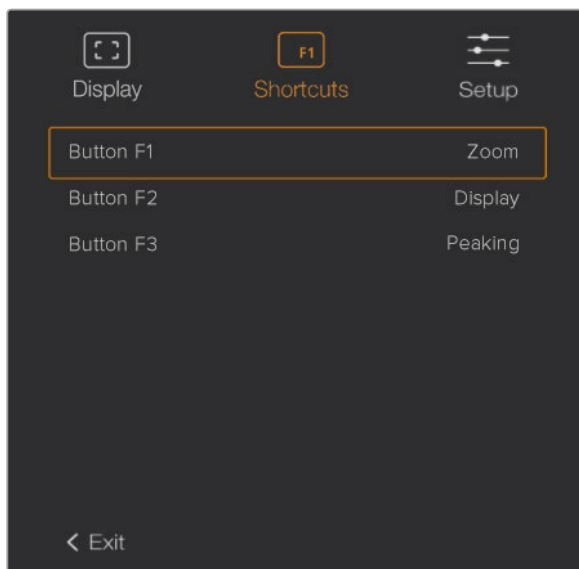

The 'shortcuts' settings in URSA Viewfinder.

- 2 Press the 'up' ▲ or 'down' ▼ button to toggle and select one of the features below to assign to the shortcut button. Press the 'menu' ≡ button to confirm your selection.
 - B&W
 - Peaking
 - Zebra
 - False Colour
 - Display
 - Zoom
 - Film to Video
 - Meters
 - Focus Chart
- 3 Scroll to 'exit' and press the 'menu' ≡ button to close the menu display view.

Setup

The 'setup' menu provides the following features:

- **Brightness Adjustment**
Allows adjustments for the brightness of the display with range -10 to +10.
- **Tally Brightness**
Allows adjustments of tally LED brightness.
- **Focus Chart**
Your Blackmagic URSA Viewfinder has a built in focus chart so you can focus the eye piece to suit your eyes. Simply turn the focus diopter on the eyepiece until the chart is in perfect focus. Pressing any button on your viewfinder will close the focus chart display.

When using Blackmagic URSA Viewfinder with Blackmagic URSA Mini, the following additional options are available.


- **Frame Guides**
Toggles the appearance of frame guides. When 'frame guides' are turned 'on' in your URSA Mini's 'Front SDI' monitor settings, you can use this setting to toggle the appearance of these guides in your Blackmagic URSA Viewfinder. For more information, see the 'URSA Mini setup' section in this manual.
- **Safe Area Guide**
Toggles the appearance of a safe area guide. When 'safe area guide' is turned 'on' in your URSA Mini's 'Front SDI' monitor settings, you can use this setting to toggle its appearance in your Blackmagic URSA Viewfinder. For more information, see the 'URSA Mini setup' section in this manual.
- **Grid**
Toggles the appearance of a rule of thirds grid, crosshair or center dot. When 'grids' are turned 'on' in your URSA Mini's 'Front SDI' monitor settings, you can use this setting to toggle their appearance in your Blackmagic URSA Viewfinder. For more information, see the 'URSA Mini setup' section in this manual.
- **Status Text**
Toggles the appearance of status text, such as white balance, frame rate and ISO. When 'status text' is turned 'on' in your URSA Mini's 'Front SDI' monitor settings, you can use this setting to toggle its appearance in your Blackmagic URSA Viewfinder. For more information, see the 'URSA Mini setup' section in this manual.

IR Sensor

The IR Sensor on your viewfinder automatically detects when you are near the eyepiece and turns on the OLED display. If you are away from the viewfinder for over twenty seconds in 'standby' mode, display turns off to conserve power and to extend the life of the OLED display. While recording, the timeout sensor is extended to 5 minutes, at which point the OLED display will be slowly dimmed. Any movement in front of the eyepiece will reset this timer. The viewfinder will detect when you look into the viewfinder eyepiece, pressing any button on the viewfinder will also turn the display back on.



Deliberately blocking or covering the IR sensor could cause the viewfinder's display to remain powered for prolonged periods of time. This could decrease the lifespan of the display and cause image retention if high contrast images or frame guides are displayed on the viewfinder.

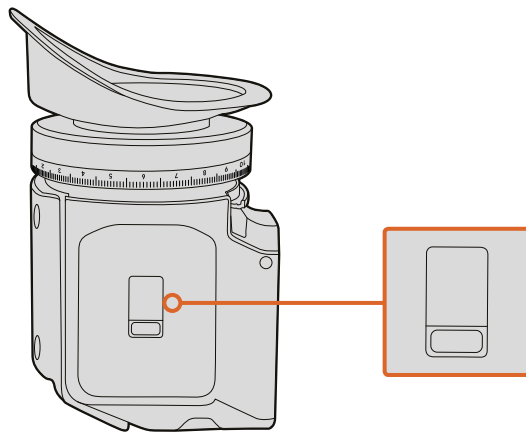

The IR sensor is located at the bottom of the URSA Viewfinder.


Updating URSA Viewfinder's Internal Software

Update your viewfinder using the Blackmagic Camera Setup utility software. The viewfinder will need to be powered when updating, so we recommend keeping the viewfinder connected to your URSA during the update process. This also means your URSA will need to supply consistent power, so be sure to plug into external power.

Connect your computer to the small USB connection located at the front of your viewfinder, near the eyepiece. When Blackmagic Camera Utility is launched and your viewfinder is connected to your computer, you will be prompted to update if your computer detects that your viewfinder is using an older version. Follow the on screen prompts to update your viewfinder's internal software. Refer to the 'Blackmagic Camera Setup Utility' section in this manual for more information.

We recommend updating all your Blackmagic URSA equipment at the same time for optimized performance.

Mounting Batteries

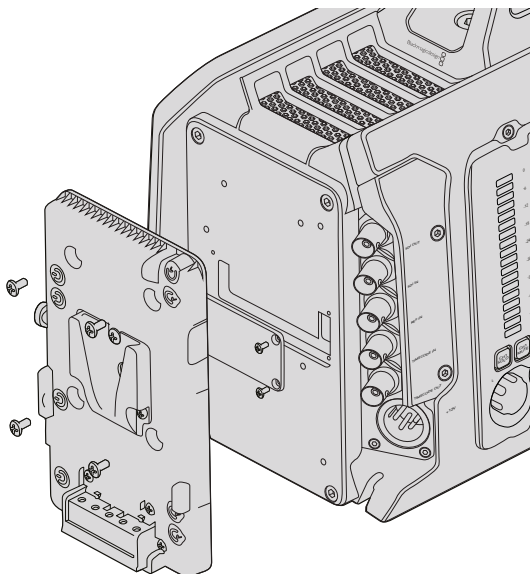

Connecting a third party battery plate lets you mount V-mount or gold mount batteries.

Mounting V-mount or Gold Mount Batteries

You can easily mount industry standard V-mount or gold mount batteries to Blackmagic URSA or URSA Mini.

To mount a battery, you'll need to attach a Blackmagic V-mount battery plate, a third party V-mount or gold mount battery plate to your camera's plate mount.

TIP Some third party battery plates such as IDX's ET-PV2UR, Blueshape's MVURSA and Anton Bauer's QRC-BMURSA come pre-terminated with the correctly wired connector for plugging straight into URSA and URSA Mini's molex power connector. IDX ENDURA batteries with Digi View functionality such as E-HL9 and ELITE models, Blueshape V-lock batteries and Anton Bauer DIGITAL and Logic Series® will all show accurate percentage power information with their corresponding plates on URSA and URSA Mini. The standard Blackmagic V-mount battery plate supports displaying percentage information with Switronix Hypercore batteries.

You can purchase V-mount battery plates from Blackmagic Design resellers, or V-mount and gold mount battery plates from suppliers of professional digital cinema and video equipment. If you don't have an off the shelf battery plate designed for Blackmagic URSA or URSA Mini and you want to modify your own battery plate, then you can use the supplied adapter cable and connector. Refer to the 'using your own battery plate' section for information about how any battery plate can be modified to use with URSA or URSA Mini.

To mount your battery plate to the rear panel:

- 1 Remove Blackmagic URSA or URSA Mini's molex power cover from the rear panel by unscrewing the 4 corner screws. You'll now see Blackmagic URSA's 12 way molex 55959-1230 power connector.
- 2 Connect Blackmagic URSA or URSA Mini's 12 way molex 55959-1230 power connector to your third party battery plate.
- 3 Screw the third party battery plate onto your Blackmagic URSA or URSA Mini's plate mounting points using 4 x M3 screws. Make sure the connector cable is tucked safely into the cable slot and not crushed between the plates when tightening.

With the third party plate connected to your camera, you can now mount a V-mount or gold mount battery.

Using your own Battery Plate

Adapter Cable and Connector

If you don't have an off the shelf battery plate designed to plug into URSA and want to modify your own battery plate, you can use the supplied adapter cable and connector, which is also available at your local Blackmagic Design support office.

To wire the adapter cable and connector to your battery plate:


- 1 Strip approximately half an inch of insulation from the end of each red and black wire.
- 2 Solder all 4 x red 'Batt' wires to the corresponding 'positive' wire from your battery plate.
- 3 Solder all 4 x black 'GND' wires to the corresponding 'negative' wire from your battery plate.

Ensure the joins are well insulated.



If you need to modify any battery plate to plug into URSA, use the supplied adapter cable and connector, which is also available from your local Blackmagic Design support office.

This enables battery power to your camera. You can also connect additional wires for features such as 12 V output and battery status. Refer to your battery plate information, plus the diagram and tables on this page for help connecting the wires. If you require further assistance visit the Blackmagic Design support center at www.blackmagicdesign.com/support.

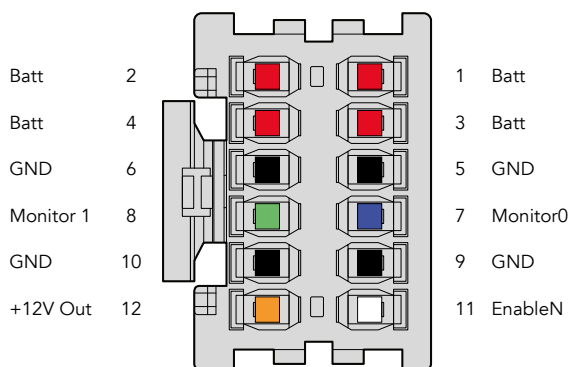

The rear view of the adapter's connector housing.
Refer to the wire configuration table for a description of each pin.

Wire Configuration Table

Pins	Signal	Color	Direction	Description
1, 2, 3, 4	Batt	Red	To URSA	12 V to 20 V
5, 6, 9, 10	GND	Black	—	—
7	Monitor0	Blue	To URSA	Analog battery level or open drain data line (20 V max)
8	Monitor1	Green	To URSA	Open drain clock line (3.4 V max)
12	+12 V out	Orange	From URSA	12 V regulated output 1.5 A max (18 W)
11	EnableN	White	To URSA	Connect to GND to enable +12 V out. Leave floating if +12 V out is not required.

Each Batt and GND pin supports 3 amps. Make sure all Batt and GND pins are connected. To monitor the battery status using Anton Bauer, IDX, or Blueshape plates, follow the connection table below:

Anton Bauer	Connect the blue/white striped wire to the housing blue wire at pin 7.
IDX	Connect the green wire to the housing green wire at pin 8, and the grey wire to the housing blue wire at pin 7.
Blueshape	Connect the blue wire labelled "SMBC" to the housing green wire at pin 8. Connect the brown wire labelled "SMBD" to the housing blue wire at pin 7.

Secure any unused wires by cutting them as close as possible to the rear of the adapter connector.

Using DaVinci Resolve



Shooting with your Blackmagic URSA is only part of the process of creating film and television content, and just as important is the process of media backup and management as well as editing, color correction and encoding final master files. Your Blackmagic URSA or URSA Mini includes a version of DaVinci Resolve Studio for Mac OS X and Windows so you have a complete solution for shooting and post production!

NOTE We recommend using the latest version of DaVinci Resolve for the best performance and latest features. This is especially so if you're shooting with URSA Mini 4.6K models, which require version 12.5 or higher of DaVinci Resolve for accurate color treatment.

After connecting your CFast card to your computer, you can use DaVinci Resolve's 'clone' tool, in the 'media' page, to create running backups as you shoot. This is recommended as any type of media is susceptible to becoming damaged or developing a fault so creating backups ensures your shots will be immune to loss. Once you have used DaVinci Resolve to back up your media, you can then add your clips to the DaVinci media pool, then edit, color correct, and finish your production without ever having to leave DaVinci Resolve.

Because Blackmagic URSA and URSA Mini shoots a much wider dynamic range than regular video cameras, DaVinci Resolve will help you adjust your shots to get any kind of look you are after. DaVinci Resolve is the same tool used on most major blockbuster movies, so it's much more than a simple NLE software tool, as it has extremely advanced technology built in for high end digital film. You get the advantage of this technology when you use DaVinci Resolve to edit and color correct your work.

Included here is information on how to get started using DaVinci Resolve with your camera files. Of course, DaVinci Resolve is extremely advanced and includes a lot more features than you immediately see when first looking at its user interface. To learn more about how to use DaVinci Resolve, please check for the DaVinci Resolve instruction manual pdf file on the DaVinci Resolve software disk, or check online for the many training courses and tutorial videos available.

Importing your Clips

To start editing your clips, you'll first need to import them into the media pool:

- 1 Launch DaVinci Resolve. If this is the first time you've opened DaVinci Resolve, wait for the Project Manager to appear, and double click the 'untitled project' icon in the project manager window. If the log in window appears, that means you have the Resolve multi-user environment enabled. In this case, click Add New at the bottom left of the log in window and create a new user by entering a user name and clicking Setup New User. Then double-click the user icon to proceed to the Project Manager. Now click 'new project', enter a title for your project and click 'create'. This will add your new project to the project manager. Double click on your project to open it.
- 2 You'll now see the 'media' page with a 'media storage' browser at the top left. The 'media storage' browser displays all your linked media folders from where you'll drag your clips and drop them into the media pool.
- 3 If your clip folder doesn't appear in the library, you'll need to add it. This is easily done by clicking on preferences in the DaVinci Resolve title bar and clicking on the 'add' button in the 'media storage' tab. Browse to and select a drive or folder path, click 'open', restart DaVinci Resolve and reopen your project to refresh the 'media storage' settings.
- 4 In the 'media storage' browser, click on your newly added clip folder. Now simply drag your clips from your storage folder and drop them into the media pool. If the untitled project settings are different to your clip settings, you'll be prompted to either change the project settings to match your clips, or leave the settings as they are. To get started quickly, click 'change'. Now your project settings match your clips.



To import your clips, simply drag them from the 'media storage' browser and drop them into the media pool. You can also drag and drop files from your desktop.

Working with RAW files

RAW clips give you maximum flexibility in post production. While ProRes and DNx files, for example, convert your camera's sensor data into their respective codecs, RAW clips keep the original sensor data without conversion. This lets you make adjustments to clips, such as white balance and ISO settings, as if you were changing the original camera settings. Working with the original sensor data also retains more tonal information within shadows and highlights, which is useful for recovering details, for example in blown out skies and dark areas of the picture.

It's worth shooting in RAW if you are after the highest possible quality, or for shots where there is an extreme variance between highlights and shadows and you may need to push and pull those regions as much as possible in the grade.

RAW files can be large and processor intensive, but you can set DaVinci to automatically create proxy files to help your computer with real time playback. For more details on how to get the most out of your RAW files in your grade and how to set up a real time workflow, refer to the DaVinci Resolve manual.

When you first import RAW files, DaVinci Resolve will decode the sensor data contained in the files using the ISO, white balance and tint settings used on the camera at the time of shooting. If you're happy with the look of these settings, you can start editing right away.

The great thing about shooting RAW is that you're not tied to these settings at all!

The breadth of available post processing options when working with RAW files mean that you'll develop your own workflow over time. But if you're new to working with these files, though, there's two sets of adjustments we recommend experimenting with first. Project and clip RAW settings are a great introduction to the amount of changes you can make to your footage and best of all, any changes you make are completely reversible.

Project Raw Settings

To make global adjustments to all of the RAW footage in your project:

- 1 Enter the project settings menu by clicking 'file,' then 'project settings.'
- 2 In the 'Camera RAW' tab, you'll see a small arrow in the top right corner with one of several RAW formats next to it. Click this and set the codec to 'cinemaDNG' for footage shot on Blackmagic URSA or URSA Mini.
- 3 Select 'project' in the 'Decode Using' drop down menu.


Using 'Project' decoding gives you direct access to many of the image processing options that make shooting with RAW so appealing. This is a great place to start making general adjustments to the general look of your project by adjusting the overall white balance, sharpening, exposure and so on.

Clip Raw Settings


To make individual adjustments to RAW settings on a per clip basis:

- 1 Select the clip or clips you want to adjust in your media pool.
- 2 Right click your selection and choose 'edit cinemaDNG codec settings' from the 'camera RAW codec settings' menu.
- 3 Select 'clip' from the 'decode using' dropdown menu.

Use this menu to make additional changes and fine tune the settings you've made in the 'project settings' camera RAW tab.

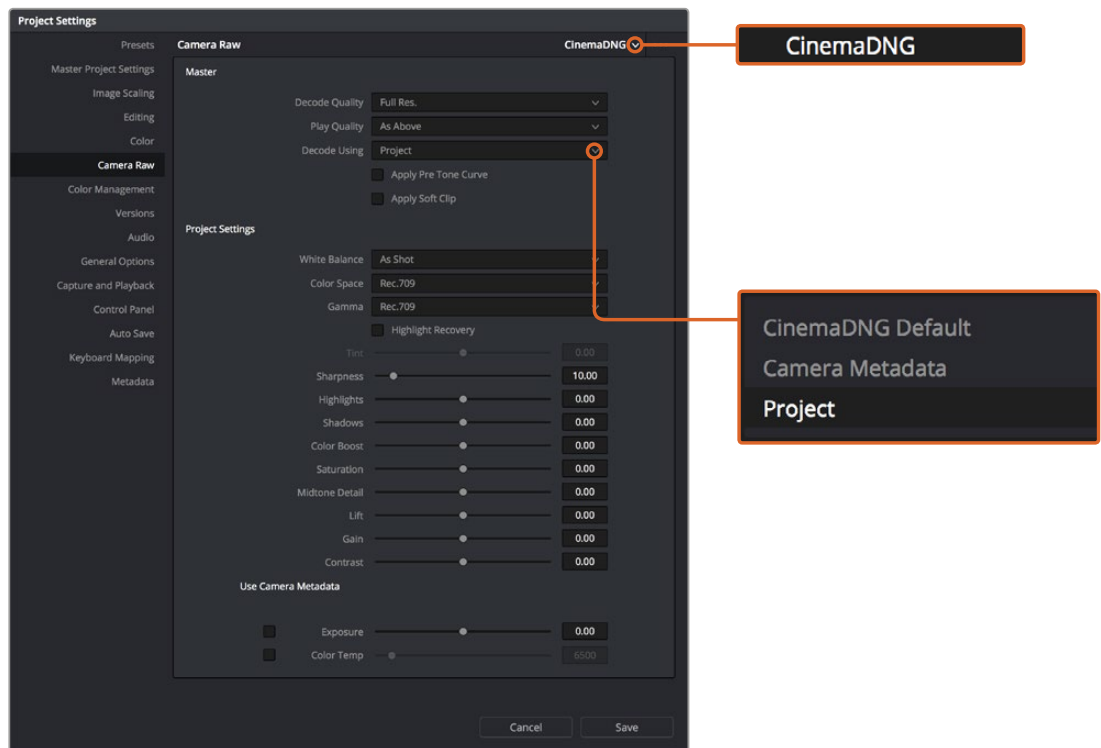

Use the 'project settings' menu to change RAW settings for all clips.

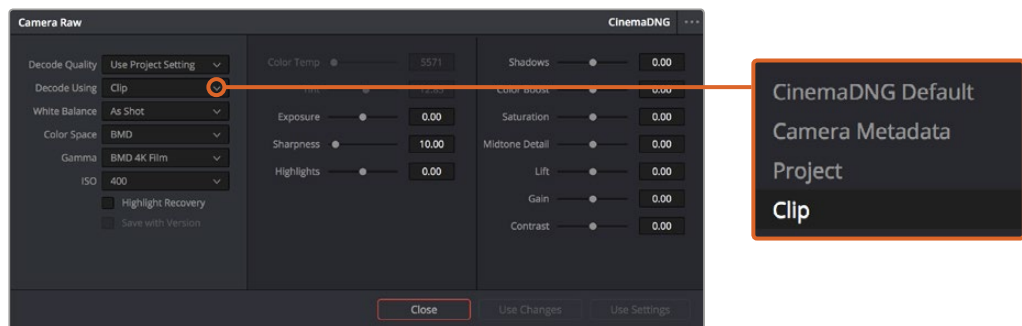

Use the 'edit cinemaDNG codec settings' menu to change RAW settings for individual clips.

Using these two menus together gives you a strong starting point for editing and color grading your footage, and is also a great place to start experimenting with the power of RAW footage.


For a full description of all of the settings available in the Project Settings and Camera Raw Codec Settings menus, refer to the DaVinci Resolve manual.

Editing your Clips

With your clips in the media pool, click on the 'edit' tab to open the edit page.

Now you can start building your edit!

- 1 You'll first need to create a new timeline. Right click anywhere within the media pool and choose Timelines > New Timeline. When the dialog box appears, click the 'create' button.

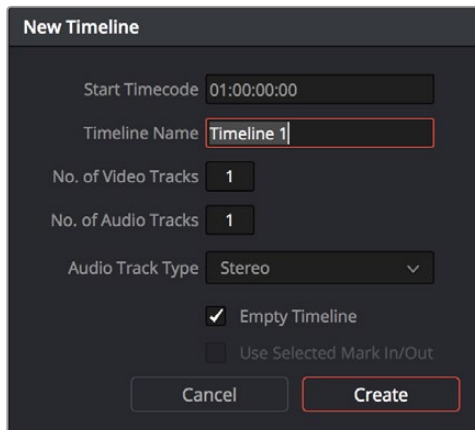

To start editing your clips, you'll need to create a new timeline. The timeline is the stage upon which all your editing will take place.

- 2 Double click a clip in the media pool to open the clip in the source viewer. Use the mouse pointer to scrub the play head in the source viewer left and right until you find the start frame you want for the clip. Mark the in point with the 'I' shortcut. Do the same for the end frame using the 'O' shortcut.
- 3 Go to the timeline and position the timeline play head where you want your clip to be inserted.
- 4 To insert the clip onto the timeline, click inside the source viewer then drag the mouse pointer across to the timeline viewer. A list of edit options will appear. Select the type of edit you want.

Your clip will be placed onto the timeline using the edit type you selected. You'll find a description of each edit type and how to use them in the DaVinci Resolve manual.

A faster way to add clips to your edit is by dragging them from the media pool and dropping them directly onto the timeline where you can adjust your in and out points, position your clips, try different plug in effects, titles, and more. This particular workflow is like using the timeline as an artist's palette.



The 'edit' page. You can trim your clips, change their order, move them around and add transitions between them using the timeline editor.

Trimming Clips

When editing clips you'll want to trim them to include only the specific actions you want in each shot. There are various ways, but the easiest is to adjust the clips' in and out points on the timeline:

- 1 After adding clips to your timeline, hover your mouse pointer over the start of a clip until the pointer becomes a 'trim' icon.
- 2 When the 'trim' icon appears, click on the start of your clip and drag it forwards or backwards to trim the in point. Watch the timeline monitor as you trim to find the edit point.
- 3 Now click and drag the end of your clip to adjust the out point.

The zoom slider is located above the timeline, to the right of the tools that are centered in the toolbar. By dragging the slider left and right you can zoom in and out of your timeline to make fine adjustments.

Turning the 'snapping' feature off is handy when fine tuning edits, but it's a helpful feature to keep your clips held tightly against each other, so it's worth turning back on once you're done. Press the 'N' key to quickly turn snapping on or off.




The 'edit' page. You can trim your clips, change their order, move them around and add transitions between them using the timeline editor.

Mapping Keyboard Shortcuts

If you are familiar with keyboard shortcuts using other editing software, you can easily map your own in DaVinci Resolve to increase speed and optimise your workflow.

To map your own keyboard shortcuts:


- 1 Click on the project setting 'gear' icon at the bottom right of your DaVinci workspace, then select 'keyboard mapping' from the settings list.
- 2 Select the shortcut you want to change from the categories provided, for example timeline cut and paste shortcuts will be in the 'edit' category.
- 3 Click on the shortcut once to highlight the setting. Double click on the shortcut to enable the change.
- 4 Press your new shortcut keys on the keyboard. If you make a mistake you can easily undo the change by clicking the 'undo' icon next to the setting.
- 5 Click 'save' to confirm your new shortcut setting.

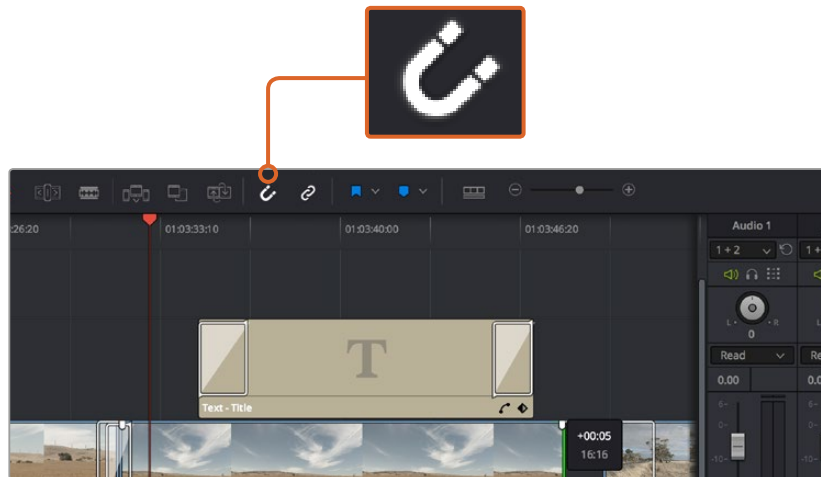

Trim your clips by dragging their start and end points left or right.
The 'snapping' feature can be turned off when making fine adjustments.

Adding Transitions

A transition is a visual effect used to bridge one clip to another in a pleasing way, for example dissolves, wipes, dips to color, and more. These can add a layer of excitement to your edit. Transitions don't always have to be joining two clips, for example you can apply a dissolve transition to the end of one clip to create a quick and easy fade to black.

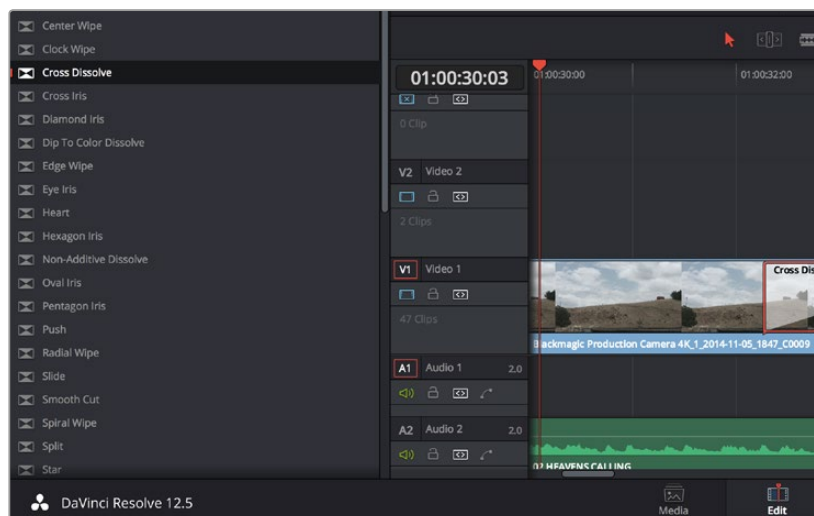


The transitions palette contains many types of transition effects.

To add a dissolve transition between two clips:

- 1 Make sure there are two clips edited right next to one another on the timeline. Click the 'effects library' button in the UI toolbar at the top of the 'edit' page, and make sure the 'toolbox' panel is open.
- 2 Click on the 'cross dissolve' transition, drag it to your timeline and hover it over the edit point between two clips. You'll see the mouse pointer highlight both the end section of the first clip, and the start of the second. Drop the transition onto the clips. It's important both clips have enough length before and after their edit points to make room for the dissolve.

You now have a smooth transition mixing from one clip to the other. If you want to adjust the length of the transition you can lengthen or shorten its start and end point using a similar approach to trimming a clip. Hover your mouse pointer over the start or end of the transition until the transition 'trim' icon appears, then drag it left or right.

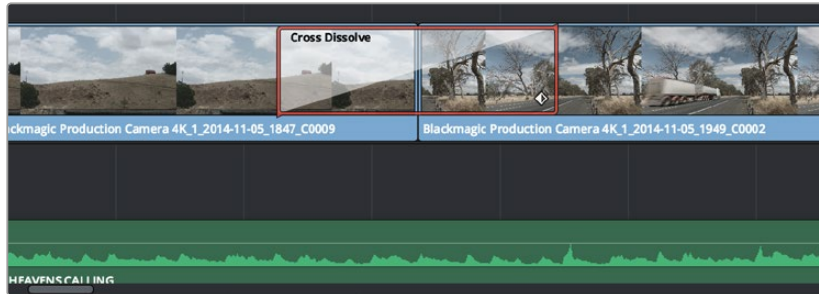

Simply drag and drop transitions between adjoining clips.

Adding Titles

It's easy to create titles for your edit. You can place a title on any video track just as you would a clip. If you run out of tracks you can easily add new ones by right clicking next to an existing track name and selecting 'add track'.

To create a title:

- 1 Scroll down towards the middle of the toolbox in the 'effects library' located underneath the media pool and you'll see the 'titles' generators. Use the scroll bar to reveal more 'titles' options.
- 2 Drag and drop a text title on the empty video track above the clip you want the title to appear. You can even drop your title next to a clip on Video 1 if you just want it to appear over black. To see the title, make sure the timeline playhead is on the title.
- 3 Double click on the title clip. The 'inspector' will appear showing you the settings for your title. Type your title into the 'text' field.

You can choose from a variety of fonts and adjust the appearance of your title by changing settings such as color, size, alignment, position, and more. Transitions can be added to titles, just like they can for clips.



Drag a title type from the 'titles' palette and drop it on an empty track.

Adding Audio Tracks

If you want to mix a large sound edit with lots of sound effects and music, you can easily add more audio tracks when you need them.


To add an audio track:

- 1 Right click next to the name of the last audio track on your timeline and select 'add track'.
- 2 Select the type of audio track you want, such as stereo, mono, 5.1 or adaptive.

Your new audio track will appear on the timeline.

This can be handy when you want to separate your audio elements into individual tracks for a sound mix, for example voice, sound effects, and music.

Refer to the DaVinci Resolve manual for more information on how you can use all the powerful editing tools.

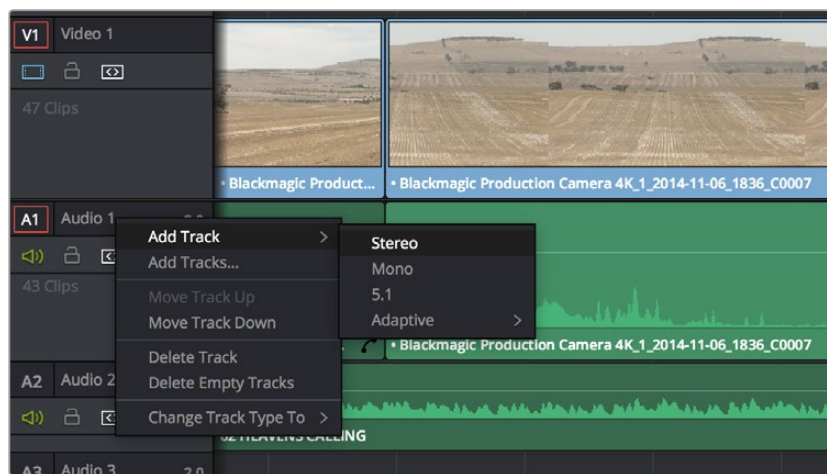

To add a new audio or video track, right click next to a track name and select 'add track'. For audio, select the track type you want.

Color Correcting your Clips

Once you have edited your sequence of clips, you can start color correcting. This is best begun after you have finished editing your sequence so you can maintain a consistent look, but part of the fun of DaVinci Resolve is being able to move between the edit and color page to make fine adjustments and discover new creative choices.



With the 'color' page you get absolute control over the look of your clips.


First, click on the 'color' tab to open the 'color' page.

You'll see the color wheels, curves palettes and general color correction tools as well as the preview and nodes window. Don't feel overwhelmed by the vast array of features in front of you, they are all there to help you get the most amazing looking pictures. The DaVinci Resolve manual will show you exactly what the tools are for and how to use them in easy to follow steps. You'll learn the same techniques the professionals use in high end color correction facilities.

Generally, the first thing you'll want to do is optimize the shadows, mid tones and highlights in your clips. In other words adjust the 'lift', 'gamma' and 'gain' settings. This will help get your pictures looking their brightest and best with a clean, uniform starting point from where you can begin grading the 'look' of your film.

Using Scopes

Most colorists make creative color choices by focusing on the emotion and the look they want their program to have and then simply work using the monitor to achieve that look. You can look at everyday objects and how different types of light interact with them to generate ideas on what you can do with your images and a little practice.

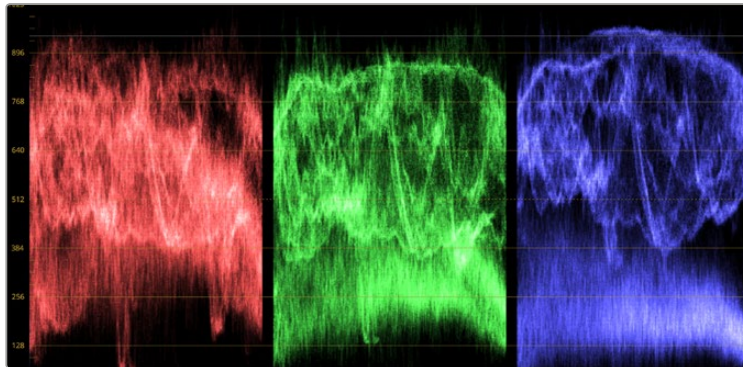

The parade scope helps you optimize highlights, mid tones and shadows.



The 'lift', 'gamma', 'gain' and 'offset' color wheels give you total control over the color and tonal balance of your clips. To make a uniform adjustment to all colors for each tonal region, drag the dial underneath the color wheels back and forth.

Another way to color grade is to use the built in scopes to help you balance shots. You can open a single video scope by clicking the 'scope' button, which is the second from the right on the palette toolbar. You can choose to display a waveform, parade, vectorscope and histogram. Using these scopes you can monitor your tonal balance, check the levels of your video to avoid crushing your blacks and clipping the highlights, plus monitor any color cast in your clips.

The 'color wheels' palette contains the 'lift', 'gamma' and 'gain' controls which will generally constitute your first adjustment. These should resemble controls you've seen in other applications for doing color and contrast adjustments. For more accurate control of each color using a mouse, you can change the color wheels to 'primaries bars' which let you adjust each color and luminance channel for the lift, gamma and gain controls separately. Simply select 'primaries bars' from the drop down menu near the top right of the color wheels.

1 Adjusting the 'lift'

With your first clip selected on the color timeline, click on the 'lift' dial underneath the first color wheel. Slide it back and forth and watch how it affects your image. You'll see the brightness of the dark regions of your picture increase and decrease. Set it to where you want the dark areas to look their best. If you decrease the lift too much, you'll lose details in the blacks and you can use the parade scope to help avoid this. The optimal position for blacks on the waveform is just above the bottom line of the parade scope.

2 Adjusting the 'gain'


Click on the 'gain' dial and slide it back and forth. This adjusts the highlights which are the brightest areas of your clip. The highlights are shown on the top section of the waveform on the parade scope. For a brightly lit shot, these are best positioned just below the top line of the waveform scope. If the highlights rise above the top line of the waveform scope, they will clip and you will lose details in the brightest regions of your image.

3 Adjusting the 'gamma'

Click on the 'gamma' dial underneath the color wheel and slide it back and forth. As you increase the gamma you'll see the brightness of the image increase. Notice the middle section of the waveform will also move as you adjust the gamma. This represents the mid tones of your clip. The optimal position for mid tones generally falls between 50 to 70% on the waveform scope. However, this can be subjective based on the look you are creating and the lighting conditions in the clip.

You can also use the curves palette to make primary color corrections. Simply click to create control points on the diagonal line inside the curve graph, and drag them up or down to adjust the master RGB contrast at different areas of image tonality. The optimum points to adjust are the bottom third, mid, and top third of the curve line.

There are many more ways of doing primary color correction in DaVinci Resolve. Check the DaVinci Resolve manual to learn how to use them all.

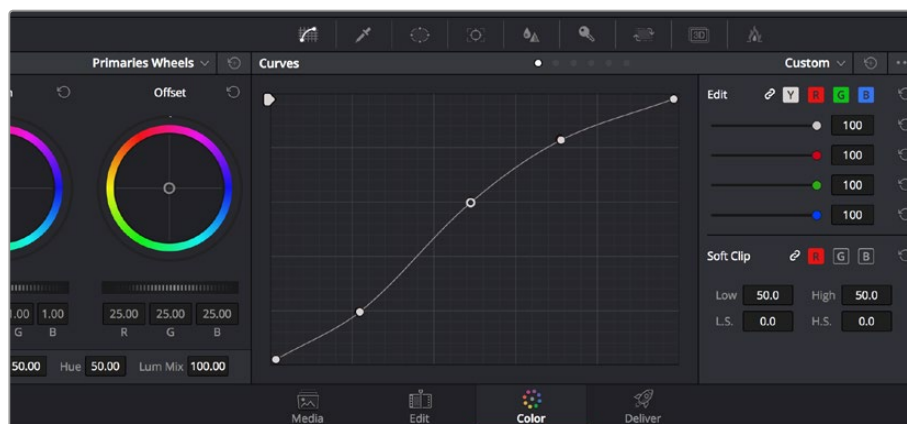

The curves palette is another tool you can use to make primary color corrections, or enhance specific areas of your clip when using a power window.

Secondary Color Correction

If you want to adjust a specific part of your image then you need to use secondary corrections. The adjustments you have been doing up until now using the color wheels and lift, gamma and gain adjustments affect the whole image at the same time and so they are called primary color corrections.

However if you need to adjust specific parts of your image, say for example you wanted to improve the color in the grass in a scene, or you wanted to deepen the blue in a sky, then you can use secondary corrections. Secondary color corrections are where you select a part of the image and then adjust just that part. With nodes, you can stack multiple secondary corrections so you can keep working parts of your image until everything is just right! You can even use windows and tracking to allow the selections to follow movement in your images.

Qualifying a Color

Often you'll find a specific color in your clip can be enhanced, for example grass by the side of a road, or the blue in a sky, or you may need to adjust color on a specific object to focus the audience's attention on it. You can easily do this by using the HSL qualifier tool.



Use the HSL qualifier feature to select specific colors in your image. This is handy when you want to make areas of your image 'pop', to add contrast, or to help draw the audience's attention to certain areas of your shot.

To qualify a color:

- 1 Add a new serial node.
- 2 Open the 'qualifier' palette and make sure the 'color range' sample eyedropper tool is selected.
- 3 Click on the color in your clip you want to affect.

Usually you'll need to make some adjustments to soften the edges of your selection and limit the region to only the desired color. Click on the 'highlight' button to see your selection.
- 4 Adjust the 'width' control in the 'hue' window to broaden or narrow your selection.

Experiment with the high, low and softness controls to see how to refine your selection. Now you can make corrections to your selected color using the color wheels or custom curves.

Sometimes your selection can spill into areas of the shot you don't want to affect. You can easily mask out the unwanted areas using a power window. Simply create a new window and shape it to select only the area of color you want. If your selected color moves in the shot, you can use the tracking feature to track your power window.

Adding a Power Window

Power windows are an extremely effective secondary color correction tool that can be used to isolate specific regions of your clips. These regions don't have to be static, but can be tracked to move with a camera pan, tilt or rotation, plus the movement of the region itself.



Use power windows to mask out areas you don't want to be affected by the HSL qualifier secondary adjustments.

For example, you can track a window on a person in order to make color and contrast changes just to that person without affecting his/her surroundings. By making corrections like this you can influence the audience's attention on areas you want them to look at.

To add a power window to your clip:

- 1 Add a new serial node.
- 2 Open the 'window' palette and select a window shape by clicking on a shape icon. Your selected window shape will appear on the node.
- 3 Resize the shape by clicking and dragging the blue points around the shape. The pink points adjust the edge softness. You can position the shape by clicking the center point and moving it to the area you want to isolate. Rotate the window using the point connected to the center.

Now you can make color corrections to your image in just the area you want.



Power windows let you make secondary corrections to specific parts of your image.

Tracking a Window

The camera, object or area in your shot may be moving, so to make sure your window stays on your selected object or area, you'll need to use DaVinci Resolve's powerful tracking feature. The tracker analyzes the pan, tilt, zoom and rotation of the camera or object in your clip so you can match your windows to that movement. If this isn't done, your correction can move off the selected target and call attention to itself, which you probably don't want.



You can track objects or areas in your clip using the tracker feature so power windows can follow the action.

To track a window to a moving object:

- 1 Create a new serial node and add a power window.
- 2 Go to the start of your clip and position and size the window to highlight just the object or area you want.
- 3 Open the 'tracker' palette. Select the pan, tilt, zoom, rotate, and perspective 3D settings appropriate for the movement in your clip by checking or unchecking the relevant 'analyse' checkboxes.
- 4 Click on the 'forward' arrow to the left of the checkboxes. DaVinci Resolve will now apply a cluster of tracking points on your clip and then step through the frames to analyze the movement. When the tracking is done, your power window will follow the path of the movement in your clip.

Most of the time automatic tracking is successful, but scenes can be complex and sometimes an object can pass in front of your selected area, interrupting or affecting your track. This can be solved manually using the keyframe editor. Refer to the DaVinci Resolve manual to find out more.

Using Plugins

While making secondary color corrections you can also add OpenFX plugins to create fast, interesting looks and effects using the 'color' page, or imaginative transitions and effects on your clips on the 'edit' page. OFX plugins can be purchased and downloaded from third party suppliers.

After installing a set of plugins, you can access them on the color page by opening the OpenFX inspector to the right of the 'node editor'. Simply click the 'OpenFX' button to open the OpenFX inspector, create a new serial node and drag and drop a plugin onto the new node. If the plugin has editable settings, you can adjust these in the adjoining 'settings' panel.

In the 'edit' page you can add plugin generators and transitions to clips by opening the 'OpenFX' panel in the 'effects library' and dragging your selected plugin onto the video track above your clip on the timeline.



OFX plugins are a quick and easy way to create imaginative and interesting looks.

Mastering your Edit

So now you've edited, color corrected and graded your clips you'll want to export a render of your edit in the 'deliver' page. This page lets you select the range of clips you want to export, plus the format, codec and resolution you want. You can export in many types of formats such as QuickTime, AVI, MXF and DPX using codecs such as 8-bit or 10-bit uncompressed RGB/YUV, ProRes, DNxHD, H.264 and more.



The 'deliver' page is where you export your edit. You can select from many different video formats and codecs

To export a single clip of your edit:

- 1 Click on the 'deliver' tab to open the deliver page.
- 2 Go to the 'render settings' window on the top left of the page. In the 'format' settings, select 'single clip'. You can now choose from a number of export presets, for example YouTube, Vimeo and audio presets, or you can set your own export settings manually by leaving it set to the default 'custom' preset and entering your own parameters. For this example, select YouTube, then click on the arrow next to the preset and select the 1080p video format.

The frame rate will be locked to your project frame rate setting.

- 3 Underneath the presets you will see the timeline filename and the target location for your exported video. Click the 'browse' button and choose the location where you want to save your exported file.
- 4 Immediately above the timeline, you'll see an options box with 'entire timeline' selected. This will export the entire timeline, however you can select a range of the timeline if you want to. Simply choose 'in/out range' and then use the 'i' and 'o' hot key shortcuts to choose the in and out points in your timeline.
- 5 Go to the bottom of the 'render settings' and click on the 'add to render queue' button.

Your render settings will be added to the render queue on the right side of the page. Now all you have to do is click 'start render' and monitor the progress of your render in the render queue.

When your render is complete you can open the folder location, double click on your new rendered clip and watch your finished edit.

Controlling URSA Mini with ATEM Camera Control

Blackmagic URSA Mini can be controlled from an ATEM switcher using the Camera Control feature in ATEM Software Control. This lets you add a camera with large sensor picture quality and amazing dynamic range to your broadcast studio and control it just as you would any studio camera.




ATEM Camera Control.

Clicking on the camera button opens the camera control feature. Settings such as iris, gain, focus and zoom control are easily adjusted using compatible lenses, plus you can color balance cameras and create unique looks using the DaVinci Resolve primary color corrector.

The ATEM switcher control works by broadcasting camera control packets via all the non down converted SDI outputs of an ATEM switcher. So this means you can connect an SDI output of an ATEM switcher to URSA Mini's 12G SDI input, your camera will detect the control packets in the SDI link and allow you to control features in the camera itself.

Connecting your URSA Mini

- 1 Connect your Blackmagic URSA Mini's 12G-SDI Out to any SDI In on the ATEM switcher.
- 2 Connect any one of the ATEM switcher's SDI outputs, except down converted or multi view outputs, to your URSA Mini's 12G-SDI input. Camera control signals are not sent via the multi view and down converted SDI outputs.
- 3 On your URSA Mini, navigate to 'ATEM Camera ID' in the 'camera settings' menu and set your camera's ATEM ID to match the switcher input. For example, if URSA Mini 1 is connected to Cam 1 on the ATEM switcher, the camera number must also be set to 1. This ensures tally is sent to the correct camera.

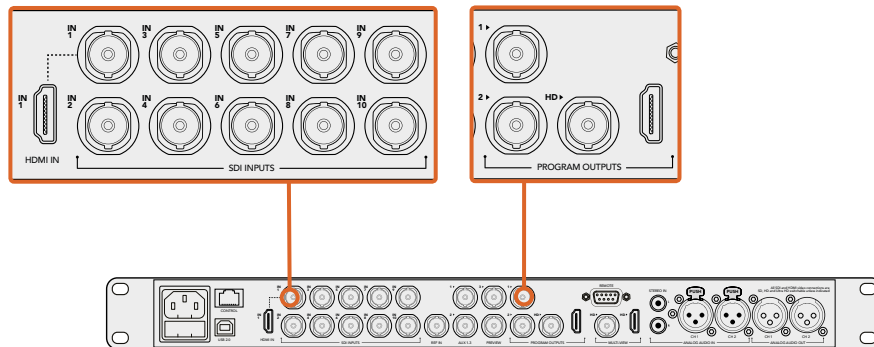

Connect your URSA Mini to any of the ATEM switcher's SDI inputs.

Using Camera Control

Launch ATEM Software Control and click on the camera button located at the bottom of the software window. You'll see a row of labeled camera controllers containing tools to adjust and refine each camera's image. The controllers are easy to use. Simply click the buttons using your mouse, or click and drag to adjust.

Camera Control Selection

The button row at the top of the camera control page lets you select the camera number you would like to control. If you have more cameras that fit onto the window size, or you are running the color corrector window, then you can use these buttons to select between which camera you would like to control. If you are using an Aux output for monitoring your camera control, pushing these buttons to change the camera to control will also send that camera's video output to the Aux output setup in the switcher preferences.



Click on the settings icon to select the Aux output for camera control.

Channel Status

The channel status at the top of each camera controller displays the camera label, On Air indicator and lock button. Press the lock button to lock all the controls for a specific camera. When on air, the channel status illuminates red and displays the On Air alert.



Each camera controller displays the channel status so you know which camera is on air. Use the color wheels to adjust each YRGB channel's lift, gamma and gain settings.

Color Wheel

The color wheel is a powerful feature of the DaVinci Resolve color corrector and used to make color adjustments to each YRGB channel's lift, gamma and gain settings. You can select which setting to adjust by clicking on the three selection buttons above the color wheel.


Master Wheel

Use the master wheel below the color wheel to make contrast adjustments to all YRGB channels at once, or luminance only for each lift, gamma or gain setting.

Reset Buttons

The reset button near the top right of each camera controller lets you easily choose color correction settings to reset, copy or paste. Each color wheel also has its own reset button. Press to restore a setting to its default state, or copy/paste a setting. Locked controllers are not affected by the Paste feature.

The master reset button on the top right corner of the color corrector panel lets you reset lift, gamma and gain color wheels plus Contrast, Hue, Saturation and Lum Mix settings. You can paste color correction settings to camera controllers individually, or all cameras at once for a unified look. Iris, focus, coarse and pedestal settings are not affected by the Paste feature. When applying Paste to all, a warning message will appear asking you to confirm your action. This is so you don't accidentally paste new settings to any unlocked cameras that are currently on air.

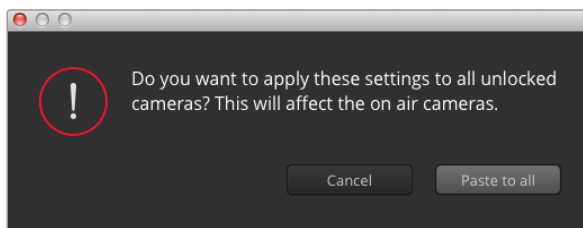

When applying Paste to all, a warning message will appear asking you to confirm your action. This is so you don't accidentally paste new settings to any unlocked cameras that are currently on air.

Iris/Pedestal Control

The iris/pedestal control is located within the cross hairs of each camera controller. The control illuminates red when its camera is on air.

To open or close the iris, drag the control up or down. Holding the shift key allows only iris adjustments.

NOTE When connected to ATEM ensure that you have Auto Exposure switched off. If you require Iris, zoom or focus control ensure that you have a lens that can be controlled electronically by the camera.

When using a compatible lens, set the auto exposure setting to 'manual trigger' as detailed in the 'camera settings' section of this manual.

If you're using a B4 or PL lens connected via the broadcast 12 pin connector on URSA Mini, make sure the lens iris switch on the handgrip is set to 'A' or 'auto'.

To darken or lift the pedestal, drag the control left or right. Holding the command key on a Mac, or the Control key on Windows, allows only pedestal adjustments.



The iris/pedestal control illuminates red when its respective camera is on air.

Zoom Control

When using compatible lenses with an electronic zoom feature, you can zoom your lens in and out using the zoom control. The controller works just like the zoom rocker on a lens, with telephoto on one end, and wide angle on the other. Click on the zoom control, located above the coarse slider, and drag up to zoom in, or drag down to zoom out.

If your lens does not have active lens control or your camera does not support zoom control via the SDI camera control protocol then these settings will have no effect. For example, EF lenses do not have built in servos that can zoom the lens electronically so will not be zoomable with ATEM camera control.

NOTE Analogue B4 lenses do not support ATEM zoom control.

Coarse Setting

The coarse setting is located to the left of the iris/pedestal control and is used to limit the iris range. This feature helps you prevent over exposed images from going to air.


To set your coarse threshold, completely open the iris using the iris control, then drag the coarse setting up or down to set optimum exposure. Now when you adjust the iris, the coarse threshold will prevent it from going above optimum exposure.

Iris Indicator

The iris indicator is located to the left of the iris/pedestal control and displays a visual reference so you can easily see how open or closed the lens aperture is. The iris indicator is affected by the coarse setting.

Auto Focus Button

The auto focus button is located at the bottom left corner of each camera controller. Press to automatically set the focus when you have an active lens that supports electronic focus adjustments. It's important to know that while most lenses support electronic focus, some lenses can be set to manual or auto focus modes, and so you need to ensure your lens is set to auto focus mode. Sometimes this is set by sliding the focus ring on the lens forward or backward. On B4 lenses with servo zoom control, you will need to set the switch at the bottom of the handgrip to 'servo'.

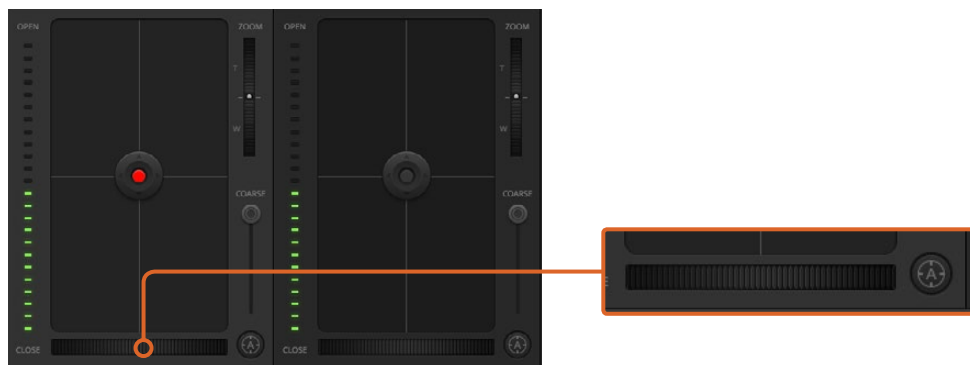

Click on the auto focus button or drag the manual focus adjustment left or right to focus a compatible lens.

Manual Focus Adjustment

When you want to manually focus your lens using ATEM Camera Control, you can use the focus adjustment located at the bottom of each camera controller. Drag the wheel control left or right to manually adjust focus while viewing the video feed from the camera to ensure your image is nice and sharp.

Manual focus control is only available from your switcher when using B4 and PL lenses with servo focus controls. As EF lenses do not have servo focus this option is not available when using URSA Mini EF.

Camera Gain

The name for some settings, such as 'gain' and 'shutter speed', differs between ATEM Switchers and URSA Mini. For example, instead of a film ISO rating, ATEM Switchers use "gain" to describe a camera's sensitivity to light.

TIP The difference between the terms ‘gain’ and ‘ISO’ are primarily due to differences between studio broadcast equipment and traditional film equipment. Exposure on television studio cameras, for example, could be monitored live from the camera. Light sensitivity adjustments could be made electronically inside the camera. This is different to film cameras, which are mechanical in nature and rely upon traditional light measurement techniques combined with photochemical ISO ratings.

When operating in varying light conditions, you might want to increase or decrease your camera’s gain to avoid under exposing your images. To do this click the left arrow to decrease gain and the right arrow to increase gain.

Your ATEM Switcher will display gain in dB. This corresponds to the ISO settings on your camera in the following way:

Gain	ISO
0	200
6	400
12	800
18	1600


Please note that while URSA Mini 4.6K can be set to 18dB of gain, URSA Mini 4K’s maximum gain is 12dB.

Shutter Speed Control

Shutter speed control is used to change your URSA Mini’s shutter angle.

As with gain control, this setting is named differently due to the terminology differences between film cameras and broadcast cameras. Functionally, however, increasing shutter speed is exactly the same as decreasing shutter angle.

The shutter speed control is located between the color wheel and the iris/pedestal control. Decrease or increase the shutter speed by hovering your mouse pointer over the shutter speed indicator and clicking the left or right arrow.

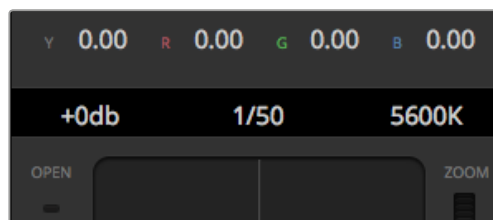

Hovering your mouse pointer over the gain, shutter speed and white balance indicators reveal arrows you can click on to adjust their respective settings.

NOTE As ATEM shutter speed control takes priority over the shutter angle selected on your URSA Mini, your camera's shutter angle controls are disabled when connected to an ATEM switcher.

The table below shows the available shutter speeds in shutter speed control and their equivalent shutter angles. It's worth noting that some shutter speeds fall outside of URSA Mini's minimum and maximum shutter angles of 11.25 and 360 degrees, respectively. If this happens, the closest available shutter angle is used.

It's worth mentioning that when your URSA Mini is connected to an ATEM switcher, the shutter speed setting will not be visible in your camera's touchscreen status display, but will be visible in an URSA Viewfinder, if attached. The status display setting will be implemented in a future software update.

Shutter Speed	Shutter Angle at 23.98 fps	Shutter Angle at 24 fps	Shutter Angle at 25 fps	Shutter Angle at 29.97 fps	Shutter Angle at 50 fps	Shutter Angle at 59.94 fps
1/50	172.7	172.8	180	215.8	360	360*
1/60	143.9	144	150	179.8	300	359.6
1/75	115.1	115.2	120	143.9	240	287.7
1/90	95.9	96	100	120	200	239.8
1/100	86.3	86.4	90	107.9	180	215.8
1/120	71.9	72	75	89.9	150	179.8
1/150	57.5	57.6	60	71.9	120	143.9
1/180	48	48	50	59.9	100	119.9
1/250	34.5	34.6	36	43.2	72	86.3
1/360	24	24	25	29.97	50	59.94
1/500	17.3	17.3	18	21.6	36	43.2
1/725	11.9	11.9	12.4	14.9	24.8	29.8
1/1450	11.25*	11.25*	11.25*	11.25*	12.4	14.9
1/2000	11.25*	11.25*	11.25*	11.25*	11.25*	11.25*

*Shutter speeds outside URSA Mini's shutter angle range will use its closest available minimum or maximum shutter angle.

TIP Decreasing shutter speed is a good way to brighten your images without using camera gain because you are increasing the exposure time of the image sensor. This can also reduce or eliminate light flicker when shooting under fluorescent lights. Increasing shutter speed reduces motion blur and is best used for action shots when you want your images to be clean and sharp.

White Balance

The white balance setting next to the shutter speed control can be adjusted by clicking on the left or right arrows on each side of the color temperature indicator. Different light sources emit warm or cool colors, so you can compensate by adjusting the white balance. This ensures the whites in your image stay white.

DaVinci Resolve Primary Color Corrector

If you have a color correction background, then you can change the camera control from a switcher style CCU interface to a user interface that's more like a primary color corrector on a post production color grading system.

Your Blackmagic URSA Mini features a DaVinci Resolve primary color corrector built in. If you have used DaVinci Resolve, then creatively, grading in your URSA Mini will be identical so you can use your color grading experience for live production. The color corrector panel can be expanded out of any camera controller and provides expanded color correction control with extra settings and a full primary color corrector interface.

You have color wheels and settings such as saturation available and you can see shadows, mid tones and highlight settings all at the same time. Simply switch between cameras using the camera selection controls at the top of the window as you need.

TIP DaVinci Resolve color correction is applied to your URSA Mini's SDI Output and ProRes video recorded on camera. As RAW video is intended for extensive post processing, color correction is not applied to RAW video. When recording RAW video, however, color correction can still be applied to URSA Mini's SDI output.



Click on the DaVinci Resolve primary color corrector button to expand the color correction window and adjust settings.

Color Wheels

The Lift/Gamma/Gain controls allow tonally specific yet overlapping regions of adjustment. In photographic terms lift, gamma and gain corresponds to shadows, mid tones and highlights.

Use the color wheels in the following ways to make fine or aggressive adjustments:

- **Click and drag anywhere within the color ring:** Note that you don't need to drag the color balance indicator itself. As the color balance indicator moves, the RGB parameters underneath change to reflect the adjustments being made to each channel.
- **Shift-Click and drag within the color ring:** Jumps the color balance indicator to the absolute position of the pointer, letting you make faster and more extreme adjustments.
- **Double-click within the color ring:** Resets the color adjustment without resetting the master wheel adjustment for that control.
- **Click the reset control at the upper-right of a color ring:** Resets both the color balance control and its corresponding master wheel.




Lift, gamma and gain color wheels in the color corrector panel.

Master Wheels

Use the master wheels below the color wheels to adjust each YRGB channels' lift, gamma and gain controls.

To make adjustments using the master wheel:

- **Drag the master wheel left or right:** Dragging to the left darkens the selected parameter of the image, dragging to the right lightens that parameter. As you make an adjustment, the YRGB parameters underneath change to reflect the adjustment you're making. To make a Y-only adjustment, hold down the ALT or Command key and drag left or right. Because the color corrector uses YRGB processing, you can get quite creative and create unique affects by adjusting the Y channel only. Y channel adjustments work best when the Lum Mix setting is set to the right side to use YRGB processing vs the left side to use regular RGB processing. Normally, most DaVinci Resolve colorists use the YRGB color corrector as you get a lot more control of color balance without affecting overall gain, so you spend less time getting the look you want.

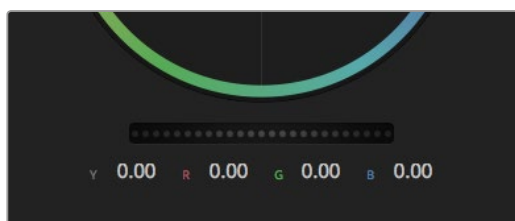

Adjust the master wheels by dragging the wheel control left or right.



Drag the sliders left or right to adjust Contrast, Saturation, Hue and Lum Mix settings.

Contrast Setting

The Contrast setting gives you control over the distance between the darkest and lightest values of an image. The effect is similar to making opposing adjustments using the lift and gain master wheels. The default setting is 50%.

Saturation Setting

The Saturation setting increases or decreases the amount of color in the image. The default setting is 50%.

Hue Setting

The Hue setting rotates all hues of the image around the full perimeter of the color wheel. The default setting of 180 degrees shows the original distribution of hues. Raising or lowering this value rotates all hues forward or backward along the hue distribution as seen on a color wheel.

Lum Mix Setting

The color corrector built into your Blackmagic URSA Mini is based on the DaVinci Resolve primary color corrector. DaVinci has been building color correctors since the early 1980's and most Hollywood films are color graded on DaVinci Resolve than any other method.

This means the color corrector built into your URSA Mini has some unique and creatively powerful features. The YRGB processing is one of those features.

When color grading, you can choose to use RGB processing, or YRGB processing. High end colorists use YRGB processing because you have more precise control over color and you can independently adjust the channels with better separation and more creative options.

When the Lum Mix control is set to the right side, you have the 100% output of the YRGB color corrector. When you have the Lum Mix control set to the left side, you get 100% output of the RGB corrector. You can set the Lum Mix to any position between the left and right to get a blend of output from both the RGB and YRGB correctors.

Which is the correct setting to use? That's up to you, as color correction is a pure creative process and there is no right and wrong, and the best setting is what you like the most and what you think looks good!

Synchronizing Settings

When connected, camera control signals are sent from the ATEM switcher to your Blackmagic URSA Mini. If a setting is accidentally adjusted from your URSA Mini, camera control will automatically reset that setting to maintain synchronization.


TIP Even if you disconnect its 12G-SDI input, your URSA Mini will keep using any image adjustments made with DaVinci Resolve color correction. This lets you change camera angles without needing to dial in your image settings again. To return your URSA Mini to its default color settings, simply power cycle your URSA Mini after disconnecting its 12G-SDI input.

Blackmagic Camera Setup Utility

How to Update Your Camera Software on Mac OS X

After downloading the Blackmagic Camera Setup utility software and unzipping the downloaded file, open the resulting disk image to reveal the Blackmagic Camera Setup Installer.

Launch the installer and follow the on screen instructions. After the installation has finished, go to your applications folder and open the Blackmagic Cameras folder, where you'll find this manual, the Blackmagic Camera setup utility, plus a documents folder containing readme files and information. You'll also find an uninstaller for when updating to later versions of Blackmagic Camera Setup.

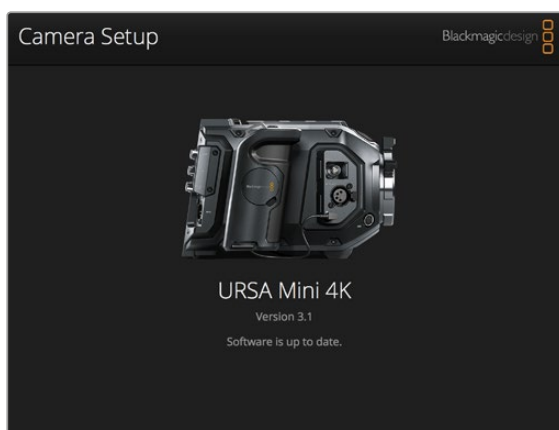


How to Update Your Camera Software on Windows

After downloading the Blackmagic Camera Setup utility software and unzipping the downloaded file, you should see a Blackmagic Camera Setup folder containing this PDF manual and the Blackmagic Camera Setup Installer. Double-click the installer and follow the on screen prompts to complete the installation.

In Windows 8, select 'apps' from the 'start' screen and navigate to the Blackmagic Design folder. From here you can launch Blackmagic Camera Setup.

In Windows 7, click on the 'start' menu, select 'all programs>Blackmagic Design'. From here you can launch Blackmagic Camera Setup.

How to Update the Camera Software

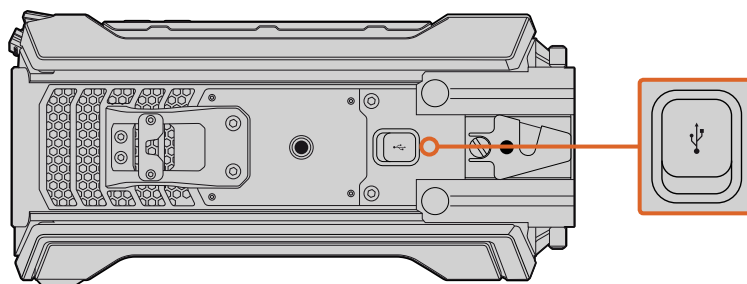


The Mini-B USB 2.0 port is used to update the camera software and can be found on Blackmagic URSA's bottom panel, and above the memory card slots on Blackmagic URSA Mini.

After installing the latest Blackmagic Camera Setup utility on your computer, connect a USB cable between the computer and your Blackmagic URSA or URSA Mini. On Blackmagic URSA, the Mini-B USB 2.0 port is located on the bottom panel of your camera. On Blackmagic URSA Mini, the USB port is located on the left side panel above the memory card slots. Simply open the rubber cap to access the port.

Launch the Blackmagic Camera Setup utility and follow any on screen prompt to update the camera software.

Post Production Workflow

Working with Files from CFast 2.0 Cards

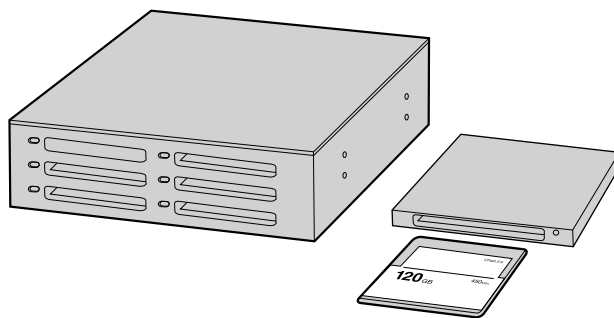

Edit directly from your CFast card by removing it from your camera and mounting it on your computer using a CFast 2.0 reader/writer or CFast drive.

To import your clips from a CFast 2.0 card:

- 1 Remove the CFast card from your Blackmagic URSA or URSA Mini.
- 2 Mount the CFast card to your Mac OS X or Windows computer using a CFast 2.0 reader/writer or CFast drive.
- 3 Double click on the CFast card to open it and you should see folders that contain your CinemaDNG RAW image files or a list of QuickTime movie files. Depending on the format you chose to record in, you might have a mixture of files, but they will all use the same naming convention.
- 4 Now you can simply drag the files you want from the CFast card onto your desktop or another hard drive, or you can access the files straight from the CFast card using your editing software. CinemaDNG RAW files are saved to the CFast card as separate DNG images for each frame. This is an open format and you can use many software applications to view your RAW 4K images as a video sequence.
- 5 Before you unplug the CFast card from your computer, it's always a good idea to eject safely using either Mac OS X or Windows first.


With dual card mode recordings, simply transfer your CinemaDNG clip folders from both cards to the same folder on your storage drive. Make sure the clips from both cards are contained in the same folder.

Working with 3rd Party Software

To edit your clips using your favorite editing software, you can copy your clips to an internal/external drive or RAID and then import your clips into the software. Or import your clips directly from your CFast card using a CFast 2.0 reader/writer or CFast drive.

Using Final Cut Pro X

To edit Apple ProRes 422 HQ clips using Final Cut Pro X, you need to create a new project and set a suitable video format and frame rate. This example uses ProRes 422 HQ 1080p25.

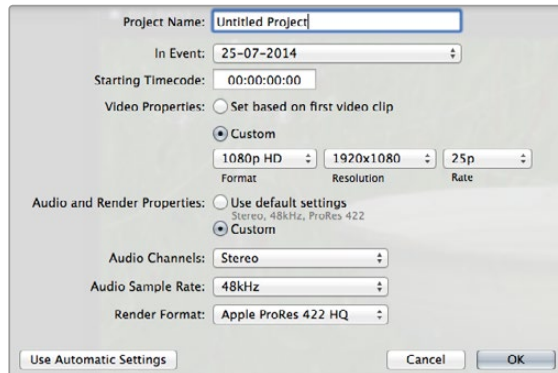

Final Cut Pro X project settings.


- 1 Launch Final Cut Pro X, go to the 'menu' bar and select 'file/new project'. A window will open containing project settings.
- 2 Name your project and select the 'custom' checkbox.
- 3 Set the 'video properties' settings to 1080p HD, 1920x1080 and 25p.
- 4 Set your 'audio' and 'render properties' settings to 'stereo, 48kHz, and Apple ProRes 422 HQ'.
- 5 Click OK.

To import your clips into your project, go to the 'menu' bar and select 'file/import/media'. Choose your clips from your CFast card.

You can now drag your clips onto the timeline for editing.

Using Avid Media Composer

To edit your DNxHD clips using Avid Media Composer 8, create a new project and set a suitable video format and frame rate. For this example, clips are set using DNxHD 1080i59.94.

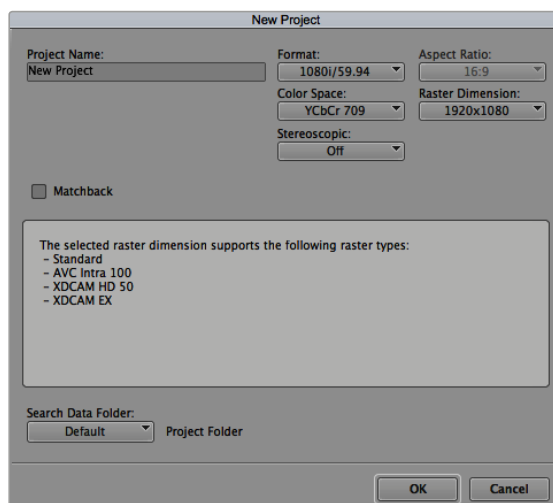


Setting the project name and project options in Avid Media Composer 8.

- 1 Launch Media Composer and the 'select project' window will appear.
- 2 Click the 'new project' button.
- 3 In the 'new project' window name your project.
- 4 Go to the 'format' drop down menu and select 1080i/59.94.
- 5 Go to the 'color space' drop down menu and select YCbCr 709.
- 6 Go to the 'raster dimension' drop down menu and select 1920x1080. Click OK.
- 7 Select 'tools>background services' and click the 'start' button if background services are not already running and then click 'OK.'
- 8 Select the media bin where you wish to import your files.
- 9 Select 'file>AMA link...' and select the files that you wish to import and then click 'OK.'

When the clips appear within the media bin you can drag your clips onto the timeline and begin editing.

Using Adobe Premiere Pro CC

To edit your Apple ProRes 422 HQ clips using Adobe Premiere Pro CC, you need to create a new project and set a suitable video format and frame rate. For this example, clips are set using ProRes 422 HQ 1080p25.

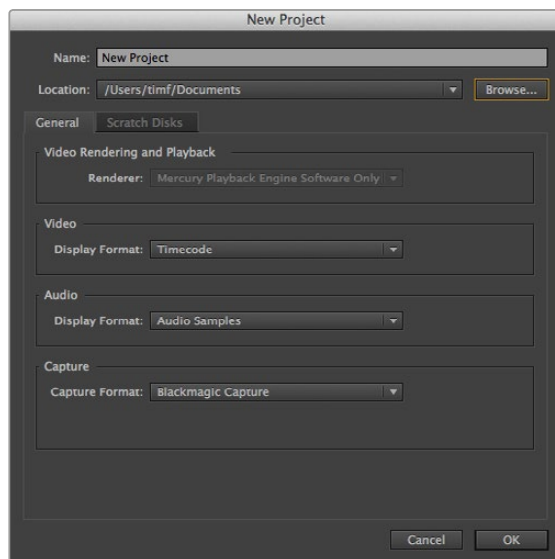

Setting the project name and project options in Adobe Premiere Pro CC, (2014).

- 1 Launch Adobe Premiere Pro CC. In the 'welcome' window select 'create new/new project'. A window will open containing project settings.
- 2 Name your project. Choose the location for your project by clicking 'browse' and selecting your desired folder. Once you've selected your location folder click OK in the welcome window.
- 3 Go to the Adobe Premiere Pro CC 'menu' bar, select 'file/import' and choose the clips you want to edit. Your clips will appear in the project window.
- 4 Drag the first clip you wish to edit onto the 'new item' icon at the bottom right of the project window. A new sequence will be created matching your clip settings.

You can now drag your clips onto the sequence timeline for editing.


Using Autodesk Smoke 2013

To edit your clips using Autodesk Smoke 2013, create a new project and set a suitable video format, bit depth, frame type and frame rate. This example uses ProRes 422 HQ 1080p25.



Autodesk Smoke 2013

- 1 Launch Smoke and the 'project and user settings' window will appear. Click on the 'new' button under the project heading.
- 2 The 'create new project' window will open. Name your project.
- 3 From the resolution dropdown menu, select 1920x1080 HD 1080.
- 4 Make sure bit depth is set to 10-bit and frame type is 'progressive'.
- 5 From the 'config template' dropdown menu select 1920x1080@25000p.cfg.
- 6 Leave the 'preferred format' set to ProRes 422 HQ and click 'create'.
- 7 Click on the 'new' button under the 'user' heading.
- 8 When the 'create new user profile' window opens, type your user name and click 'create'.
- 9 When the 'project and user settings' window reopens, click the 'start' button.
- 10 From the menu bar, select 'file>import>file' and select your clips to import.
- 11 Once the clips appear in the media library you can drag your clips onto the timeline and begin editing.

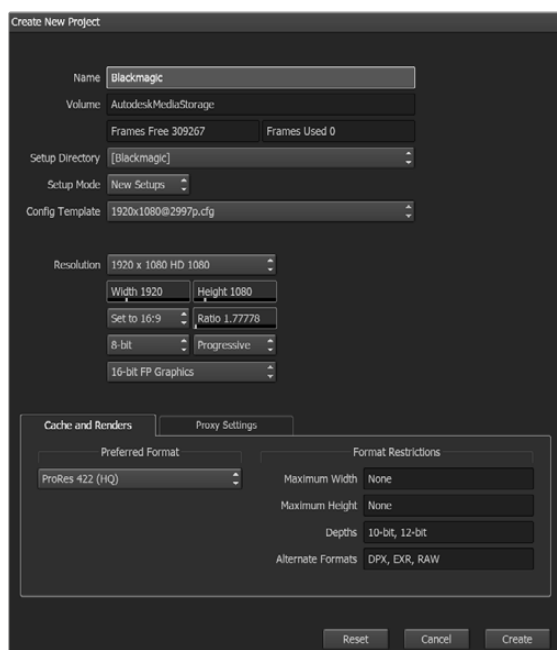

Setting the project name and project options in Autodesk Smoke 2013.

URSA Mini Shoulder Mount Kit

Attaching the shoulder mount

The URSA Mini Shoulder Mount Kit lets you carry URSA Mini on the shoulder for ENG style shooting. This kit includes a top handle, shoulder mount baseplate, extension arm for the URSA Mini side handle, long LANC cable, Viewfinder adapter plate, plus all the required screws.


The quick release mount on the baseplate lets you lock your camera into an ENG style tripod plate or place it on your shoulder so you can follow the action.

The URSA Mini Shoulder Mount Kit works with any tripod plate modeled after the Sony VCT 14. These mounts are easily found at camera stores or online.

It's also worth mentioning that mounts modeled after the VCT U14 tripod plate are a different system and are not compatible.


When attaching the shoulder mount kit, you will need the following tools:

- 1 x flat head screwdriver for the 2 x ¼" shoulder mount base plate screws.
- 1 x 3/16" hex key driver for the 2 x ¼" top handle screws.
- 1 x 2.5mm hex key driver for the 4 x Viewfinder adapter plate M3 screws.

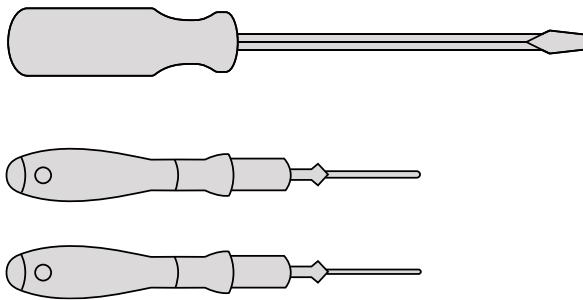

To attach the shoulder mount kit to your URSA Mini you will need a large flat head screwdriver, a 3/16" hex key driver for the top handle and a 2.5mm hex key driver for the Viewfinder adapter plate.

To attach the shoulder mount baseplate

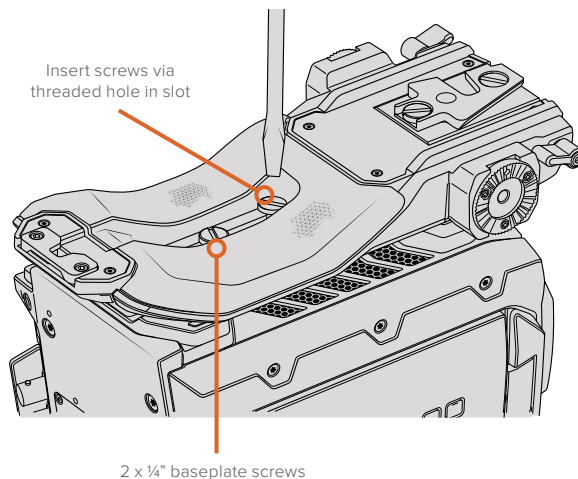


- 1 Gently place your URSA Mini upside down on a flat, stable surface so you can easily access the base of your camera.
- 2 Fasten the shoulder mount baseplate to URSA Mini using the 2 x 1/4" flat head screws and driver.
- 3 Tighten the screws until the baseplate is firmly attached and the screws won't loosen. Avoid over-tightening as it may damage the screw threads.


To attach the top handle without URSA Viewfinder

You can use URSA Mini Shoulder Mount Kit with or without the optional URSA Viewfinder.


The top handle is supplied with a rubber viewfinder cap on its base which is replaced with an adapter plate when attached to the URSA Viewfinder. We recommend leaving the cap attached when using the handle without the URSA Viewfinder.

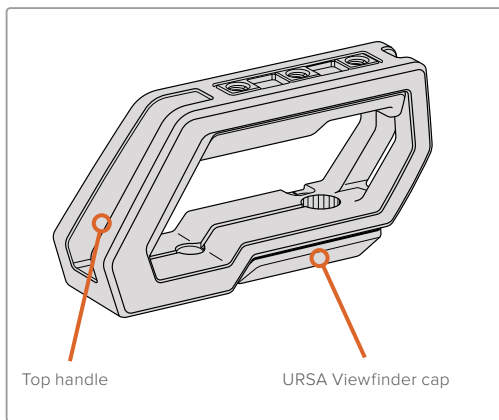

- 1 Place your URSA Mini on a flat, stable surface so you can access the top of your camera.

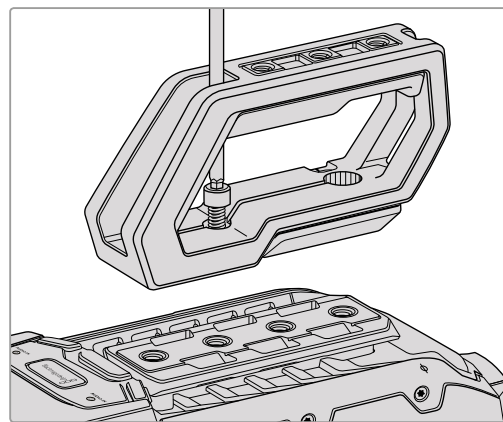


- 2 Fasten the handle to any two of your URSA Mini's top 1/4" mounting points using the two supplied 1/4" screws with a 3/16" hex key driver. URSA Mini's rear two mounting points are recommended for most situations, but you can choose any pair for better weight balance when using large lenses.

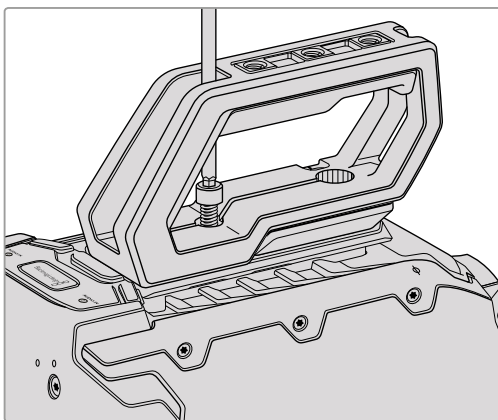


- 3 Tighten the screws until the handle is firmly in place and the screws won't easily loosen. Avoid over-tightening the screws as it may damage the screw threads.


To attach the top handle with URSA Viewfinder

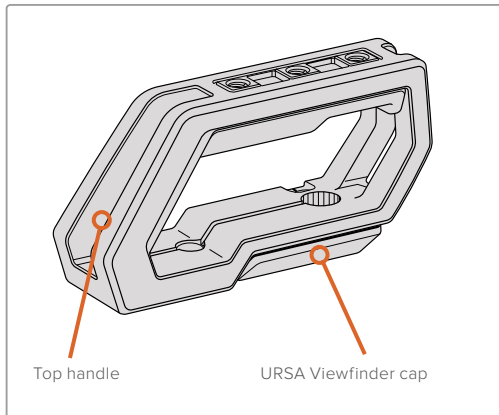


1 Place your URSA Mini on a flat, stable surface so you can access the top of your camera.

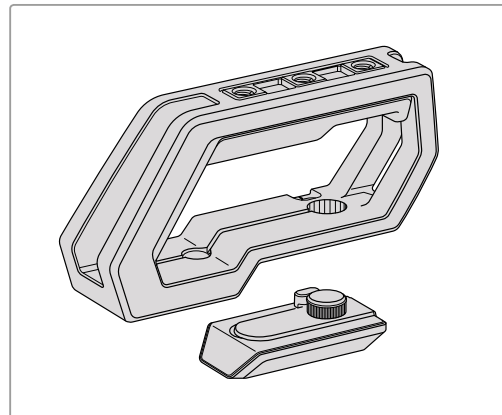

2 Remove the URSA Viewfinder cap from the base of the handle by gently lifting its arm away from the side of the handle and pulling the cap from the hole.

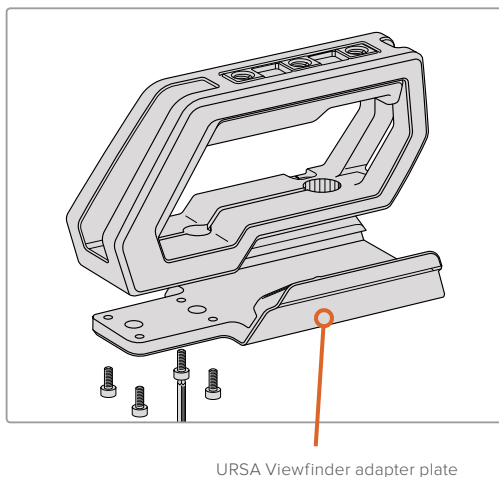

3 Fasten the URSA Viewfinder adapter plate to the handle using the 4 x M3 screws with a 2.5mm hex key driver.

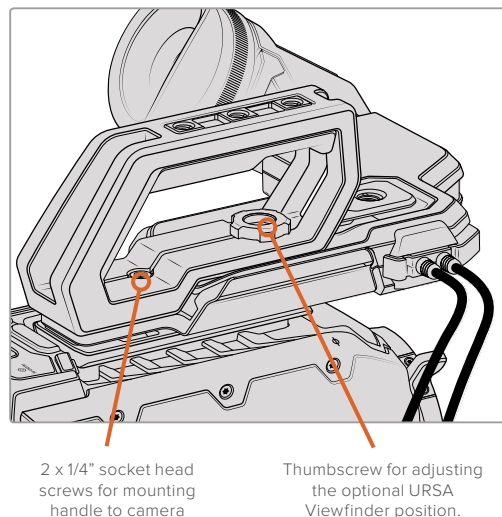

4 Fasten the handle to any two of URSA Mini's top 1/4" mounting points using the two supplied 1/4" screws with a 3/16" hex key driver. URSA Mini's rear two mounting points are recommended for most situations, but you can choose any pair for better weight balance when using large lenses. Avoid over-tightening the screws as it may damage the screw threads.

The hole inside the front of the handle is used with the thumb screw when attaching and adjusting the URSA viewfinder. For information on how to attach the URSA Viewfinder to the top handle, refer to the 'Blackmagic URSA Viewfinder' section in your URSA manual.

Attaching the extension arm


When using the URSA Mini shoulder mount kit, you'll need to reposition URSA Mini's side handle for comfortable shoulder based shooting. Use the bundled extension arm and longer LANC cable to move the side handle to a more ergonomic position.

To attach the side handle extension arm:

- 1 Place your URSA Mini on a flat, stable surface allowing room next to the camera to lower the extension arm. Mounting URSA Mini to a tripod is helpful for this purpose.
- 2 Attach the indented end of the extension arm to the baseplate rosette, lower the arm to suit, and fasten with the supplied rosette thumbscrew.
- 3 Attach the side handle to the extension arm's front rosette. Fasten by tightening the side handle screw with the large flat head screwdriver, or by twisting the D ring with your thumb and forefinger.
- 4 Connect the side handle LANC output to the camera LANC input using the long LANC cable supplied with your shoulder mount kit.

You can easily adjust the extension arm and side handle to suit your preference by loosening the rosette screws, making your adjustment, then retightening.


With your URSA Mini Shoulder Mount Kit now attached, you have additional speed for fast shooting on the run, plus the ability to quickly mount your camera on a tripod for tight, stable shots!

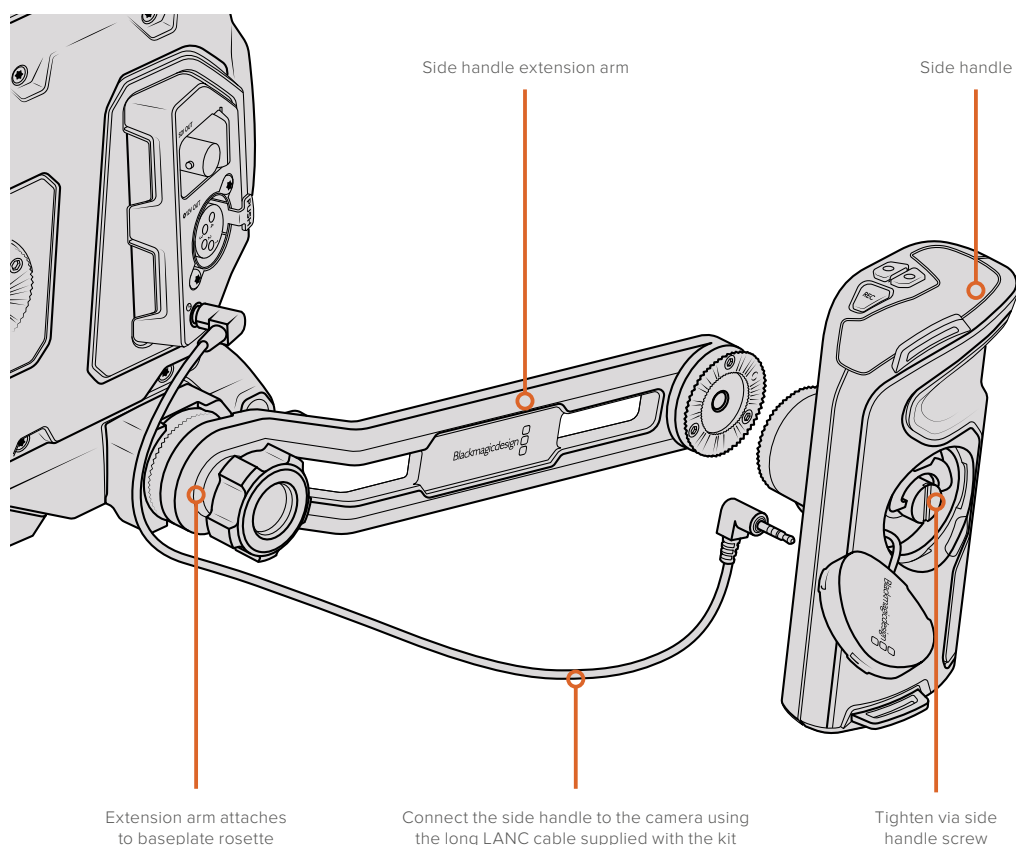

Shimming the PL Mount

What is a Shim?


Blackmagic Shims are thin disks of varying thickness that let you make fine adjustments to the distance between your PL lens and Blackmagic URSA or URSA Mini's sensor. This distance is commonly known as the flange focal distance, or back focus, and can change slightly due to variables such as lens age and the environmental conditions of your shoot. The PL mount is designed so you can easily adjust the back focus using shims.

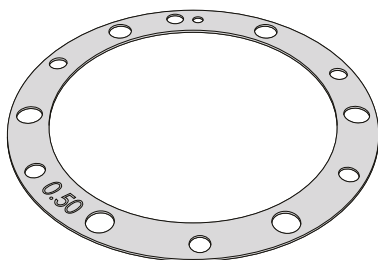

Shims are placed between the PL mount and the camera body so the distance from your subject to the sensor matches the focus marks on your lens. Your Blackmagic URSA or URSA Mini is supplied with a 0.50mm shim already installed. You can purchase shim sets of varying thickness from your local Blackmagic Design reseller. Use shim thicknesses depending on your back focus requirements.


To shim your camera's PL mount you'll need a torque wrench able to accurately set a maximum torque of 0.45Nm, with a 2.0mm hex key and driver.

Removing and replacing the PL Mount

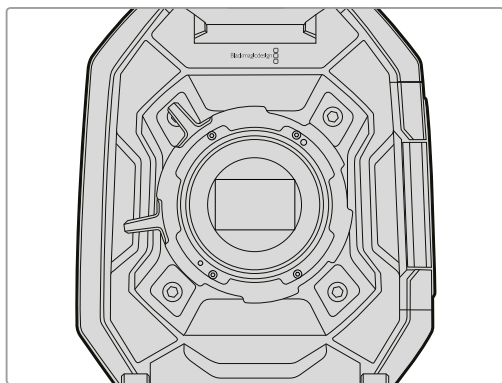


1

Place Blackmagic URSA or URSA Mini on a solid, clean bench top and remove your lens or dust cap. The glass filter covering the sensor will be exposed for the duration of the shimming process, so it's important to keep the filter as clean as possible. Be careful not to touch the filter while shimming the PL mount.

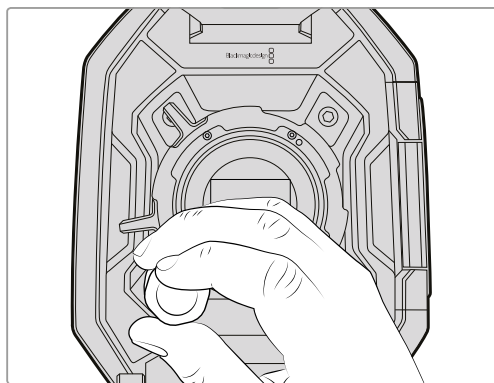


2


Remove the six PL mount screws using the 2.0mm hex driver. You may need to occasionally rotate the PL locking ring clockwise or counterclockwise to access the screws.

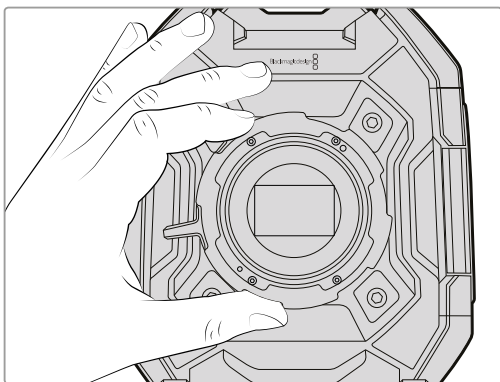


3 Carefully lift the lens mount away from the camera body. Keep the screws safely located close to the lens mount.

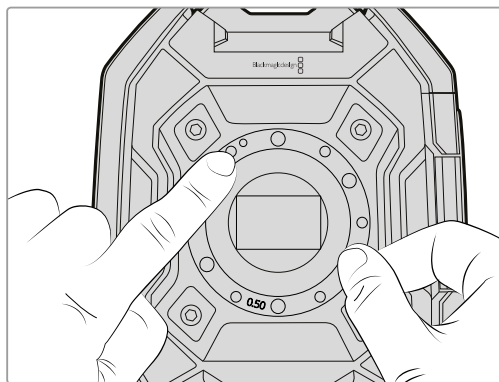


4 Note the alignment of the existing 0.50mm shim with the alignment pin at the 11 o'clock position.

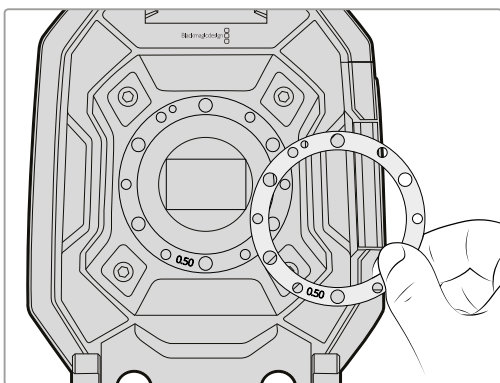


5 Remove the existing 0.50mm shim and replace with the appropriate shim thickness needed to bring your lens focus marks into alignment with the focal distance.

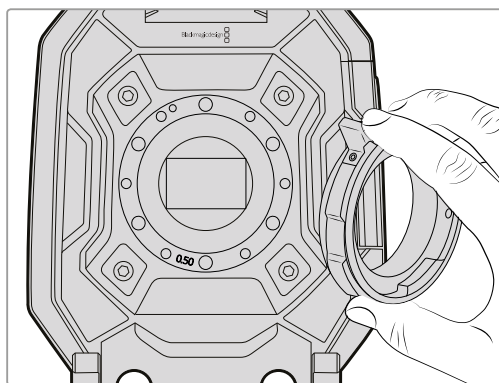

6 Place the lens mount onto the camera body ensuring the alignment hole is aligned with the alignment pin at the 11 o'clock position.

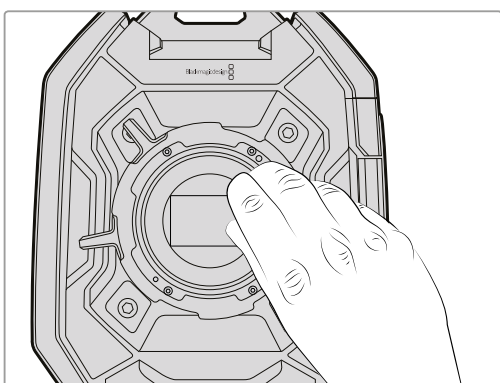

7 Loosely turn the six mounting screws until initial contact is made with the shoulder of the lens mount.

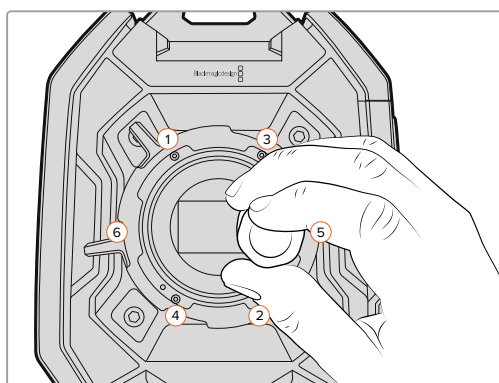

8 Using the torque wrench and 2.0mm hex key, apply one full turn of pressure to mounting screw 1, followed by one full turn to screw 2, repeat for screws 3 and 4, then 5 and 6. Continue to apply one full turn to each screw in the sequence above until all screws have reached the maximum torque of 0.45Nm.

URSA Mini B4 Mount


Attaching the B4 Lens Mount

The Blackmagic URSA Mini B4 Mount lets you shoot ENG style HD coverage with URSA Mini PL using common B4 par-focal lenses. Par-focal lenses provide constant focus throughout the zoom range for quick and efficient focussing techniques. By zooming into maximum telephoto and setting focus on a target, you can be sure your focus will stay set to that target all the way from maximum zoom to maximum wide. It's important to note that the B4 lens back focus, or flange focal distance, also needs to be correctly set.


The B4 mount is supplied with two additional 0.50mm shims designed to be installed together with the existing 0.50mm shim already mounted behind your URSA Mini PL lens mount. This will give you a total of three 0.50mm shims to provide the clearance needed so you can achieve the optimum back focus, which can be refined further by adjusting the back focus ring at the mount end of B4 zoom lenses.

Using B4 lenses, you can achieve a greater variety of shots with your URSA Mini that are impossible to get using stills lenses.

To connect your URSA Mini B4 lens mount you'll need a torque wrench able to accurately set a maximum torque of 0.45Nm, plus a 2.0mm hex key driver.

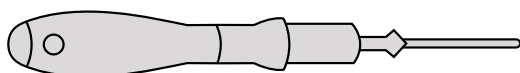


To attach the Blackmagic URSA Mini B4 Mount, you will need a torque wrench able to accurately set a maximum torque of 0.45Nm, together with a 2.0mm hex key driver.

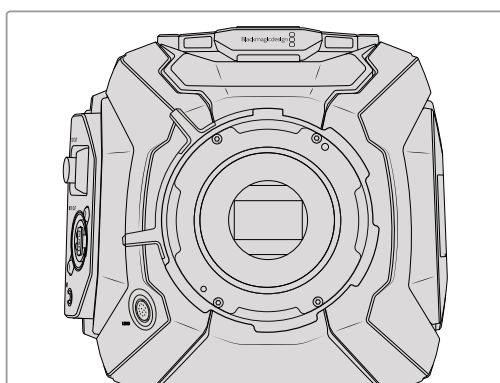


1

Place Blackmagic URSA Mini PL on a solid, clean bench top and remove your lens or dust cap. The glass filter covering the sensor will be exposed for the duration of the shimming process, so it's important to keep the filter as clean as possible. Be careful not to touch the filter while attaching the B4 mount.

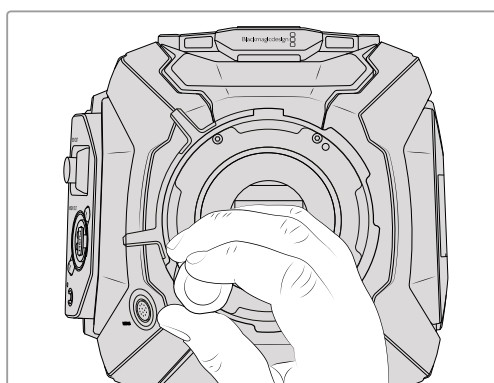


2


Remove the six PL mount screws using the 2.0mm hex driver. You may need to occasionally rotate the PL locking ring clockwise or counterclockwise to access the screws.

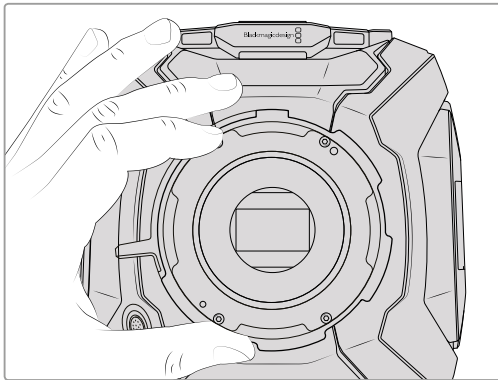


3 Carefully lift the lens mount away from the camera body. Keep the screws safely located close to the lens mount.

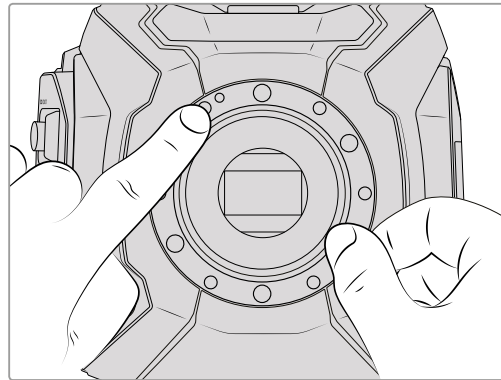


4 Note the alignment of the existing 0.50mm shim with the alignment pin at the 11 o'clock position.

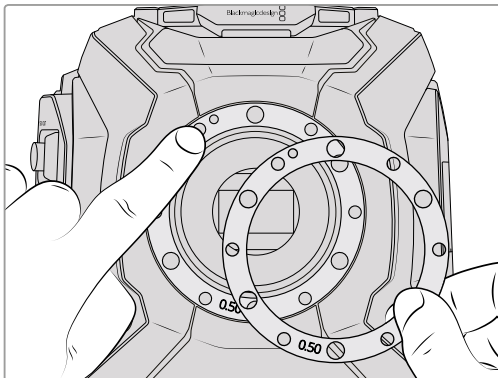


5 Place the 2 x 0.50mm shims supplied with your Blackmagic URSA Mini B4 lens mount onto the original 0.50mm shim. This creates the clearance needed to optimize the flange focal distance.

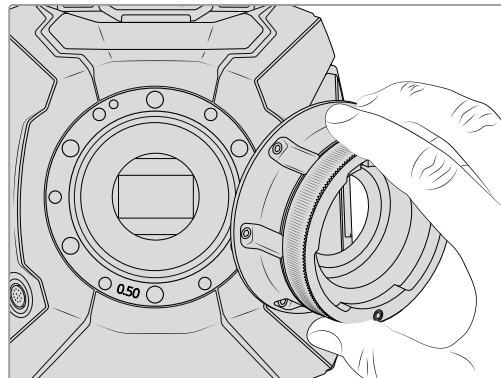

6 Place the Blackmagic URSA Mini B4 lens mount onto the camera body ensuring the registration slot is aligned with the alignment pin at the 11 o'clock position.

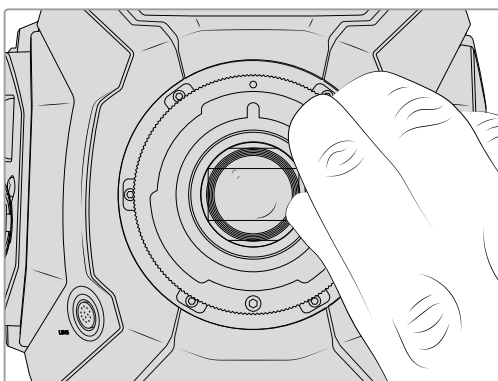

7 Loosely turn the six mounting screws until initial contact is made with the shoulder of the lens mount.

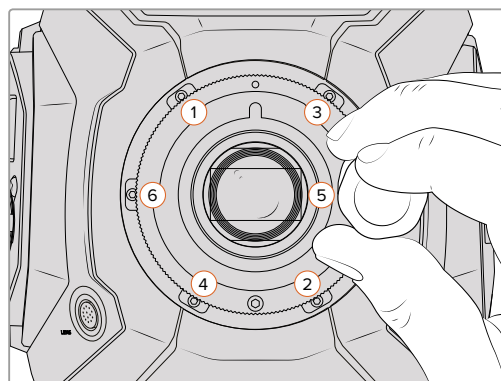

8 Using the torque wrench and 2.0mm hex key, apply one full turn of pressure to mounting screw 1, followed by one full turn to screw 2, repeat for screws 3 and 4, then 5 and 6. Continue to apply one full turn to each screw in the sequence above until all screws have reached the maximum torque of 0.45Nm.

URSA Mini B4 Lens

Mounting a B4 Lens

To attach a B4 lens to your URSA Mini B4 lens mount:

- 1 Turn the B4 lens locking ring counterclockwise to reveal the alignment pin inside the top of the mount. Align the B4 lens to your URSA Mini's B4 mount so the registration slot on the lens mount matches the position of the alignment pin.
- 2 Hold the lens against the B4 mount so the mount plates are against each other. Make sure the alignment pin is secured inside the registration slot.
- 3 Turn the locking ring clockwise to tighten the lens against the mount and lock it into position.

To power the lens and provide lens control, simply plug the lens cable into the connector marked 'Lens' on the front of your URSA Mini PL's turret. Most B4 lenses will have the Hirose 12 pin connector and cable built in. This will provide power and control signals from your URSA Mini to the lens.

For electronic control of your lens aperture, make sure the iris on the lens is set to 'auto'.

URSA Mini PL models currently support lens control for digital B4 lenses via the 12 pin broadcast connector.


These include:

- Canon B4 lens models with HJ, KJ..ex and CJ prefixes
- Fujinon B4 lens models with HA, ZA and UA prefixes

When using compatible B4 lenses you can power the zoom rocker, start and stop recording using the record button, and control the iris. Most B4 lenses also have a Ret button, which can be used, in the same way as the PGM button on the camera, to switch the feed on LCD and HD monitoring output between camera view and program return view. Compatible lenses that also have motorized focus control, or servo focus, can even utilize the 'focus' button on your URSA Mini to activate auto focus.

B4 Lenses with analog servo control are also supported. If you are going to use an analog B4 lens, it's important to make sure it is compatible with your camera first. It's also worth visiting the Blackmagic Forum on our website where other camera operators may have helpful information.

PL 35mm lenses with servo handgrips are also supported, such as Fujinon Cabrio lenses, Canon CN7x17KAS S and Canon CN20x50 CINE-ZOOM 50-1000mm lenses.

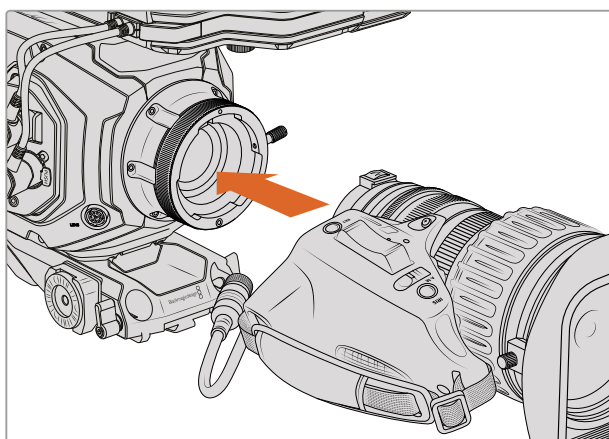

Turn the locking ring counterclockwise to reveal the alignment pin inside the mount at the 12 o'clock position. Place the B4 lens mount against the B4 mount so the registration slot fits snugly around the alignment pin. Turn the locking ring clockwise to tighten the lens against the mount.

Plug the B4 lens cable into the connector marked 'Lens' near the bottom left of your URSA Mini PL's lens mount.

Upgrading the Sensor Turret on the URSA Model

Blackmagic URSA's unique design lets you replace the sensor turret if you want to upgrade your camera as we release new sensors in the future. When upgrading, you can also change the lens mount. For example, you can upgrade from an EF mount to a PL mount. URSA is designed to be occasionally upgraded, but not frequently. Constant changing of the turret can wear out the connector and is not recommended.


To upgrade the turret, first make sure you have the following tools:

- 1 Torque wrench with 4.0mm and 2.5mm hex key drivers and accurate setting for 3.0 Nm maximum torque.
- 2 Appropriate wedge shaped plastic levering tool.
- 3 Large flat head screw driver.
- 4 Lint free cloth.

Each component has screws of different lengths so it's important to keep the screws near their relevant components so you don't mix them up.


After replacing the sensor turret, power your camera and record a clip to check your new sensor turret is seated properly. If you are looking for help or have any technical questions, please visit our support center at www.blackmagicdesign.com/support.

To remove and replace the sensor turret:

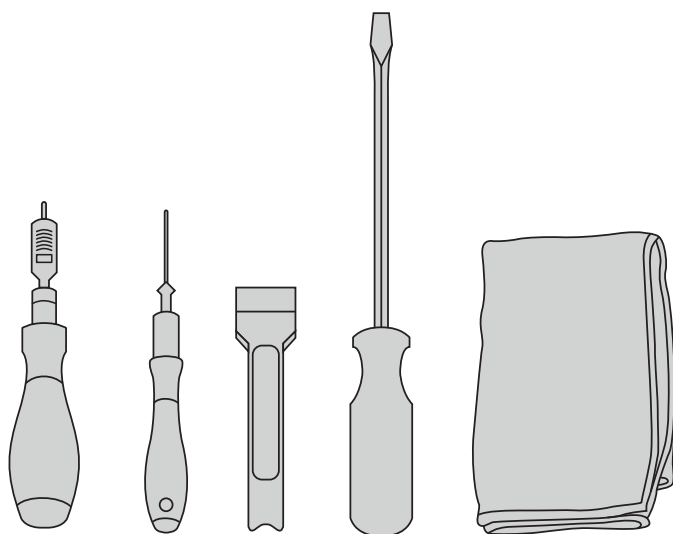


To remove and replace Blackmagic URSA's sensor turret you'll need a torque wrench capable of 3.0 Nm maximum torque with 4.0mm and 2.5mm hex key drivers, levering tool, large flat head screw driver, and a lint free cloth.

Removing the Sensor Turret

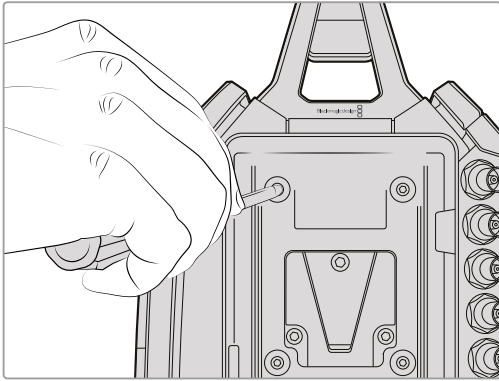


1

If you have a third party battery plate mounted to the rear panel, remove the plate by unscrewing the four M3 mounting screws with the 2.5mm hex key driver. This is so you can rest your Blackmagic URSA securely on the flat rear panel for convenient access to the sensor turret.

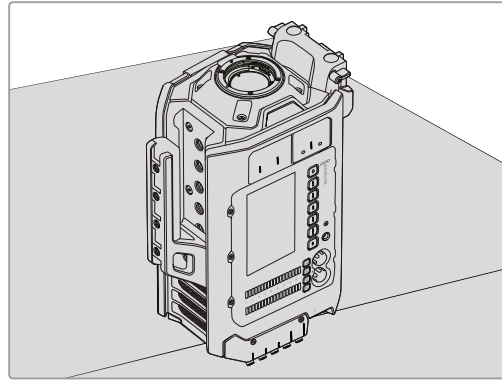


2

With the battery plate detached, carefully rest Blackmagic URSA on the rear panel. Be sure to place URSA on a solid flat platform with the SDI connectors over the edge so they are not damaged.

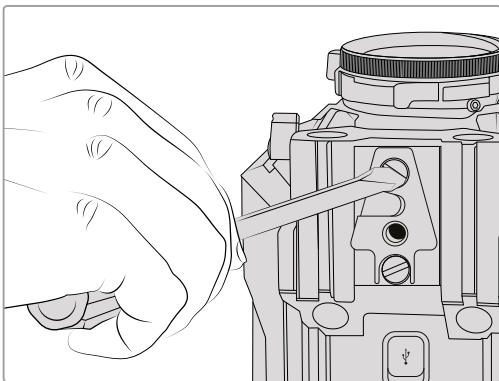


3

Remove the V-Mount plate from the 15mm rails mount using the large flat head screw driver.

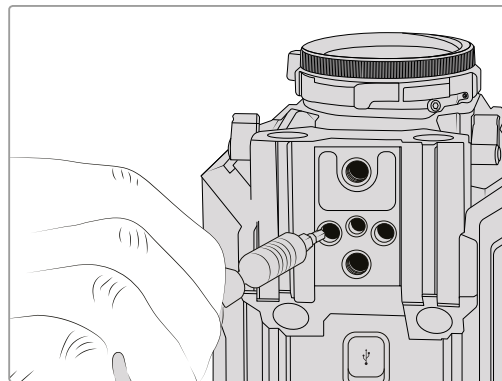


4

Remove the 15mm rails mount using the 4.0mm hex key driver.

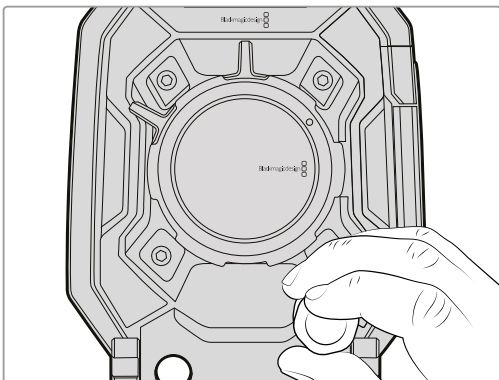


5

Loosen the four sensor turret mounting screws two full turns using the 4.0mm hex key driver.

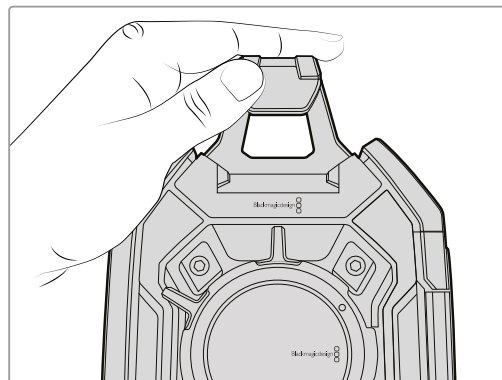


6


Use the plastic wedge levering tool to lever the sensor turret loose from the camera body.

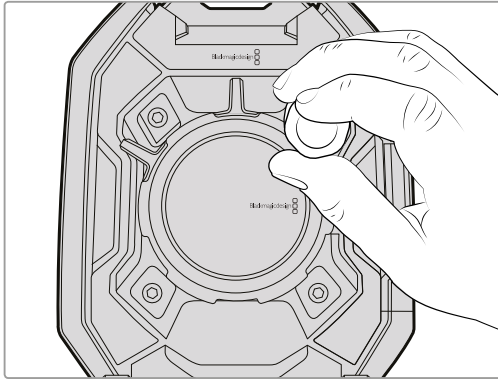

7 Remove all four screws and lift the sensor turret.

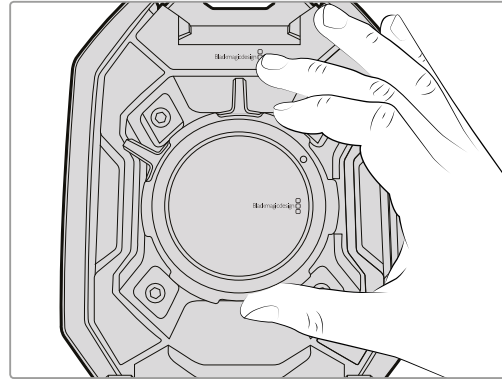


8 As you lift the turret, the adjoining data connector will be released from the camera chassis.

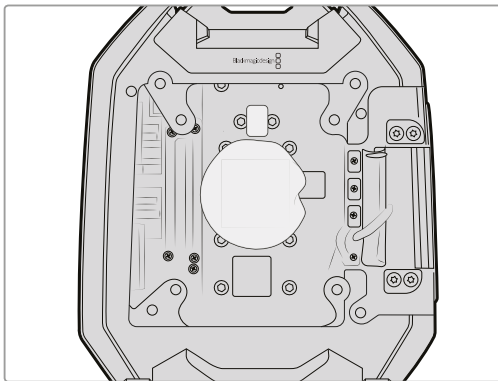


9 Remove the thermal gap pads from the large and small copper block using the plastic wedge levering tool. Thoroughly clean the copper blocks in the camera chassis and the sensor turret with the lint free cloth. Do not use any cleaning fluids.


Replacing the Sensor Turret

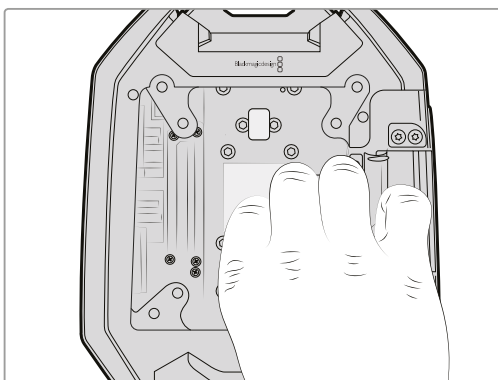


1 Apply new thermal gap pads, supplied with your new URSA turret assembly, to both cleaned copper blocks in the camera chassis. Ensure the fold out monitor cable is seated against the inside wall.

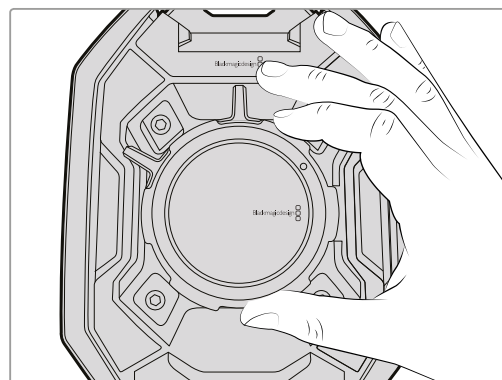


2 Align the sensor turret so the alignment pins slot into the three alignment holes and gently press downward until you feel the sensor data connector join with the mating chassis connector.

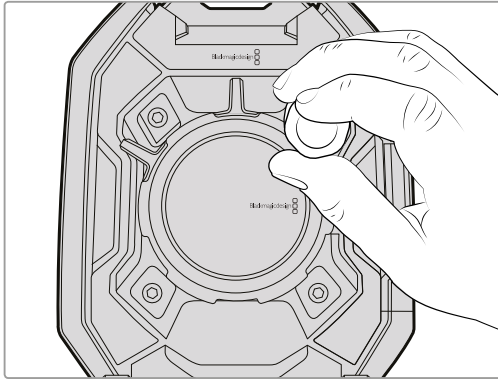


3 Loosely fasten the four sensor turret mounting screws and spring washers until initial contact is made between the sensor turret and the camera body. It's important you do not tighten the screws at this point.

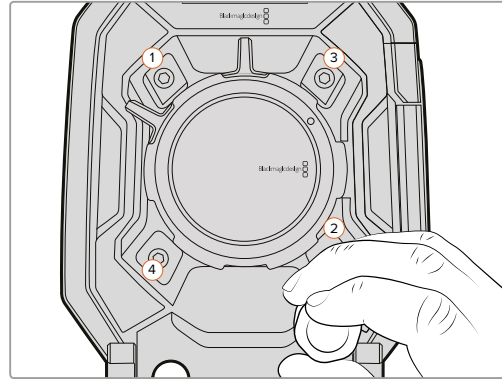

4 Using the torque wrench, apply one full turn of pressure to mounting screw 1, followed by one full turn to screw 2, and repeat for screws 3 and 4. Continue to apply one full turn to each screw in the described sequence until all screws have reached the maximum allowable torque of 3 Nm.

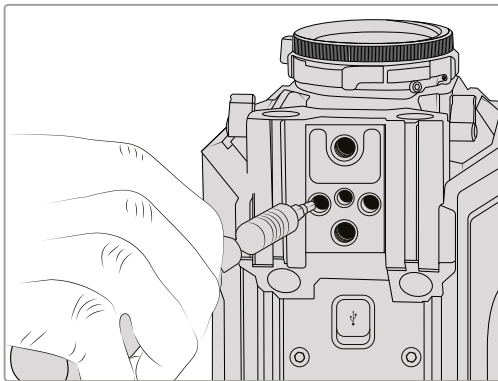

5 Reattach the 15mm rails mount by placing the front of the mount against the camera base and rotating it into place. Using the torque wrench, gradually and evenly tighten the screws until all have reached the maximum allowable torque of 3 Nm.

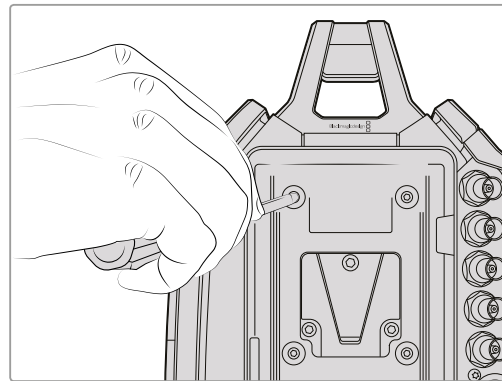

6 Reattach the quick release V-Mount plate by tightening the screws using a flat head screw driver, and reattach the third party battery plate (if any) to Blackmagic URSA's rear panel.

Congratulations, you have now upgraded your Blackmagic URSA!

Help

Getting Help

The fastest way to obtain help is to go to the Blackmagic Design online support pages and check the latest support material available for your camera.

Blackmagic Design Online Support Pages

The latest manual, software and support notes can be found at the Blackmagic Design support center at www.blackmagicdesign.com/support.

Contacting Blackmagic Design Support

If you can't find the help you need in our support material, please use the "Send us an email" button on the support page to email a support request. Alternatively, click on the "Find your local support team" button on the support page and call your nearest Blackmagic Design support office.

Checking the Software Version Currently Installed

To check which version of Blackmagic Camera Utility software is installed on your computer, open the About Blackmagic Camera Utility window.

- On Mac OS X, open Blackmagic Camera Utility from the Applications folder. Select About Blackmagic Camera Utility from the application menu to reveal the version number.
- On Windows, open Blackmagic Camera Utility from your Start menu or Start Screen. Click on the Help menu and select About Blackmagic Camera Utility to reveal the version number.

How to Get the Latest Software Updates

After checking the version of Blackmagic Camera Utility software installed on your computer, please visit

the Blackmagic Design support center at www.blackmagicdesign.com/support to check for the latest updates. While it is usually a good idea to run the latest updates, it is wise to avoid updating any software if you are in the middle of an important project.

Warranty

Limited Warranty

Blackmagic Design warrants that this product will be free from defects in materials and workmanship for a period of 12 months from the date of purchase. If a product proves to be defective during this warranty period, Blackmagic Design, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, you the Customer, must notify Blackmagic Design of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. The Customer shall be responsible for packaging and shipping the defective product to a designated service center nominated by Blackmagic Design, with shipping charges pre paid. Customer shall be responsible for paying all shipping charges, insurance, duties, taxes, and any other charges for products returned to us for any reason.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Blackmagic Design shall not be obliged under this warranty: a) to repair damage resulting from attempts by personnel other than Blackmagic Design representatives to install, repair or service the product, b) to repair damage resulting from improper use or connection to incompatible equipment, c) to repair any damage or malfunction caused by the use of non Blackmagic Design parts or supplies, or d) to service a product that has been modified or integrated with other products when the effect of such a modification or integration increases the time or difficulty of servicing the product.

Exposing URSA Viewfinder to direct sunlight could damage the viewfinder display as the viewfinder optics act as a magnifying glass. Image retention or burn-in could happen on OLED panels when static or high contrast images, such as frame guides, are displayed on the panels for extended periods. To avoid this, ensure the IR sensor for face detection is not covered deliberately and disconnect the viewfinder when not in use for prolonged periods. Image retention is not covered by this product warranty.

THIS WARRANTY IS GIVEN BY BLACKMAGIC DESIGN IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. BLACKMAGIC DESIGN AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BLACKMAGIC DESIGN'S RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS DURING THE WARRANTY PERIOD IS THE WHOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER. BLACKMAGIC DESIGN WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER BLACKMAGIC DESIGN OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES. BLACKMAGIC DESIGN IS NOT LIABLE FOR ANY ILLEGAL USE OF EQUIPMENT BY CUSTOMER. BLACKMAGIC IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM USE OF THIS PRODUCT. USER OPERATES THIS PRODUCT AT OWN RISK.

© Copyright 2016 Blackmagic Design. All rights reserved. 'Blackmagic Design', 'URSA', 'DeckLink', 'HDLink', 'Workgroup Videohub', 'Multibridge Pro', 'Multibridge Extreme', 'Intensity' and 'Leading the creative video revolution' are registered trademarks in the US and other countries. All other company and product names may be trademarks of the respective companies with which they are associated.